

SEAL DRIVER KIT

CAUTION! TO PREVENT INJURY FROM TOOL BREAKAGE:

Do not use to seat Bearing Races.

Only use to seat oil and lube seals.

1. Remove Bolt from Driver Handle.
2. Install Washer.
3. Install appropriate size Adapter against Washer.
4. Install Bolt.
5. Lubricate seal as necessary and place seal inside its housing.
6. Strike end of Driver Handle, using light to moderate force, with a non-hardened tool until seal is seated.

