

HAND RIVETER



Model 38353

INSTRUCTION MANUAL

Safety Warnings and Precautions:

- 1. KEEP CHILDREN AWAY FROM PRODUCT USAGE AREA.** Do not allow children to handle this product.
- Always wear ANSI approved safety goggles when working with hand tools.
- 3. USE THE RIGHT PRODUCT FOR THE RIGHT JOB.** There are certain applications for which this product was designed. Do not use this product for a purpose for which it was not intended.
- 4. NEVER POINT THE LOADED HAND RIVETER AT A PERSON OR ANIMAL.**

UNPACKING

When unpacking, check to make sure all parts are included (see below). If any parts are missing, please call Harbor Freight Tools at the number shown on the bottom of this manual as soon as possible.

Kit includes: One Hand Riveter. Four sizes of rivet holders. One bag of each of four sizes of rivets: 2.4 mm 3/32", 3.2 mm 1/8", 4.0 mm 5/32", 4.8 mm 3/16". One Wrench.

INSTRUCTIONS:

To change the Rivet Holder size use the Wrench located in the lower handle. Unscrew the Rivet Holder using the Wrench and insert the desired Rivet Holder that is located on the handle and tighten with wrench.

See page 2 for diagrams.

Diagram (A): Drill hole the size of the rivet to be used.

Diagram (B): Place rivet head side down in hole that is same size.

Diagram (C): Open the Riveter handles as wide as possible. Slide the shaft of the rivet into the Rivet Holder.

Diagram (D): Squeeze the Riveter handles together; this will break the rivet shaft.

Diagram (E): Open the Riveter handles as wide as possible; this will enable the rivet shaft to disengage. When not in use, lock the Riveter handles in place with the wire lock, and store in a safe, dry place away from children.

Visit our website at: <http://www.harborfreight.com>



**Read this material before using this product.
Failure to do so can result in serious injury.
SAVE THIS MANUAL.**

Copyright© 2000 by Harbor Freight Tools®. All rights reserved. No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

For technical questions or replacement parts, please call 1-800-444-3353.

Diagram A

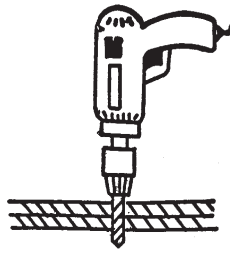


Diagram B

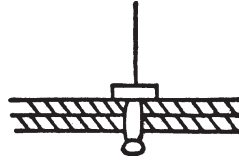


Diagram C

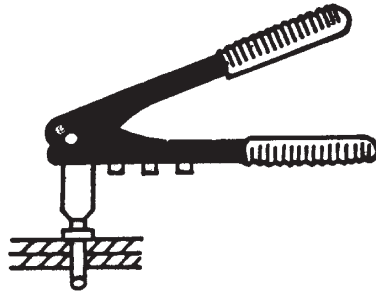


Diagram D


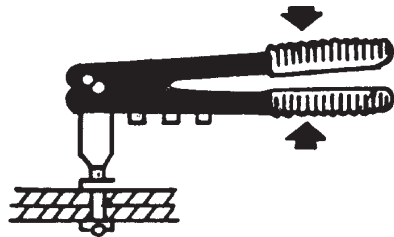


Diagram E

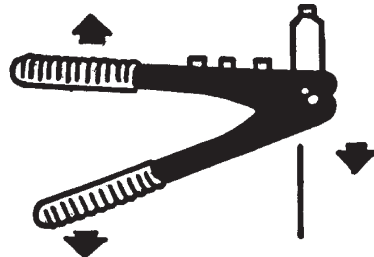

INVOICE NO. _____ PURCHASE DATE: _____