

IMPORTANT SAFETY INFORMATION

**WARNING:** When using product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment. Read all instructions before using this product!

1. Keep the Timer out of the reach of children.
2. Avoid having the Timer come into contact with water or other liquids.

**WARNING! READ AND UNDERSTAND ALL INSTRUCTIONS**

Failure to follow all instructions listed below may result in electric shock, fire, and/or serious injury.

**SAVE THESE INSTRUCTIONS**

ELECTRICAL SAFETY

1. Grounded products must be plugged into an outlet properly installed and grounded in accordance with all codes and ordinances. Never remove the grounding prong or modify the plug in any way. Do not use any adapter plugs. Check with a qualified electrician if you are in doubt as to whether the outlet is properly grounded. If a grounded product should electrically malfunction or break down, grounding provides a low resistance path to carry electricity away from the user.

2. **WARNING! TO PREVENT SERIOUS INJURY:** People with pacemakers should consult their physician(s) before using this product. Operation of electrical equipment in close proximity to a heart pacemaker could cause interference or failure of the pacemaker.
- Note:** Performance of this product (if powered by line voltage) may vary depending on variations in local line voltage. Extension cord usage may also affect tool performance.

The Lamp and Appliance Timer has a 3 Prong Plug

Grounding

The plug must be connected to a properly grounded outlet. If the Digital Timer should electrically malfunction or break down, grounding provides a low resistance path to carry electricity away from the user, reducing the risk of electric shock.


**Warning:** Do not exceed the maximum Amperage of 15. Exceeding the maximum amperage of 15 Amps may result in excessive heat and fire of the Digital Timer.

**Warning:** The warnings, cautions, and instructions discussed in this manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

Specifications

Rating	125 VAC / 60 Hz / 1875 W / 15 A (Tungsten and Resistive)
--------	-------------------------------------------------------------

## Controls

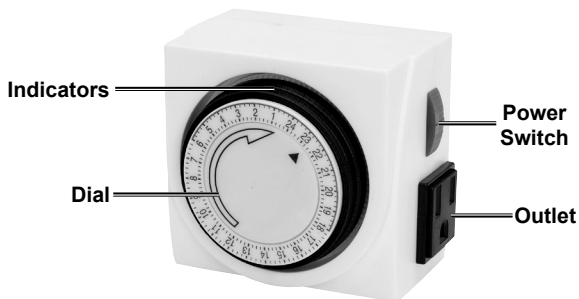

## Operation

1. Set current time by rotating Dial so that the black arrow is pointing at the correct time.

**Note:** Timer uses a 24 hour day (A.M. hours are 1 to 12, P.M. hours are 13 to 24) Example: 2 P.M. = 14.

2. Each Indicator around the Dial represents 15 minutes. Depress Indicator to supply power to Side Outlet at designated time. Example: To set Timer to go on at 8 P.M. and off at 6 A.M., all indicators between 20 and 6 must be pressed down.
3. Plug appliance(s) into Outlets on either side of Timer. Slide Power Switch up to turn Timer on. Move Power Switch down to turn Timer off.

**Record Serial Number Here:** \_\_\_\_\_

**Note:** If product has no serial number, record month and year of purchase instead.

## Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.