

Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

19a

BRAUN™

RECHARGEABLE LED WORK LIGHT/BATTERY BANK



Visit our website at: <http://www.harborfreight.com>
Email our technical support at: productsupport@harborfreight.com

56163

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-888-866-5797 as soon as possible.

Copyright© 2018 by Harbor Freight Tools®. All rights reserved.
No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

⚠WARNING

Read this material before using this product.
Failure to do so can result in serious injury.
SAVE THIS MANUAL.

Specifications

Input Rating	5 VDC / 1A
Battery	Li-ion

Battery Rating	3.7V / 4400mAh
Charge Time	Approx. 4 hours

IMPORTANT SAFETY INFORMATION

⚠ WARNING

To prevent serious injury, FIRE, and EXPLOSION:

1. Keep dry.
2. Only use included charging adaptors. Other adaptors may damage tool or cause fire.
3. Do not submerge Light.
4. Do not operate in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
5. People with pacemakers should consult their physician(s) before use. Electromagnetic fields in close proximity to heart pacemaker could cause pacemaker interference or pacemaker failure.
6. Not a toy. Keep out of reach of children.
7. Contains Li-Ion battery. Battery must be recycled or disposed of properly. Do not open, crush, heat above 140° F or incinerate.

Charging Instructions



Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this document including all text under subheadings therein before set up or use of this product.

CAUTION! Do not leave Work Light/Battery Bank unattended while charging. Charging should be done by adults only.

WARNING! Charge on a non-flammable surface in a well-ventilated area. Do not use the Work Light while it is being charged.

NOTE: Before using the Work Light/Battery Bank for the first time, fully charge the Battery.

1. Open the Charging Port Cover on the back of the Work Light and plug the micro USB connector on the supplied USB Cable into the Charging Input Port. Plug the other end of the cable into the USB port of a computer or any other USB power source to begin charging.

2. The red (25%), yellow (50%), and two green (75%–100%) battery indicator lights will flash while charging is in progress indicating charge level. When all four indicator lights remain lit, the unit is fully charged.
3. Time required to fully charge unit is approximately 4 hours. When charging is complete, disconnect the USB cable from the Work Light/Battery Bank and power source. Close the Charging Port Cover.

NOTICE: Do not leave the Battery in a discharged state. Charge the Battery every 3 months if the Work Light/Battery Bank is not in use. This will keep the Battery from wearing down and add to its life. Do not charge the Work Light at temperatures below 40° F.

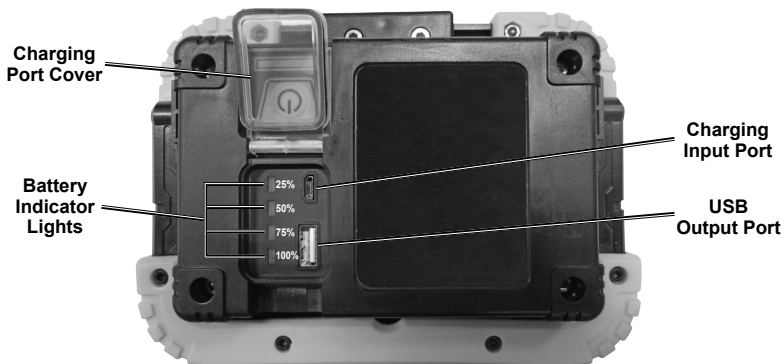


Figure A

Operation Instructions



Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this document including all text under subheadings therein before set up or use of this product.

NOTE: Before using Work Light/Battery Bank for the first time, fully charge the Battery.

1. To adjust angle of Work Light, pull on the Handle and set to one of five detent positions.

2. Press Power Button on back to select from five operating modes: High, Low, SOS signal, Flashing, and OFF.
3. When finished using the Work Light, store indoors away from children.

Charging USB Devices

1. Verify Work Light/Battery Bank is fully charged and recharge as needed. Refer to *Charging Instructions* on page 2.
2. Open the Charging Port Cover and plug the USB cable from the device to be charged into the USB Output Port. Refer to Figure A.
3. Plug the other end of the USB Cable into the device to begin charging. Refer to Figure B.

Note: During device charging the battery indicator lights will display the remaining power level in the Work Light/Battery Bank.

4. When charging is complete, disconnect the USB Cable from the device and the Work Light.
5. Recharge the Work Light/Battery Bank.



Figure B: Charging Mobile Device (not included) with Work Light/Battery Bank

Battery Removal

NOTE: Contains Li-Ion battery. Battery must be recycled or disposed of properly. Do not open, crush, heat above 140° F or incinerate.

1. Unplug USB Cable from Work Light (if connected).
2. Remove four screws from back of Work Light, then remove cover.
3. Disconnect Battery wires from circuit board.
4. Remove Battery.

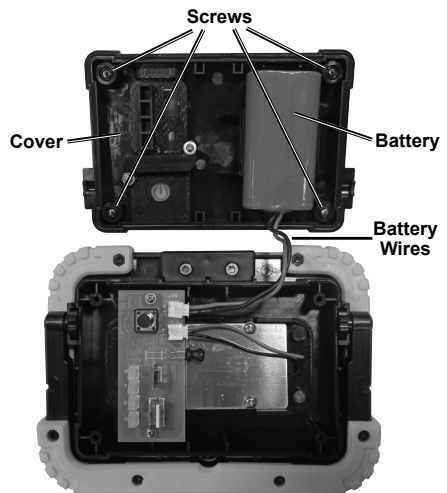


Figure C: Work Light open for Battery removal

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

FCC Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Record Product's Serial Number Here: _____

Note: If product has no serial number, record month and year of purchase instead.

Note: Replacement parts are not available for this item.

BRAUN™

26541 Agoura Road • Calabasas, CA 91302 • 1-888-866-5797