Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual near the assembly diagram (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

23g



1917C-R





For Best Results, Use 3.0 Amp Hour Battery (Sold Separately)

20V CORDLESS **SPOTLIGHT**

Visit our website at: http://www.harborfreight.com Email our technical support at: productsupport@harborfreight.com

56526

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-888-866-5797 as soon as possible.

Copyright[©] 2023 by Harbor Freight Tools[©]. All rights reserved.

No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools.

Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein.

Tools required for assembly and service may not be included.

AWARNING

Read this material before using this product. Failure to do so can result in serious injury. SAVE THIS MANUAL

WARNING SYMBOLS AND DEFINITIONS		
A	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.	
▲ DANGER	Indicates a hazardous situation which, if not avoided, will result in death or serious injury.	
AWARNING	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.	
ACAUTION	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.	
NOTICE CAUTION	Addresses practices not related to personal injury.	

IMPORTANT SAFETY INSTRUCTIONS

AWARNING

Read all safety warnings and all instructions.

Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

Flashlight Safety Warnings

WARNING - When using flashlights or lanterns, additional precautions should always be followed, including the following:

- To reduce the risk of injury, close supervision is necessary when a product is used near children.
- 2. Do not use in the rain.
- To reduce the risk of electrical shock, do not put Light in water or other liquid. Do not place or store product where it can fall or be pulled into a tub or sink.
- To reduce the risk of injury, do not stare at operating lamp. Serious eye injury could occur.
- Maintain labels and nameplates on the tool.
 These carry important safety information.
 If unreadable or missing, contact
 Harbor Freight Tools for a replacement.
- Avoid unintentional starting.
 Prepare to begin work before turning on the tool.
- Do not leave the tool unattended when the Battery Pack is connected. Turn off the tool, and remove the Battery Pack before leaving.



The battery Charger gets hot during use. The Charger's heat can build up to unsafe levels and create a fire hazard if it does not receive adequate ventilation,

due to an electrical fault, or if it is used in a hot environment.

Do not place the Charger on a flammable surface.
Do not obstruct any vents on the Charger.
Especially avoid placing the Charger on carpets

and rugs; they are not only flammable, but they also obstruct vents under the Charger.

Place the Charger on a stable, solid, nonflammable surface (such as a stable metal workbench or concrete floor) at least 1 foot away from all

flammable objects, such as drapes or walls. Keep a fire extinguisher and a smoke detector in the area. Frequently monitor the Charger and Battery Pack while charging.

 People with pacemakers should consult their physician(s) before use. Electromagnetic fields in close proximity to heart pacemaker could cause pacemaker interference or pacemaker failure. The warnings, precautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur.

It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

Lithium Battery Safety Warnings



LITHIUM BATTERIES STORE A LARGE AMOUNT OF ENERGY AND WILL VENT FIRE OR EXPLODE IF MISTREATED:



- Keep Battery Pack dry.
- 2. DO NOT DO ANY OF THE FOLLOWING TO THE BATTERY PACK:
 - a. Open,
 - b. Drop,
 - c. Short-circuit,

- d. Puncture,
- e. Incinerate, or
- f. Expose to temperatures greater than 140°F.
- 3. Charge Battery Pack only according to its Charger's instructions.
- 4. Inspect Battery Pack before every use; do not use or charge if damaged.



SAVE THESE INSTRUCTIONS.

Grounding

AWARNING



TO PREVENT ELECTRIC SHOCK AND DEATH FROM INCORRECT GROUNDING: Check with a qualified electrician if you are in doubt as to whether the outlet is properly grounded. Do not modify the power cord plug provided with the charger. Do not use the charger if the power cord or plug is damaged. If damaged, have it repaired by a service facility

before use. If the plug will not fit the outlet, have a proper outlet installed by a qualified electrician.

Extension Cords

Note: Extension cords must not be used with this item's Charger.

Symbology

	Double Insulated
V	Volts
	Direct Current
Α	Amperes
n ₀ xxxx/min.	No Load Revolutions per Minute (RPM)
	WARNING marking concerning Risk of Eye Injury. Wear ANSI-approved safety goggles with side shields.

(3)	Read the manual before set-up and/or use.
	WARNING marking concerning Risk of Fire. Do not cover Charger ventilation ducts. Charge on fireproof surface only.
4	WARNING marking concerning Risk of Electric Shock. Properly connect Charger's power cord to appropriate outlet.
	WARNING marking concerning Risk of Explosion. Do not puncture, short, or open battery packs and do not charge damaged battery packs.

Specifications

I Rattory Typo	Bauer 20V Li-ion (57007, sold separately)
I Charger Lyne	Bauer 20V Li-lon (57006, sold separately)

Setup - Before Use:

Functions



Operating Instructions



Read the <u>ENTIRE</u> IMPORTANT SAFETY INSTRUCTIONS section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

Charging

Charge battery after unpacking and before using this tool. Follow instructions included with the Charger (sold separately).

Operating Instructions

- Insert fully charged Battery Pack into base of Flashlight, making sure it clicks into place securely.
- Press Trigger once for "high" light output. Press again for "low" light output. Press a third time to turn light off.
- 3. Remove its Battery Pack after use. Clean, then store the tool indoors out of children's reach.



User-Maintenance Instructions



Procedures not specifically explained in this manual must be performed only by a qualified technician.

AWARNING TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION:
Make sure that the Trigger is in the off-position and remove its Battery Pack before performing any procedure in this section.

Cleaning, Maintenance, and Lubrication

- BEFORE EACH USE, inspect the general condition of the tool. Check for:
 - · leaking, swollen, or cracked battery pack,
 - · loose hardware.
 - · misalignment or binding of moving parts.
 - · cracked or broken parts, and
 - any other condition that may affect its safe operation.

- AFTER USE, wipe external surfaces of the tool with clean cloth.
- Li-Ion BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY.
 Do not short, incinerate or open battery.
- Disconnect battery pack and store battery pack, charger, and tool in dry, indoor area out of reach of children and away from metal objects (i.e., paperclips, coins) to prevent shorting.

Troubleshooting

Problem	Possible Causes	Likely Solutions
Flashlight will not turn on.	Battery Pack not properly connected.	Remove Battery Pack, make sure there are no obstructions, reinsert the Battery Pack according to its shape (it should only fit one way), and press firmly until the Battery Pack locks in place.
	Battery Pack not properly charged.	Make sure Charger is connected and operating properly. Give enough time for Battery Pack to recharge properly.
	3. Battery Pack burnt-out.	Dispose of old Battery Pack properly or recycle. Replace Battery Pack.



Follow all safety precautions whenever diagnosing or servicing the tool. Disconnect Battery Pack and Charger power supply before service.


PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF A OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

Parts Lists and Diagram

Part	Description	Qty
1	Lens	1
2	Reflector	1
3	Isolating Washer	1
4	Screw	2
5	LED	1
6	Heat Sink	1
7	Trigger	1
8	Trigger Holder	1
9	PCBA	1

Part	Description	Qty
10	Switch PCBA	1
11	Contact Plate Holder	1
12	Fixed Holder (L)	1
13	Housing (L)	1
14	Fixed Holder (R)	1
15	Housing (R)	1
16	Screw	17
17	M4 Nut	1

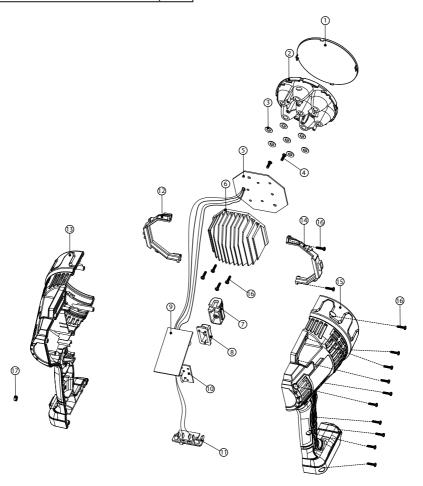

Record Product's Serial Number Here:_

Note: If product has no serial number, record month and year of purchase instead.

Note: Some parts are listed and shown for illustration purposes only, and are not available individually as replacement parts. Specify UPC 792363565264 when ordering parts.

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

