Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual near the assembly diagram (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

24a

luminar **EVERYDAY**

56833

WARM WHITE COPPER WIRE LIGHTS WITH REMOTE



Visit our website at: http://www.harborfreight.com Email our technical support at: productsupport@harborfreight.com

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-888-866-5797 as soon as possible.

Copyright[®] 2023 by Harbor Freight Tools[®]. All rights reserved. No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product

described herein. Tools required for assembly and service may not be included

AWARNING

Read this material before using this product. Failure to do so can result in serious injury. SAVE THIS MANUAL.

WARNING SYMBOLS AND DEFINITIONS		
A	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.	
▲ DANGER	Indicates a hazardous situation which, if not avoided, will result in death or serious injury.	
▲ WARNING	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.	
ACAUTION	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.	
NOTICE	Addresses practices not related to personal injury.	

IMPORTANT SAFETY INFORMATION

AWARNING

Read all safety warnings and instructions.

Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. Save all warnings and instructions for future reference.

- Choking hazard! Keep out of reach of children.
- Do not touch, operate, or install fixture while in contact with water. Not intended for illumination of aquariums. Do not mount over sinks or stoves.
- Keep installation area clean. Cluttered areas invite accidents.
- Do not overreach. Keep proper footing and balance at all times. If a ladder is to be used during installation, it should be supported by an assistant.
- 5. Use as intended only.
- Maintain labels and nameplates. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.

- The warnings, precautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.
- Keep batteries out of reach of children. Keep batteries in original package until ready to use. Discard used batteries immediately. Do not allow children to play with devices containing batteries.
- Do not install old and new batteries together. Do not install alkaline, carbon-zinc or rechargeable batteries together. Position batteries in proper polarity. Do not use swollen or leaking batteries.

Button/Coin Battery Safety



This symbol means: INGESTION HAZARD: This product contains a button cell or coin battery.

- Remove and immediately recycle or dispose of used batteries according to local regulations. and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- 2. Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Non-rechargeable batteries are not to be recharged.
- 5. Do not force discharge, recharge, disassemble, heat above 140°F or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly. according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline. carbon-zinc, or rechargeable batteries.
- 8. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- 9. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

INGESTION HAZARD: This product contains



KEEP new and used batteries OUT OF REACH OF CHILDREN

Seek immediate medical attention if a battery is suspected

to be swallowed or inserted inside any part of the body

DEATH or serious injury can occur if ingested

a button cell or coin battery.

A swallowed button cell or coin battery can cause

Internal Chemical Burns in as little as 2 hours

Specifications

String Light Length	20 ft. 2 in.
Battery (Lights)	3 x AA (sold separately)
Battery (Remote Control)	3V CR2025 (included)

Setup



Read the <u>ENTIRE</u> IMPORTANT SAFETY INFORMATION section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

Installation

- Select the location for the String Lights.
- Carefully unwind the String Lights and place in the desired location. Avoid any tripping hazard.
- Install batteries into the Battery Box according to proper polarity. Close both locks on box.
- Place the Battery Box in a secure location being sure its power cord is not strained. The Battery Box may be hung by its handle, if desired.

Operation

- 1. Pull the battery tab out of the Remote Control.
- Point the top of the Remote Control at the String Lights and turn lights on by pressing the ON button.
- Note: The Remote Control must have a direct line of sight to the Lights.
- Use the Remote Control to turn the String Lights on/off and select mode changes.
- Turn off the String Lights by pressing the OFF button.

Remote Control



Button	Selection
ON	Turns lights On
TIMER	When enabled, lights
	6hr on and 18hr off
OFF	Turns lights Off
1	Combination
2	Waves
3	Sequential
4	Slow Glow
5	Chasing Flash
6	Slow Fade
7	Twinkle Flash
8	Steady on
-	Decreases light intensity
+	Increases light intensity
	ON TIMER OFF 1 2 3 4 5 6 7

Battery Box

In addition to the Remote Control, the **Battery Box** may be used to control the Lights. Press the Control Button to toggle the lights on and off, and cycle through the modes.



Maintenance and Servicing



Procedures not specifically explained in this manual must be performed only by a qualified technician.

AWARNING

TO PREVENT SERIOUS INJURY FROM TOOL FAILURE:

Do not use damaged equipment. If abnormal noise or vibration occurs, have the problem corrected before further use.

Cleaning, Maintenance, and Lubrication

- BEFORE EACH USE, inspect the general condition of the tool. Check for:
 - · loose hardware,
 - · misalignment or binding of parts.
 - · cracked or broken parts, and
 - any other condition that may affect its safe operation.

 PERIODICALLY, clean Lights, Battery Box, and Remote Control using a mild, nonabrasive cleaner and clean soft cloth.

Remote Control Battery Replacement

- Remove screw(s) and open battery compartment.
- 2. Remove battery and dispose of properly.
- Insert new battery in correct polarity, close compartment and replace screw(s).

Troubleshooting

Problem	Possible Causes	Likely Solutions		
Lights won't turn on.	Battery tab not removed.	Check that the battery tab is pulled from the Remote Control.		
	Battery Box batteries improperly installed or old.	Properly install batteries or replace.		
Follow all safety precautions whenever diagnosing or servicing the tool.				



Record Product's Serial Number Here:	

Note: If product has no serial number, record month and year of purchase instead.

Note: Some parts are listed and shown for illustration purposes only, and are not available individually as replacement parts. Specify UPC 193175507693 when ordering parts.

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to retund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

