

Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual near the assembly diagram (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

21g

UNION[™]
SAFE COMPANY

24 GUN FIRE RESISTANT COMBINATION SAFE



Battery included

To ensure security of your safe, Union Safe Company does NOT provide replacement keys. Made by Safewell for Union Safe Co.

Visit our website at: <http://www.harborfreight.com>
Email our technical support at: productsupport@harborfreight.com

57039

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-888-866-5797 as soon as possible.

Copyright© 2020 by Harbor Freight Tools®. All rights reserved.

No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

⚠ WARNING

Read this material before using this product. Failure to do so can result in serious injury. **SAVE THIS MANUAL.**

Specifications

External Dimensions	22-1/8" L x 29" W x 55-1/4" H
Battery	9V Alkaline
Weight	347.7 lb
Shelf Weight Capacity	110 lb
Fire Rating	1400°F for 30 minutes

IMPORTANT SAFETY INFORMATION

Installation Precautions

1. Verify that installation surface has no hidden utility lines before drilling or driving screws.
2. Wear ANSI-approved safety goggles during installation.
3. Mount securely before use.
4. Install only according to these instructions. Improper installation can create hazards.
5. Keep installation area clean and well lit.
6. Keep bystanders out of the area during installation.
7. Do not install when tired or when under the influence of alcohol, drugs or medication.
8. At least two people are needed to move this product.
9. Place the Safe on correct surface. Only use this Safe on a stable, level, clean and dry surface that is capable of sustaining the load.

Use Precautions

1. **Keep closed and locked whenever unattended. RISK OF CHILD ENTRAPMENT AND SUFFOCATION. Check inside before closing. Do not allow children to play with or near safe. Keep keys and codes away from children.**
2. Keep clear of door when closing.
3. Use only 9V battery. Position in proper polarity. Do not use swollen or leaking battery.
4. Use as intended only.
5. Inspect before every use; do not use if parts are loose or damaged.
6. Maintain product labels and nameplates. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.
7. Do not store Keys inside of the Safe. **Place your emergency keys in a location outside of the safe making sure they are in a secure location that you can find.**
8. The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

NOTE: Harbor Freight Tools is not responsible for the loss of any property stored within this safe due to theft, fire, or any other circumstance.

Installation Instructions




Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this document including all text under subheadings therein before set up or use of this product.


WARNING! TO PREVENT SERIOUS INJURY:

Verify that installation surface(s) have no hidden utility lines before drilling or driving fasteners.

1. Only install Safe on a stable, level, clean and dry floor capable of supporting the weight of Safe and its contents.
2. Remove the two steel plates from the bottom of the Safe by laying the Safe down and removing two steel bolts from each steel plate.

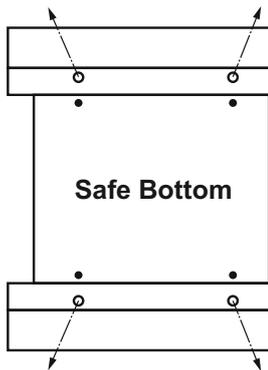


 3. Locate two mounting holes on bottom of Safe.
 - a. Remove Safe's interior floor liner.
 - b. Remove the two black caps inside the floor fire insulation that cover the holes. Save caps.



4. Using the Safe as a template, mark locations of mounting holes on floor.

5. Secure Safe with anchors appropriate for the mounting surface and are rated to support the weight of the Safe and its contents.
6. Mount to floor with two Floor Anchors (included):
 - a. Using a masonry bit (sold separately) the same diameter as the largest part of the floor Anchor (14mm), drill two holes in marked locations, 1/4" deeper than the length of the Anchor's sleeve.
 - b. Using a hammer (sold separately), gently tap floor Anchors into holes with threads facing up.
 - c. Place Safe over exposed ends of the two floor Anchors, then secure with two M10 x 70 Lag Screws and Gasket Washers (included).

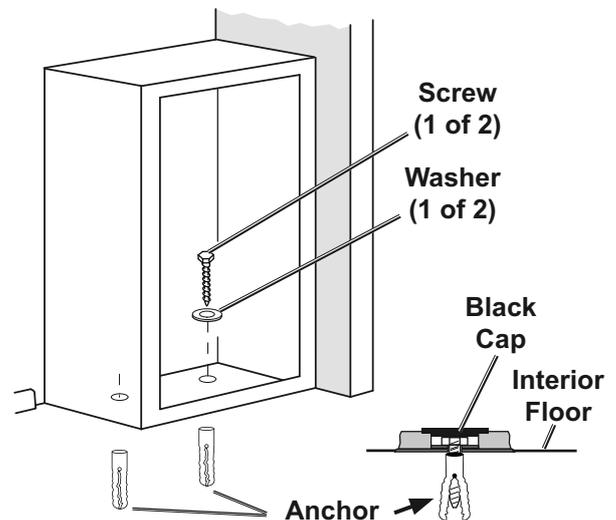


7. Replace saved black caps and Safe's interior floor liner.

Installing the Battery

1. To access the battery, remove the Keypad cover from the front of the Safe by turning it counterclockwise.
3. Install battery and position it in proper polarity. Do not use a swollen or leaking battery.



2. Remove Keypad Cover and hold the battery connector while removing/installing the battery. **Do not pull the wires.**

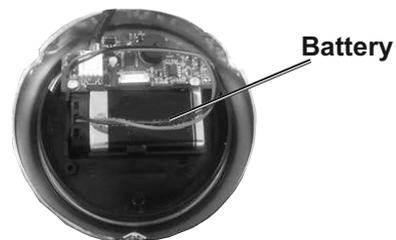

4. Replace Keypad Cover by screwing it back in place. **Leave door open until Entry Code is set.**

Note: When the battery needs to be replaced, a red light will illuminate when any button is pressed on the Keypad. Dispose of used batteries according to local regulations.

Shelf Installation


Place clips into the shelf mounting rails at the desired location and then set the shelves in place. Use four clips per each shelf.

Operation



Read the entire Important Safety Information section at the beginning of this document including all text under subheadings therein before set up or use of this product.

Functions

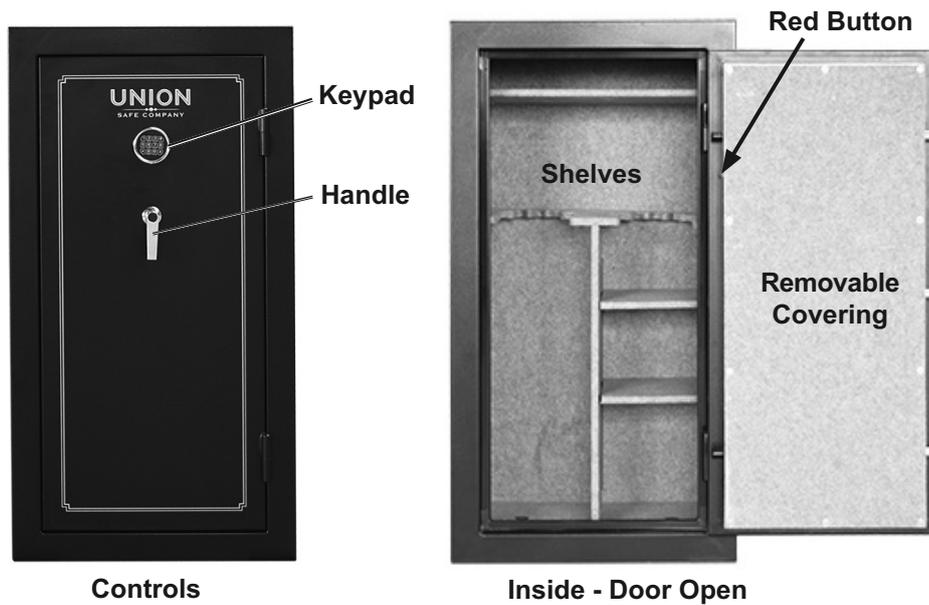

Note: Set up and test Safe before Installation.

Opening with Key

Note: Do not store Keys inside Safe. Opening with Key may be necessary when replacing battery or if Entry Code is forgotten.

Store Keys in secure place outside of Safe.


1. From the front of the Safe, remove Keypad Cover by turning it counterclockwise.



2. Allow the lock to hang from by its connecting cable while unlocking the Safe.

3. Insert Safe Key into Key hole and turn 1/4 turn clockwise to unlock the Safe. Turn handle clockwise and open the door.

Key Hole

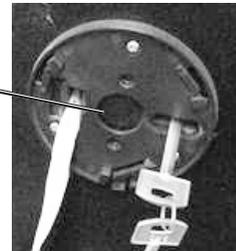

4. Keep door open until a new entry code is entered. Before entering the new code, remove the Key and replace the Keypad Cover.

Opening with Entry Code

Note: The Safe comes preset with a code of 1 - 5 - 9 - #

1. When opening the Safe first time, install battery and press the following numbers and symbol on the Keypad in this order:
1 - 5 - 9 - #
2. After entering the code, turn the handle clockwise to open the door. Do this within 5 seconds of entering the code or the locking mechanism will reactivate and you'll need to re-enter the code.

Note: Keypad will disable for 20 seconds if Entry Code is entered incorrectly three times in a row.

If the Entry Code is entered incorrectly three more times the Keypad will disable for 5 minutes.

IMPORTANT! After opening the door, change the Entry Code to insure proper security.

Changing the Entry Code

Note: Leave door open while setting Entry Code. Write down Entry Code and store in secure place outside of Safe

1. Set your own Entry Code after opening the door. Locate a small Red Button on the inside of the door near the hinge.
2. Press the Red Button and release it. Two beeps will sound and a yellow light will illuminate on the Keypad. The yellow light will stay on for the period of time you have to enter your new code.
3. Enter your new code which must be 3 to 8 digits long.

4. Confirm your new Entry Code by pressing the * key on the Keypad.

- The Safe will beep twice and the yellow light will flash twice if the Code has been accepted.
- The yellow light will flash three times and the Safe will beep if the Code has not been accepted.

Note: To turn off the "beep" sound of the Keypad, enter * . To turn it back on, enter *.

5. Before closing the door, try the new Entry Code to be sure the handle releases so it can be turned and the side door bolts retract.

IMPORTANT: When opening the Safe in the future, enter your Entry Code followed by #.

Closing

WARNING

Keep closed and locked whenever unattended.
Check inside before closing.
Do not allow children to play with or near safe.
Keep keys and codes away from children.

Close Door and turn Handle counterclockwise until it stops. If the handle is not turned until it stops, the door is not locked.

Note: The lock is deactivated for a few seconds after entering a new Entry Code. Wait 6 seconds before trying to lock the Safe after entering a new Entry Code.

Maintenance



Procedures not specifically explained in this manual must be performed only by a qualified technician.

1. Protect the Safe from moist or wet conditions. Moisture may cause electronic damage in the key pad or corrosion of the steel.
2. Occasionally wipe the safe and key pad clean with a soft dry cloth or brush. Occasionally apply a small amount of light oil or lock lubricant to the mechanical lock mechanism. Be careful not to get any oil or other liquids on or near the electronic mechanism.
3. Occasionally wipe the safe and Key Pad clean with a soft dry cloth or brush.

Record Serial Number Here: _____

Note: If product has no serial number, record month and year of purchase instead.

Note: Replacement parts are not available for this item. Reference UPC 792363570398.

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.



26541 Agoura Road • Calabasas, CA 91302 • 1-888-866-5797