Specifications

Shelf Weight Capacity150 lb per shelf (evenly distributed)Total Weight Capacity600 lb total capacity for four
shelves (evenly distributed)

<u>WARNING!</u> TO PREVENT SERIOUS INJURY FROM PRODUCT FAILURE DUE TO OVERLOADING: Do not place any objects or load on top Shelf.

IMPORTANT SAFETY INFORMATION

Assembly Precautions

- 1. Assemble only according to these instructions. Improper assembly can create hazards.
- 2. Wear ANSI-approved safety goggles and heavyduty work gloves during assembly.
- 3. Keep assembly area clean and well lit.

Use Precautions

- 1. This product is not a toy. Do not allow children to play with or near this item.
- 2. Use as intended only.
- 3. Inspect before every use; do not use if parts are loose or damaged.
- 4. Use only on a flat level surface.
- 5. Do not climb or stand on.
- 6. Mount to Wall Stud to reduce risk of tipping and allow maximum capacity.
- 7. The warnings, precautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

- 4. Keep bystanders out of the area during assembly.
- Do not assemble when tired or when under the influence of alcohol, drugs or medication.
- 6. Weight capacity and other product capabilities apply to properly and completely assembled product only.
- Do not exceed 150 lb weight capacity of each Shelf. Be aware of dynamic loading! Suddenly dropping load on Shelf may briefly create excess load causing product failure.
 - a. Distribute weight evenly from bottom up.
 - b. Store heaviest items on lowest Shelves.
 - c. Do not use top level as a Shelf.
 - d. For every 5 degrees above 95°F, weight capacity decreases by 10%.
- 9. Maintain product labels and nameplates. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.



Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Copyright[©] 2022 by Harbor Freight Tools[®]. All rights reserved. No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.



26677 Agoura Road • Calabasas, CA 91302 • 1-888-866-5797

Assembly Instructions



Read the <u>ENTIRE</u> IMPORTANT SAFETY INFORMATION section at the beginning of this document including all text under subheadings therein before set up or use of this product.

- 1. Lay out all pieces and assemble Storage Rack from bottom up.
 - a. Insert one Foot (4) into each of the four corners of the bottom Shelf (1):

Place the Shelf on the floor with bottom facing up. Insert Foot by placing a block of wood (not provided) over it and using a mallet (sold separately) to tap the Foot until seated all the way in. Repeat for each Foot.



Figure A:

b. Insert one Pole (2) into each of the four corners of a Shelf (1):

Place the Shelf top on the floor with bottom facing up. Insert Pole into corner by placing a block of wood over the end of the Pole and using a mallet to tap it until seated all the way in. Repeat for each corner.



Figure B:

c. Connect Shelf assemblies together until the desired height is achieved:

Place the bottom Shelf on the floor with top facing up. Place a Shelf with Poles on top and insert each of its Poles into the four corners of the Shelf below it. Place a block of wood over the corner of the Shelf and use a mallet to tap each Pole until seated all the way in. Repeat for each corner.

Repeat for the next Shelf. Each Shelf must have each Pole tapped all the way in before adding another Shelf.



Figure C:

- 2. Check that each Shelf is secure and level.
- 3. Insert one Top Cap (3) into each of the four corners at the top of the Storage Rack.



<u>WARNING!</u> TO PREVENT SERIOUS INJURY: Mount to wall to reduce risk of tipping and allow maximum capacity.

- 4. Place Storage Rack on a hard, level, flat, surface capable of supporting the weight of the product and its contents.
- 5. Push the base of the Storage Rack all the way against the wall.
- 6. Attach the top of the two columns to the wall using the two Mount Brackets (5).
 - a. Use a Wall Mount Bracket (5) as a template to mark hole locations.



<u>WARNING!</u> TO PREVENT SERIOUS INJURY FROM ELECRIC SHOCK: Verify the installation surface has no hidden utility lines before drilling or driving screws.

- b. Drill a pilot hole for the screw listed below into the stud.
- c. Attach Storage Rack to the wall using the two Wall Mount Brackets and hardware. Attach each Wall Mount Bracket with:
 - One 0.185 inch diameter screw into a stud, and
 - One **0.185 inch diameter screw using an anchor** through drywall. (Hardware sold separately).
- 7. Check that the Storage Rack is secure and flush against the wall, with all four feet flat on the floor.
- 8. Remove the backing paper and apply the warning label firmly to a flat surface on the shelf closest to eye level.
- Do not exceed 150 lb weight capacity of each Shelf. Be aware of dynamic loading! Suddenly dropping load on Shelf may briefly create excess load causing product failure.
 - a. Distribute weight evenly from bottom up.
 - b. Store heaviest items on lowest Shelves.
 - c. Do not use top level as a Shelf.
 - d. For every 5 degrees above 95°F, weight capacity decreases by 10%.

WARNING! TO PREVENT SERIOUS INJURY FROM PRODUCT FAILURE DUE TO OVERLOADING: Do not place any objects or load on top Shelf.

Record Serial Number Here:

<u>Note:</u> If product has no serial number, record month and year of purchase instead.

<u>Note:</u> Replacement parts are not available. For technical questions, please call 1-888-866-5797.