

USB RECHARGEABLE CAMPING LANTERN & BUG ZAPPER

IMPORTANT SAFETY INSTRUCTIONS



1. **NOT A TOY.** Keep out of reach of children.
2. **Grid may keep charge, even after button released.** Do not touch grid while Power Light on.
3. Use as intended only. Do not modify.
4. Do not drop. Keep dry. Inspect before every use; do not use if parts loose or damaged, or if exposed to moisture.
5. **Li-Ion BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY.** Do not short, incinerate or open battery.

SPECIFICATIONS

Battery Type	3.7V / 2000mAh rechargeable Li-ion
Charging Time	3 hours
Voltage Input	5V

OPERATING INSTRUCTIONS

1. Press Power Switch to power Lantern on. Press again for medium brightness, press a third time for maximum brightness. Press one more time to power Lantern off.
3. To charge the Lantern, plug micro-USB cable into USB charging port and plug other end into power source.

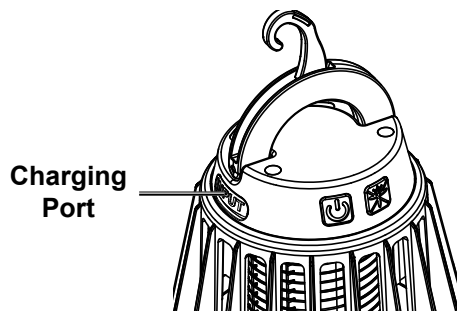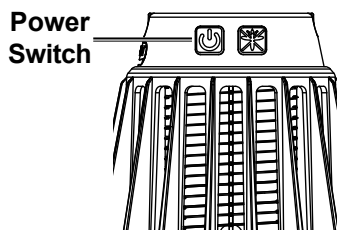

2. Press Zapper Switch to power bug zapping light on.

