

Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual near the assembly diagram (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

22e

luminar **OUTDOOR**[®]

58225

3-IN-1 LED TORCH LIGHT



Visit our website at: <http://www.harborfreight.com>
Email our technical support at: productsupport@harborfreight.com

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-888-866-5797 as soon as possible.

Copyright© 2021 by Harbor Freight Tools[®]. All rights reserved.

No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

⚠ WARNING

Read this material before using this product.
Failure to do so can result in serious injury.
SAVE THIS MANUAL.

Specifications

Bulb Type	12 pcs SMD LEDs
Battery Type	Lithium-Ion 3.7V 1500mAh, 18650

Run Time / Lumens	Candle Mode: 27 hrs / 4 lm. Low Mode: 27 hrs / 8 lm. High Mode: 23 hrs / 16 lm.
----------------------	---

Important Safety Information

- THIS IS NOT A TOY; FOR DECORATION ONLY.**
- DO NOT APPLY PRESSURE TO GLASS LENS WHEN INSTALLING.**
- ENSURE SOLAR LIGHT IS SECURELY STAKED INTO THE GROUND PRIOR TO USE; FOR INDOOR OR OUTDOOR USE.**
- LENS IS MADE OF GLASS AND CAN BREAK, USE CAUTION, WATCH FOR SHARP PIECES.**
- Assemble only according to these instructions. Improper assembly can create hazards.
- Wear ANSI-approved safety goggles during setup.
- Keep assembly area clean and well lit.
- Keep bystanders out of the area during assembly.
- Do not assemble when tired or when under the influence of drugs or medication.
- Position battery in proper polarity.
- This product is not a toy. Do not allow children to play with or near this item.
- Use as intended only.
- Inspect before every use; do not use if parts are loose or damaged, or if sharp edges are exposed. This is fragile and sharp edges may be exposed if weathered or damaged.
- Maintain product labels and nameplates. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.
- Contains Li-Ion battery. Battery must be recycled or disposed of properly. Do not open, crush, heat above 140° F or incinerate.

Setup Instructions

- Decide where you want to place the Solar Light, indoor or outdoor. Choose a location that receives full, direct sunlight a minimum of 8 hours a day. The location should not be near nighttime light sources such as porch lights or streetlights as this will cause the Solar Light to remain off.
- Confirm that the location is clear of lines, cables and conduits.
- With a rubber mallet (not included), gently tap the Stake into the ground.
- Attach Stake to connector and connect remaining pieces using plugs. Adjust height using one or two plugs. Attach lantern to base and connect to pole.
- Allow at least 24 hours charge time before first use.

Operating Instructions

Note: Solar Panel converts sunlight into electricity, recharging the battery. The amount of light the Solar Panel receives depends on placement of the Solar Light, geographic location and weather. If the weather is cloudy, panels will not receive a full charge, the Solar Lights may not achieve the full run time. They will catch up after two to three days of full sun.

1. A full 8 hours of sunlight are required to charge the Solar Panel. To charge with USB cable 4 hours are needed.
2. After the initial charge is set, confirm that the Lights are on by viewing them at night or in a dark location. If they are not lit, check that the Solar Panel has had full sunlight for 8 hours. The Solar Light will turn on at dusk. Check Power switch:
 - a. First push is candle mode.
 - b. Second push is low mode.
 - c. Third push is high mode.
 - d. Fourth push is off.

Maintenance

1. Clean regularly with a damp towel. Do not clean with solvent. Do not put too much pressure on the Solar Panel or accessories while cleaning. Dry thoroughly.
2. **BEFORE EACH USE**, inspect the general condition of the tool. Check for:
 - leaking, swollen, or cracked battery,
 - loose hardware,
 - misalignment or binding of parts,
 - cracked or broken parts, and
 - any other condition that may affect its safe operation.
3. **AFTER USE**, wipe external surfaces of the tool with clean cloth.
4. Battery is irreplaceable. Follow steps to properly dispose of battery.
 - a. Turn four screws out of the battery box on bottom of lamp.
 - b. Gently open the battery cover on the bottom of the Solar Panel housing.
 - c. Remove the old battery.
5. Contains Li-Ion battery. Battery must be recycled or disposed of properly. Do not open, crush, heat above 140° F or incinerate.

Troubleshooting

Problem	Possible Causes	Probable Solutions
Light will not turn on	<ol style="list-style-type: none"> 1. Battery not allowed time for recharging via Solar Panel. 2. Power switch is off. 3. Solar Light is set near nighttime light sources such as porch lights or street lights. 4. Solar Panel is dirty and covered with dirt or dust. 	<ol style="list-style-type: none"> 1. Check that Solar Panel has direct access to sunlight for enough hours a day. 2. Push power switch to select mode. 3. Move Solar Light or change Solar Panel position. 4. Clean Solar Panel with a soft cloth.

Record Serial Number Here: _____

Note: If product has no serial number, record month and year of purchase instead.

Note: Replacement parts are not available for this item. Reference UPC 193175434418.

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

luminar **OUTDOOR**[®]

26677 Agoura Road • Calabasas, CA 91302 • 1-888-866-5797