Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

22i



2085CR-B



HYPERMAX* LITHIUM Baler

For Maximum Performance Use 3.0 AMP HOUR Battery or Greater

20V 3.5 GALLON
WET/DRY VACUUM

Battery and Charger Sold Separately

58310

Visit our website at: http://www.harborfreight.com Email our technical support at: productsupport@harborfreight.com

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-888-866-5797 as soon as possible.

Copyright[©] 2022 by Harbor Freight Tools[®]. All rights reserved.

No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools.

Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein.

Tools required for assembly and service may not be included.

AWARNING

Read this material before using this product. Failure to do so can result in serious injury. SAVE THIS MANUAL.

Table of Contents

Safety2	Maintenance8
Specifications4	Parts List and Diagram10
Setup4	Warranty12
Operation 5	

WARNING SYMBOLS AND DEFINITIONS		
A	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.	
▲ DANGER	Indicates a hazardous situation which, if not avoided, will result in death or serious injury.	
▲ WARNING	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.	
ACAUTION	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.	
NOTICE CAUTION	Addresses practices not related to personal injury.	

Instructions Pertaining to a Risk of Fire, Electric Shock, or Injury to Persons

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

AWARNING

To reduce the risk of fire, electric shock, or injury:

- 1. Do not leave appliance when Battery Pack is connected. Remove Battery Pack when not in use and before servicing.
- 2. **Do not allow to be used as a toy.** Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged Battery Pack. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water. return it to a service center.
- 5. Do not handle appliance with wet hands.
- 6. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- 7. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- 8. Turn off all controls before removing Battery Pack.
- 9. Use extra care when cleaning on stairs.

- 10. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- 11. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- 12. Do not use without dust bag and/or filters in place.
- 13. FOR HOUSEHOLD USE ONLY.
- 14. Dry your hands and feet before touching plug or switch.
- 15. Do not continue to use the vacuum when the tank is full of liquid.
- 16. Do not use to pick up water from containers, i.e., sinks, tubs, barrels, etc.
- 17. Stay alert, watch what you are doing and use common sense when operating an appliance. Do not use an appliance while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating appliances may result in serious personal injury.

- 18. Maintain labels and nameplates on the appliance. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.
- 19. People with pacemakers should consult their physician(s) before use. Electromagnetic fields in close proximity to heart pacemaker could cause pacemaker interference or pacemaker failure.
- 20. The warnings, precautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.
- 21. Battery appliance use and care
 - a. **Prevent unintentional starting.** Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
 - b. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
 - c. Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
 - d. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
 - e. Under abusive conditions, liquid may be ejected from the battery; avoid contact.

 If contact accidentally occurs, flush with water.

 If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

- f. Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- g. Do not expose a battery pack or appliance to fire or excessive temperature.

 Exposure to fire or temperature above 140°F may cause explosion.
- h. Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- i. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- j. Do not modify or attempt to repair the appliance or the battery pack except as indicated in the instructions for use and care.



The battery Charger gets hot during use. The Charger's heat can build up to unsafe levels and create a fire hazard if it does not receive adequate

ventilation, due to an electrical fault, or if it is used in a hot environment. Do not place the Charger on a flammable surface. Do not obstruct any vents on the Charger. Especially avoid placing the Charger on carpets and rugs; they are not only flammable, but they also obstruct vents under the Charger. Place the Charger on a stable, solid, nonflammable surface (such as a stable metal workbench or concrete floor) at least 1 foot away from all flammable objects, such as drapes or walls. Keep a fire extinguisher and a smoke detector in the area. Frequently monitor the Charger and Battery Pack while charging.

Lithium Battery Safety Warnings





LITHIUM BATTERIES STORE A LARGE AMOUNT OF ENERGY AND WILL VENT FIRE OR EXPLODE IF MISTREATED:

- a. Keep Battery Pack dry.
- b. DO NOT DO ANY OF THE FOLLOWING TO THE BATTERY PACK:

- Open,
- · Drop,
- · Short-circuit,
- Puncture,
- Incinerate, or
- Expose to temperatures greater than 140°F.
- c. Charge Battery Pack only according to its Charger's instructions.
- d. Inspect Battery Pack before every use; do not use or charge if damaged. Lilon BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY.



SAVE THESE INSTRUCTIONS

Grounding

AWARNING



TO PREVENT ELECTRIC SHOCK AND DEATH FROM INCORRECT GROUNDING:

Check with a qualified electrician if you are in doubt as to whether the outlet is properly grounded. Do not modify the power cord plug provided with the charger. Do not use the charger if the power cord or plug is damaged. If damaged, have it repaired by a service facility before use. If the plug will not fit the outlet, have a proper outlet installed by a qualified electrician.

Symbology

V	Volts
	Direct Current
Α	Amperes
	WARNING marking concerning Risk of Eye Injury. Wear ANSI-approved safety goggles with side shields.
G.	Read the manual before set-up and/or use.

	WARNING marking
^	concerning Risk of Fire.
/	Do not cover Charger
767	ventilation ducts.
	Charge on fireproof surface only.
	WARNING marking concerning
A	Risk of Explosion.
	Do not puncture, short, or open
	battery packs and do not charge
	damaged battery packs.
_	WARNING marking concerning
\wedge	Risk of Electric Shock.
/1/	Properly connect Charger's power
	cord to appropriate outlet.

Specifications

Battery Type	Bauer 20V Li-Ion 64816 (sold separately)
Batttery Charger	Bauer 20V Charger 63947 (sold separately)
Tank Capacity	3.5 Gallons

Setup - Before Use:



Read the ENTIRE IMPORTANT SAFETY INFORMATION section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

AWARNING


TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION: Turn Power Switch of appliance off and remove Battery Pack before performing any procedure in this section.

Note: For additional information regarding the parts listed in the following pages, refer to the Assembly Diagram near the end of this manual.

Preparation

Remove any stored parts from the Tank before use.

Components and Controls

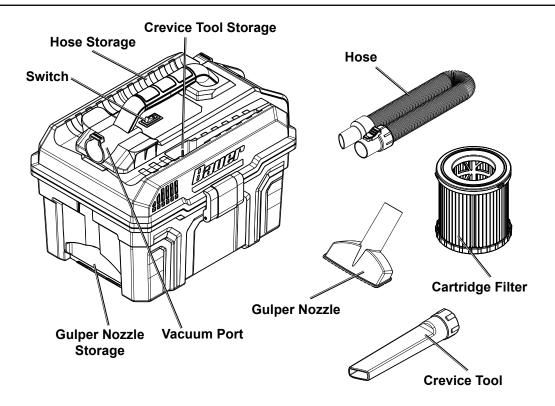

Operating Instructions




Read the <u>ENTIRE</u> IMPORTANT SAFETY INFORMATION section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

Vacuum Operation


AWARNING

TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION:
Turn the Switch off and disconnect battery pack from unit before removing the Power Head.

1. Pull Tabs outward and remove Power Head by handle. Pull up to remove it.

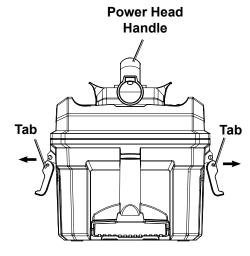

2. **For dry vacuuming:** Slide Filter completely over Filter Cage. Secure Filter by turning clockwise to tighten.

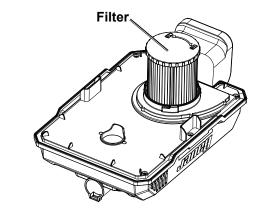


3. For wet vacuuming: Remove filter.

4. Attach Power Head to Tank, making sure Tabs lock into place.

Note: The Power Head must properly seal onto Tank and must be undamaged to allow vacuum to create suction.

Insert end of Hose with clip securely into Vacuum Port. Press button on hose until Clip locks into tab on port.

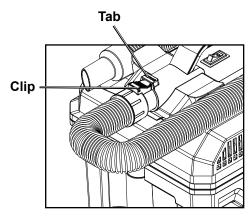

- 6. If desired, slide Nozzle onto Hose.
- Make sure that Switch is in its off position. Insert a fully charged battery and make sure that it clicks into place securely.

- 8. Hold the loose Hose end securely. Turn Switch on to operate Vacuum.
- 9. WHEN WET VACUUMING:

IMPORTANT! Leave a gap at tip of nozzle opening to allow air inflow.

Do not immerse nozzle completely in liquid.

When the Motor sound becomes higher in pitch, the Tank is full and the float is closing off the motor intake.

IMMEDIATELY:

- a. DRY YOUR HANDS AND FEET.
- b. Turn the Vacuum off.
- c. Disconnect battery pack from unit.
- d. Empty the Tank.

<u>WARNING!</u> TO PREVENT SERIOUS INJURY FROM ELECTRIC SHOCK:

Dry your hands and feet before touching battery pack or switch.

Do not continue to use the vacuum when the tank is full of liquid.

10. To prevent accidents,

DRY YOUR HANDS AND FEET,

turn off the appliance and disconnect battery pack after use.

Empty and clean Tank, dry Tank, clean Filter (see Cleaning Filter on page 9), then store the appliance indoors out of children's reach.




Blower Operation

AWARNING

TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION: Turn the Switch off and remove battery pack before removing the Power Head.

- 1. Pull Tabs outward and remove Power Head by the handle. Pull up to remove it.
- 2. Clean Tank out before using the appliance as a Blower. CAUTION! Any material left in the Tank may be blown out, causing injury.
- 3. Attach Power Head to Tank, making sure Tabs lock into place.
- 4. Remove Hose from the Vacuum Port. Locate Blower Port opening at the rear of Power Head. Insert end of the Hose with Clip into the Blower Port. Press the button on the Hose until the clip locks into tab.

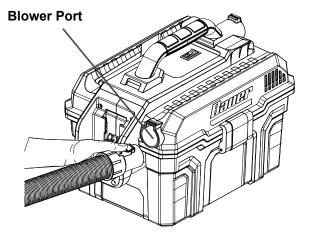

- 5. CAUTION! Wear ANSI-approved safety goggles before use.
- 6. Make sure that Switch is in its off position. Insert a fully charged battery and make sure that it clicks into place securely.
- 7. Hold the loose Hose end securely.

 Turn the Switch on to operate the Blower.

CAUTION! Do not point Hose toward another person or animal.

8. To prevent accidents, turn off the appliance and disconnect battery pack after use. Clean, then store the appliance indoors out of children's reach.



User-maintenance and Storage



Procedures not specifically explained in this manual must be performed only by a qualified technician.

AWARNING

TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION: Turn the Power Switch of the appliance off and remove Battery Pack before performing any procedure in this section.

TO PREVENT SERIOUS INJURY FROM APPLIANCE FAILURE: Do not use damaged equipment. If abnormal noise or vibration occurs, have the problem corrected before further use.

Cleaning, Maintenance, and Lubrication

- 1. **BEFORE EACH USE**, inspect the general condition of the appliance. Check for:
 - loose hardware
 - · misalignment or binding of moving parts
 - air leakage on the Tank or Power Head connection
 - · cracked or broken parts
 - · damaged electrical wiring
 - any other condition that may affect its safe operation.

- AFTER USE, wipe external surfaces of the appliance with clean cloth. Store in an indoor dry area out of reach of children.
- 3. All parts are permanently lubricated. Do not use additional lubrication.
- Disconnect battery pack and store battery pack, charger, and tool in dry, indoor area out of reach of children and away from metal objects (i.e., paperclips, coins) to prevent shorting.
- Li-Ion BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY.
 Do not short, incinerate or open battery.

Cleaning Filter

To ensure proper operation, clean the Filter regularly. Torn Filter should be replaced:

- Remove filter.
- 2. Tap or shake Filter into a waste can.
- 3. If needed, flush with plain water from inside. Allow the Filter to dry for at least one day before reinstalling.



WARNING! TO PREVENT SERIOUS INJURY: Installing a wet Filter will increase the risk of electric shock and may damage the vacuum.

4. Replace Filter

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

Parts List


Part	Description	Qty
1	Rear Cover (Left)	1
2	Rear Cover (Right)	1
3	Handle	1
4	Power Switch	1
5	Handle Retainer	1
6	Top Cover	1
7	PCBA	1
8	DC Motor	1
9	Baffle	1
10	Lid	1

Part	Description	Qty
11	Float Seal	1
12	Float	1
13	Filter Cage	1
14	Cartridge Filter	1
15	Clip	2
16	Tank	1
17	Gulper Nozzle Retainer	1
18	Hose	1
19	Gulper Nozzle	1
20	Crevice Tool	1

Record Product's Serial Number Here:_

Note: If product has no serial number, record month and year of purchase instead.

Note: Some parts are listed and shown for illustration purposes only, and are not available individually as replacement parts. Specify UPC 193175486905 when ordering parts.

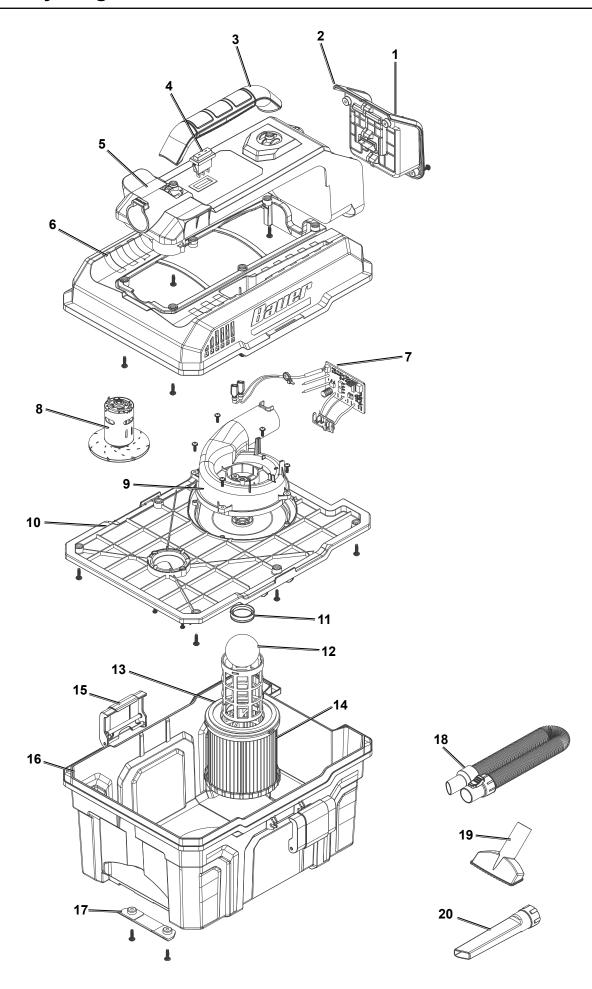

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

