



ANALOG PISTOL GRIP TIRE INFLATOR

IMPORTANT SAFETY INFORMATION

⚠ CAUTION

Do not exceed maximum pressure of tire. Consult vehicle recommendation for optimum and safe pressure.

If a problem occurs, have the problem corrected before further use.

Do not use damaged equipment.

1.  Never connect to an air source that is capable of exceeding 160 psi.

2. **Never use oxygen, carbon dioxide, combustible gases or any bottled gas as an air source for the tool.** Such gases are capable of explosion and serious injury to persons.

Specifications

Range	0–160 PSI / 0–11 BAR
Air Inlet	1/4" NPT female
Hose	3/8" ID x 15.7" L

Controls



Operating Instructions

BEFORE EACH USE, inspect the general condition of the tool. Check for:

- loose fittings
 - cracked or deformed o-rings
 - damaged pressure gauge or hose
 - any other condition that may affect its safe operation.
1. Connect compressed air source to Inflator's Air Inlet.
 2. Push chuck head onto valve core of tire. The Gauge will show internal pressure of tire.
 3. If displayed air pressure is low, press Trigger all the way to inflate. When desired pressure is shown, release Trigger and check Gauge again.
 4. If displayed air pressure is high, press Trigger part-way and allow excess air to bleed through the Valve.
 5. Remove chuck head.
 6. **IMPORTANT: Dual head style tire chucks are not able to inflate a completely flat (zero air pressure) tire. Tire air pressure is needed to cause the sealing valve to move and seal the unused side of the chuck. If a tire has 0 air pressure, the self-sealing valve has no pressure to react to.**

Record Serial Number Here:

Note: If product has no serial number, record month and year of purchase instead.

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. **THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.**

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.