

Item	58995	58994
Torque Range	50 - 250 ft-lb	20 - 100 ft-lb
Drive	1/2"	3/8″
Accuracy	± 4%	± 4%

Important Safety Information




WARNING Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in injury. Save all warnings and instructions for future reference.

- The warnings, cautions, and instructions in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.
- 2. Wear ANSI-approved safety goggles during use.
- 3. Do not use for loosening fasteners.
- 4. Use only within rated torque range.
- 5. Use as intended only. Do not use as hammer or pry bar.

- 6. Do not use handle extension to increase force. Do not use as a breaker bar.
- Do not use a Torque Wrench that has been dropped. Have it tested before putting back into use.
- 8. Have the Torque Wrench calibrated and serviced only by a qualified technician.
- 9. Inspect before every use; do not use if damaged or if parts are loose.
- 10. Keep away from children.
- Use only sockets with the correct drive and rated to at least the torque that will be applied to it.

Operating Instructions

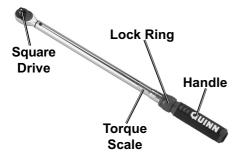

<u>CAUTION!</u> Wear ANSI-approved safety goggles during use.

<u>Note:</u> The Torque Wrench is marked with Foot Pounds and Newton Meters (on opposite sides of Upper Handle). The following instructions illustrate use in Foot Pounds.

- BEFORE EVERY USE, exercise Torque Wrench. Pull down Lock Ring (see step 5 on page 3), then perform the following exercise three times:
 - a. Turn Handle to the right until maximum torque setting is reached.
 - b. Turn handle to the left until minimum torque setting is reached.

- 2. Refer to equipment manufacturer's instructions for torque value.
- 3. Clean the fastener's threads. Dirty threads may result in a misleading torque reading.
- 4. Select socket that properly fits the fastener. Press socket firmly onto Square Drive so that Torque Wrench sits at a 90 degree angle.





 
Correct

5. Pull down Lock Ring and hold in place while adjusting torque.




Incorrect

- 6. To set torque value to 64:
 - a. Turn Handle until top of handle lines up with bottom horizontal mark for 60 and 0 lines up with center line.



 b. Turn Handle clockwise until the 4 lines up with the center line. The torque value is set to 64 ft-lb. (60 + 4 = 64)



7. Release the Lock Ring to lock the Handle in place.

<u>NOTICE</u>: To prevent damage to the Torque Wrench, do not use for loosening fasteners.

 Set Switch to ON position to turn clockwise, or OFF position to turn counterclockwise.



Note: Tighten fastener with another tool until it is snug, then finish the operation with the Torque Wrench.

9. Place socket on fastener and grasp Handle.

<u>Note:</u> To ensure accuracy, hold center of Handle and rotate Wrench in a vertical motion.



Correct Incorrect

- ly 🖓
- 10. Pull smoothly and slowly until the handle breaks away and a click is heard or felt. STOP PULLING! The proper torque has been achieved. Further pulling may damage fastener.



- 11. Release pressure to allow the handle to reset for the next operation.
- 12. AFTER EVERY USE, set Wrench to the lowest torque setting.
- 13. Store Wrench inside its case, indoors, in a clean, dry location that is out of reach of children.

Maintenance and Servicing



Procedures not specifically explained in this manual must be performed only by a qualified technician.

ACAUTION TO PREVENT INJURY FROM TOOL FAILURE: Do not use damaged equipment. If abnormal noise or vibration occurs, have the problem corrected before further use.

- 1. **BEFORE EACH USE**, inspect the general condition of the tool. Check for:
 - · loose hardware,
 - · misalignment or binding of moving parts,
 - · cracked or broken parts, and
 - any other condition that may affect its safe operation.
- 2. AFTER USE:
 - pull down Lock Ring, set to the lowest torque setting, then release Lock Ring.

- wipe wrench with a clean cloth. Do not use liquid on the cloth or immerse wrench in liquid.
- 3. **EVERY 6 MONTHS**, have the Torque Wrench calibrated and serviced by a qualified technician.
- For calibration or repair contact: Angle Repair & Calibration 175 Angle Dr., Beckley, WV 25801. (304) 253-5729.

Note: Replacement parts are not available. Reference UPC 193175454065 (1/2" Drive) UPC 193175454058. (3/8" Drive).

LIFETIME WARRANTY

Harbor Freight Tools warrants to the original purchaser that this QUINN™ torque wrench shall be free from defects in materials and workmanship (excluding calibration) for its useful life.

If your QUINN[™] torque wrench does not perform in accordance with this warranty, Harbor Freight Tools will, at its option and expense, repair or replace (or elect to refund the purchase price if we cannot repair or replace), your QUINN[™] torque wrench, which shall be your sole and exclusive remedy. To obtain warranty service, QUINN[™] products must be returned with proof of purchase to a Harbor Freight Tools retail store or returned by mail after contacting Harbor Freight Tools Product Support at 1-888-866-5797 and receiving a return authorization.

This warranty excludes normal wear and tear and does not apply to products subjected to misuse, use or operation other than for the intended purpose or not in accordance with the product manual, abuse, accident, modification or alteration, improper storage, neglect, or lack of maintenance (including failure to obtain professional recalibration of the QUINN™ torque wrench every six months). This warranty is in lieu of all other warranties. Harbor Freight Tools is not liable for incidental, indirect, special, consequential, or punitive damages or costs arising from the use of this product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

