

Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual near the assembly diagram (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

23c

BRAUN™

RECHARGEABLE FLASHLIGHT



Visit our website at: <http://www.harborfreight.com>
Email our technical support at: productsupport@harborfreight.com

59314

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-888-866-5797 as soon as possible.

Copyright © 2021 by Harbor Freight Tools®. All rights reserved. No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

⚠ WARNING

Read this material before using this product. Failure to do so can result in serious injury. **SAVE THIS MANUAL.**

Specifications

Battery	Rechargeable Lithium-Ion
Battery Voltage	7.4V
Battery Capacity	5000 mAh, 37 Wh
Brightness	7000 Lumens (High) 1750 Lumens (Medium) 170 Lumens (Low)

IMPORTANT SAFETY INFORMATION

WARNING

To prevent serious injury, FIRE, and EXPLOSION:

1. Contains Li-Ion battery. Battery must be recycled or disposed of properly. Do not open, crush, heat above 140° F or incinerate.
2. When lit, avoid obstructing ventilation as Flashlight can overheat.
3. Do not submerge Light.
4. Do not operate in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
5. Do not look directly into light. Do not point light at others.
6. Not a toy. Keep out of reach of children.
7. Charge Flashlight only according to these instructions.

Charging Instructions



Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this document including all text under subheadings therein before set up or use of this product.

1. Lift USB Port Cover to expose USB Output and USB-C Input Port.
2. Insert the provided USB-C Cable into USB-C Input Port.
3. Insert the other end of the Cable into an AC/DC Adaptor and plug Adaptor into a 120V outlet.
4. Charging Indicator will light up when Flashlight begins charging.
5. When Flashlight is done charging, the Charging Indicator will turn from red to green.

NOTICE: Do not leave the Battery in a discharged state. Charge the Battery every 3 months if the Flashlight is not in use. This will keep the Battery from wearing down and add to its life. Do not charge the Flashlight at temperatures below -4° F.

Operation Instructions



Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this document including all text under subheadings therein before set up or use of this product.

NOTE: Before using Flashlight for the first time, fully charge the Battery.

1. Press the Power Button opposite the USB Ports to turn Flashlight on. Flashlight turns on in low brightness mode.
2. Press Power Button again to switch the light to medium brightness.
3. Press Power Button a third time to switch the light to high brightness.
4. Press the Power Button again to turn off Flashlight.
5. Quick press Power Button twice to switch the light to strobe mode. Press Power Button again to turn Flashlight off.
6. Press and hold the Power Button to turn the Flashlight on in the reverse cycle. In this mode, Flashlight will turn on in high brightness.
7. Press Power Button again to switch to medium brightness.
8. Press Power Button a third time to switch to low brightness.
9. Press the Power Button again to turn Flashlight off.
10. When finished using the Flashlight, store indoors away from children.

NOTICE: Do not open the housing, there are no user-serviceable parts inside.

11. Flashlight can also be used as a power bank for compatible devices. Plug a USB cable into the USB Output Port. Plug the other end of the cable into device (e.g., cell phone).
12. To adjust size of Flashlight beam, twist Flashlight near lens.

Battery Removal

Note: Contains Li-Ion battery. Battery must be recycled or disposed of properly.

1. To remove battery, remove end of Flashlight by twisting.
2. Remove battery from the Flashlight Housing.

Record Product's Serial Number Here: _____

Note: If product has no serial number, record month and year of purchase instead.

Note: Replacement parts are not available for this item. Reference UPC 193175465818.

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

BRAUN™

26677 Agoura Road • Calabasas, CA 91302 • 1-888-866-5797