


# PREDATOR. SETUP GUIDE

 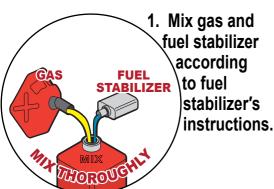


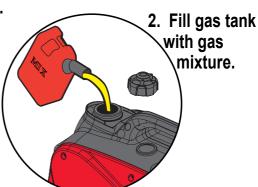

4. Remove oil fill plug.

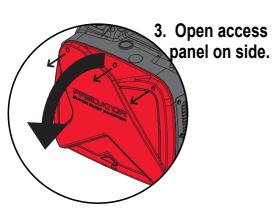









### PREDATOR.



## **BEFORE USING:**

Position generator outside and unplug all electrical loads

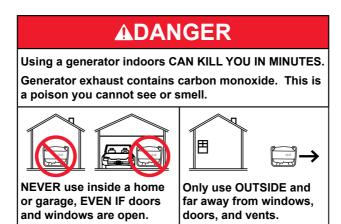

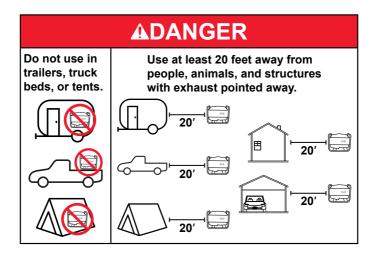


#### **AWARNING**

To prevent serious injury, read manual before set up and/or use.

#### SAVE THIS GUIDE - DO NOT THROW AWAY!

# PREDATOR. START GUIDE

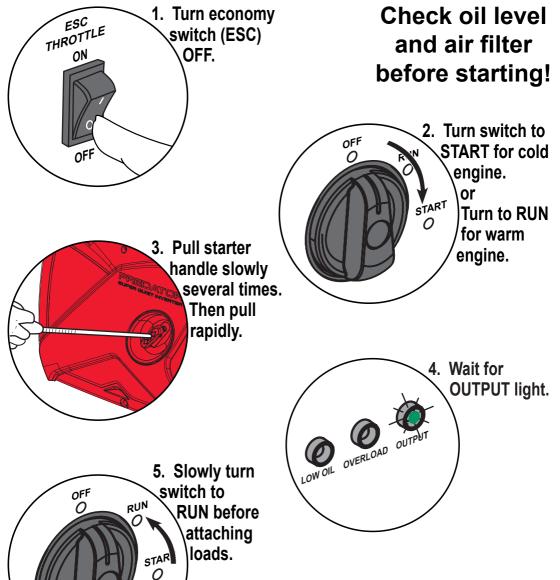


SAVE THIS GUIDE – DO NOT THROW AWAY!

Move Slowly

## PREDATOR. SERVICE GUIDE

1. Open access panel on side.



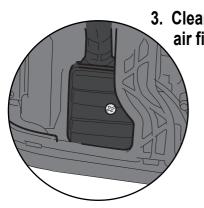

3. Clean/replace air filter.

4. Clean spark arrestor.

See manual for full maintenance information.

Maintenance Schedule	FREQUENCY		
	3 mo./ 50 hr.	6 mo./ 100 hr.	yearly/ 300 hr.
Clean/replace air filter	$\checkmark$		
1. Change engine oil			
2. Check and clean spark plug		$ $ $\checkmark$	
3. Check and clean spark arrestor			
Check idle speed and valve clearance			
2. Clean fuel tank, strainer, and carb.			✓
3. Clean combustion chamber			

SAVE THIS GUIDE - DO NOT THROW AWAY!