

Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual near the assembly diagram (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

REV 15e

luminar **OUTDOOR™**

ITEM 62712

SOLAR LED SPOTLIGHT



Visit our website at: <http://www.harborfreight.com>
Email our technical support at: productsupport@harborfreight.com

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-888-866-5797 as soon as possible.

Copyright© 2015 by Harbor Freight Tools®. All rights reserved.
No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

⚠WARNING

**Read this material before using this product.
Failure to do so can result in serious injury.
SAVE THIS MANUAL.**

Specifications

Batteries	2 AA NiMH Rechargeable
Run Time	6 to 8 hours
Charge Time	8 hours

Important Safety Information

1. Wear ANSI-approved safety goggles during setup.
2. Keep setup area clean and well lit.
3. Keep bystanders out of the area during setup.
4. Do not setup when tired or when under the influence of alcohol, drugs or medication.
5. Position batteries in proper polarity and do not install batteries of different types, charge levels, or capacities together.
6. This product is not a toy. Do not allow children to play with or near this item.
7. Use as intended only.
8. Inspect before every use; do not use if parts are loose or damaged.
9. Maintain product labels and nameplates. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.

Set Up

1. Remove protective film covering Solar Panel.
2. Choose a location with at least 8 hours of direct sunlight. Do not place near nighttime light sources such as porch lights or streetlights, as the light may turn off or flicker.

Wall/Fence Mounting

1. Using the base as a template, mark locations of mounting holes on mounting surface.
2. Use appropriate hardware to secure Spotlight to mounting surface.
3. Loosen Adjustment Screw, adjust angle of Lamp, then tighten Adjustment Screw.

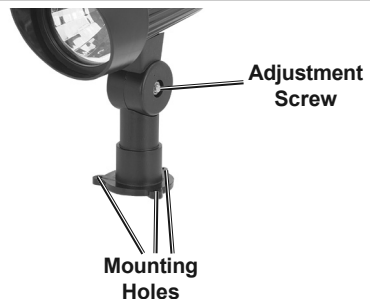


Figure A

Ground Installation

Note: Before installing Spotlight, make sure there are no underground pipes, cables or other obstructions.

1. Push Stake into the ground firmly.

2. Attach Spotlight to Stake.

3. Loosen Adjustment Screw, adjust angle of Lamp, then tighten Adjustment Screw.

Operation

Note: During the day, the Solar Panel converts sunlight into electricity, recharging the batteries. The amount of light the Solar Panel receives depends on placement of the Spotlight, geographic location and weather.

1. Turn Spotlight on by pushing Power Button on back of unit.

2. Adjust Solar Panel for best sun exposure.

3. Check that LEDs are working by covering the solar Panel. If LEDs are not working, push Power Button again.

Maintenance

Cleaning

Clean with a damp cloth. Keep Solar Panel clean for best results. Do not put excessive pressure on Solar Panel while cleaning.

Replacing Batteries

NOTICE: Replace batteries every 12 months.

1. Remove Lamp Housing by turning *counterclockwise*.

2. Carefully pull out reflector to expose batteries.

3. Remove old batteries and dispose of properly.

Note: Do not short, incinerate or open battery.

4. Install new batteries.

5. Replace Lamp Housing.



Figure B: Lamp Housing

Record Serial Number Here: _____

Note: If product has no serial number, record month and year of purchase instead.

Note: REPLACEMENT PARTS, OTHER THAN BATTERIES, ARE NOT AVAILABLE.

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

