


# QUICK START GUIDE

ITEM  
62747

# 5 in 1

## PORTABLE POWER PACK

### Charge Completely! Immediately After Purchase

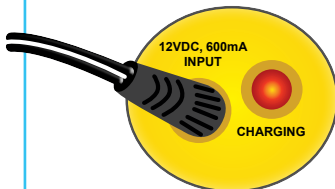

#### AC Charge Time

Initial Charge:  
48 hours

Recharge:  
34 hours

Do not exceed charge time.

### Maintain The Battery!

#### Fully Recharge:

- When Voltage Drops To 12V
- After Each Jump-Start
- Once a Month

Failure to maintain the battery will void the warranty.


### Jump-Starting a Vehicle

#### ⚠WARNING


To prevent serious injury:

1. Do not touch positive and negative battery clamps together.
2. Do not connect to the negative terminal of the battery.

1

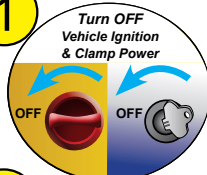


2

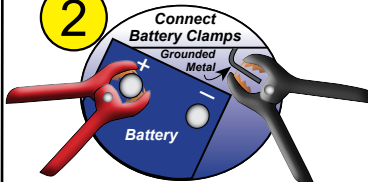


CONNECT RED POSITIVE CLAMP FIRST, THEN  
CONNECT BLACK NEGATIVE CLAMP TO A  
NON-MOVING METAL PART OF THE VEHICLE.

3

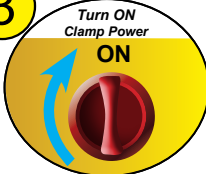


4

Wait 5 minutes!

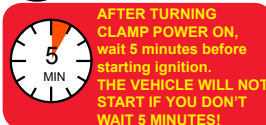

5

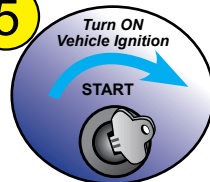

After the vehicle is started:

1. Turn OFF the Clamp Power.
2. Remove the Black Negative Clamp.
3. Remove the Red Positive Clamp.

#### ⚠WARNING

This Quick Start Guide is not intended to replace the Owner's Manual & Safety Instructions. Read all safety warnings and instructions therein to ensure proper usage and to avoid personal injury.

## Using the Air Compressor

Open Air Hose Compartment on the back of the unit and pull out the air hose.



1

### Tire Inflation

Position the Tire Inflator over the valve stem and push down firmly. Press down on the lever.

3

Monitor the Air Pressure Gauge until the proper inflation level has been reached.

2

Turn ON Compressor



4

Turn OFF Compressor



### Using Adapters

1

Three adapters are included with the Power Pack that can be attached to the Tire Inflator.

2

Attach the proper adapter, then follow steps 2-4 above.

## Powering Appliances

1

Turn OFF Inverter & Appliance



3

Turn ON Inverter



The Inverter Power light will illuminate

2

Plug Appliance into an Outlet



4

Turn ON Appliance



### Typical AC Appliances & Run Times

Appliance (120VAC)	Estimated Power (Watts)	Estimated Lifetime (Hours)
• Fluorescent Lantern	15	7 hr.
• Electric Bug Killer	40	2 hr. 30 min.
• DVD player	60	1 hr. 45 min.
• Laptop • Radio	75	1 hr. 25 min.
• Electric Blanket	100	1 hr.

Use this chart as a guideline only. Actual power usage may vary based on the model or brand of the appliance. Check the actual wattage of your appliances and calculate the amount of power needed to start and run them.

### ⚠ WARNING

To prevent serious injury:

1. Check the proper inflation level of the the object being inflated.
2. Monitor the Air Pressure Gauge on the front of the Unit.
3. Do not overinflate.