


# CENTRAL PNEUMATIC®

## QUICK START GUIDE

30 GALLON 14 HP AIR COMPRESSOR

READ AND UNDERSTAND USER MANUAL BEFORE USE

### Components

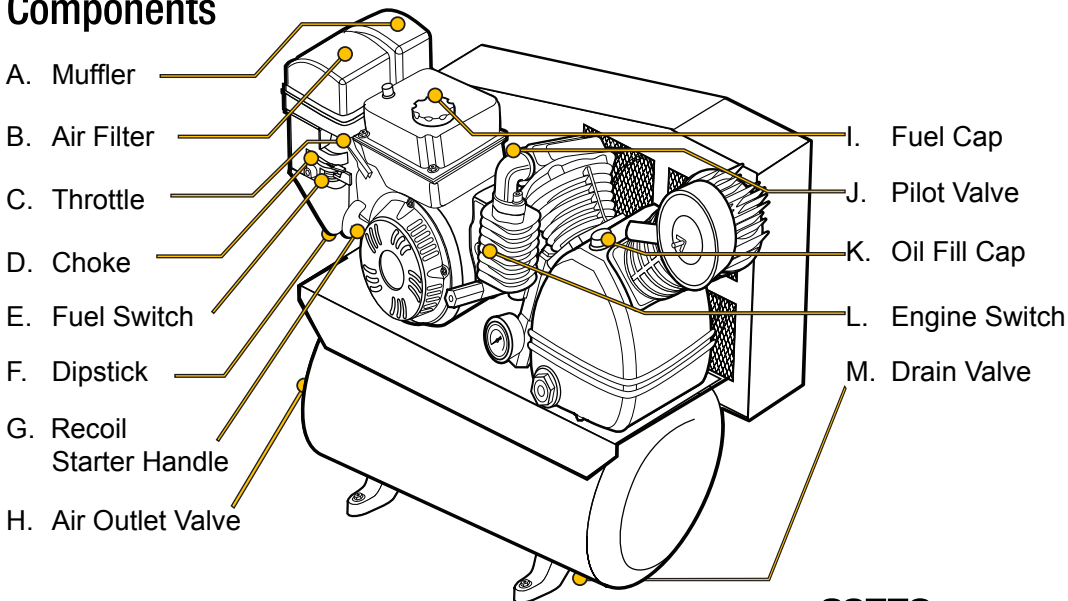


**62779**




## Add Fluids

Check oil and fuel levels.  
If needed, fill as shown below.

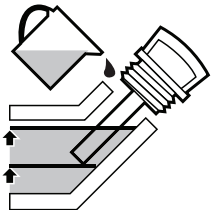


Add oil to engine crankcase

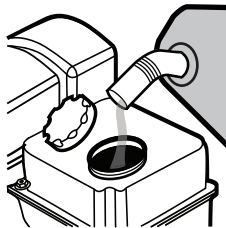


Add fuel to within  
1" of the rim of the tank

Note: Use regular Unleaded 87 Octane or better.  
Engine not designed for E85 Ethanol blend.

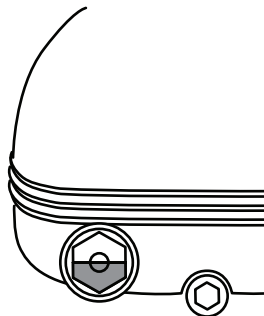


Add oil to pump,  
filling to center  
of sight glass

## Assembly

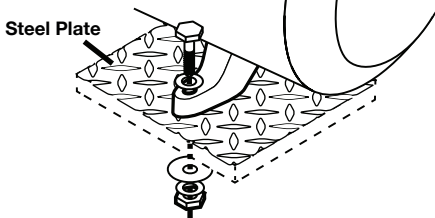

Mount the compressor securely  
to a flat, level surface


## For Electric Start

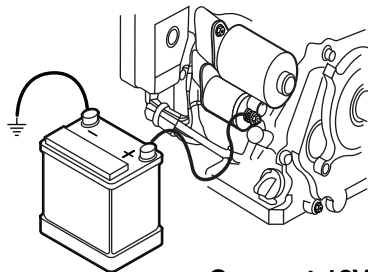


Connect 12V battery

# Manual Starting Procedure


# CENTRALPNEUMATIC®

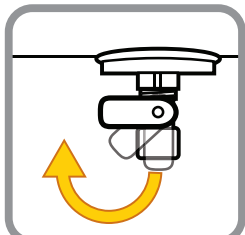

1. CLOSE DRAIN VALVE

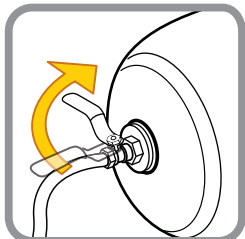


2. CLOSE OUTLET VALVE

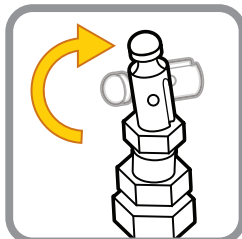


3. OPEN PILOT VALVE




4. OPEN FUEL VALVE

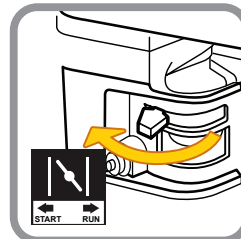

5. CHOKE TO START

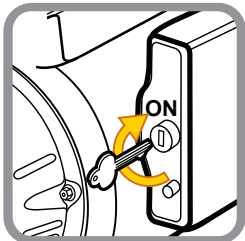


6. SWITCH ON

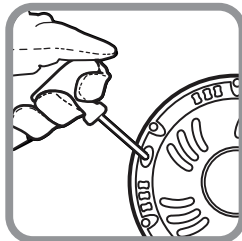

7. PULL CORD




8. CHOKE TO RUN

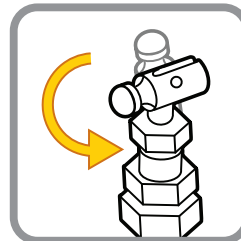


9. CLOSE PILOT VALVE

# Electric Starting Procedure


**Note:** Connect battery before using key to start generator.

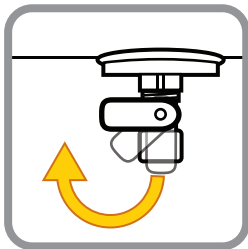


1. CLOSE DRAIN VALVE

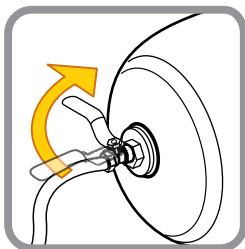

2. CLOSE OUTLET VALVE

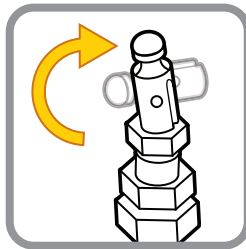


3. OPEN PILOT VALVE

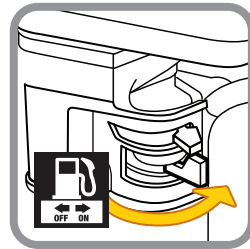

4. OPEN FUEL VALVE




5. CHOKE TO START

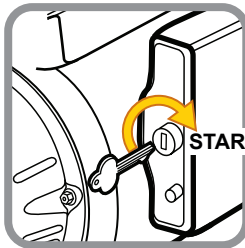

6. TURN TO START



7. CHOKE TO RUN

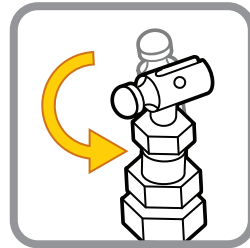

8. CLOSE PILOT VALVE

Visit our website at: <http://www.harborfreight.com>  
Email our technical support at: [productsupport@harborfreight.com](mailto:productsupport@harborfreight.com)  
Email our engine support at: [predator@harborfreight.com](mailto:predator@harborfreight.com)