
Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual near the assembly diagram (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

23k

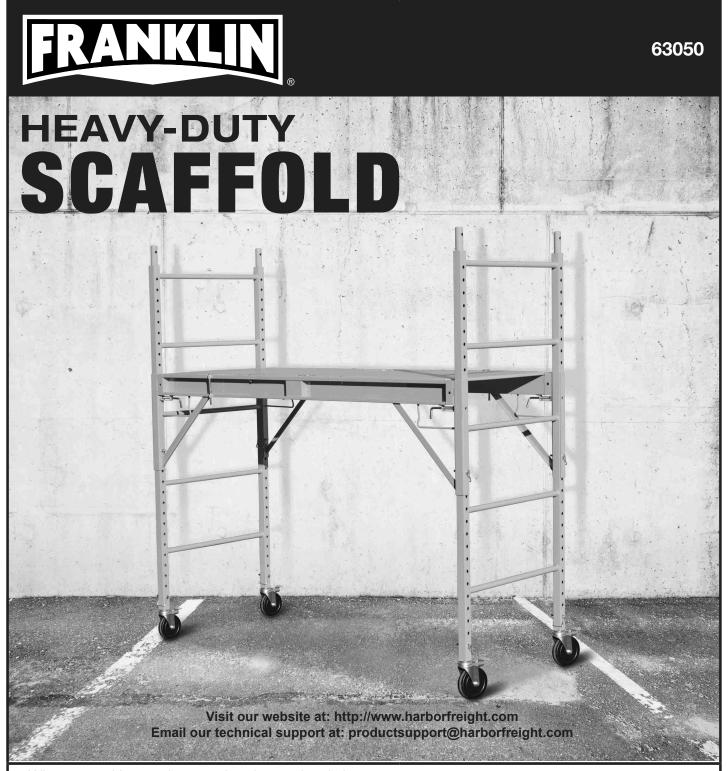

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-888-866-5797 as soon as possible.

Copyright[©] 2021 by Harbor Freight Tools[®]. All rights reserved.

No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools.

Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein.

Tools required for assembly and service may not be included.

AWARNING

Read this material before using this product. Failure to do so can result in serious injury. SAVE THIS MANUAL.

Table of Contents

Safety 2	Maintenance	. 8
Specifications4	Parts List and Diagram	10
Assembly 4	Warranty	12
Operation6		



WARNING SYMBOLS AND DEFINITIONS		
A	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.	
▲ DANGER	Indicates a hazardous situation which, if not avoided, will result in death or serious injury.	
AWARNING	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.	
ACAUTION	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.	
NOTICE CAUTION	Addresses practices not related to personal injury.	

IMPORTANT SAFETY INFORMATION

AWARNING

Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, and/or other serious injury.

Save all warnings and instructions for future reference.

 FOLLOW OSHA GUIDELINES FOR SETUP, USE AND MAINTENANCE.



To avoid contact and shock hazard, do not use Scaffold near energized power lines or electrical lines. Do not contact unprotected, energized electrical

power lines or equipment with scaffold or tools.

Maintain at least 10 feet from electrical lines.

Consult the power company to shut off power or insulate/relocate lines if working closer than 10 feet.

- 3. Acids and other corrosive substances may severely affect metal strength on the Scaffold. Use extreme care around such materials and follow instructions. Do not use acids or other corrosive substances on Scaffold parts.
- Before using, check all parts for proper function and damage; do not use if damaged or functioning improperly. Do not straighten deformed parts.
- 5. Immediately remove Scaffold from service and destroy if exposed to excessive heat, such as fire, due to loss of structural strength.
- 6. Do not allow objects or slippery material to accumulate on Scaffold.

- 7. Do not use with damaged or deteriorated deck. Periodically coat wood decking and rails with transparent (penetrating) wood preservative. DO NOT PAINT OR USE OPAQUE SURFACE SEALANTS. If there is a problem with rotting, or decay, it must be visible during inspection in order to prevent using a damaged platform.
- 8. Do not use for cantilever applications. Use with supports directly underneath.
- 9. Rated working load: 900 lb. Total combined weight of workers and materials must not exceed rated working load. Do not overload. Distribute load evenly. Be aware of dynamic loading! Jumping on or dropping load may briefly create excess load causing product failure.
- 10. Do not stack scaffold.
- 11. Position on hard level surface, level the working/standing surface, and lock wheels before getting on scaffold.
- 12. Do not use ladder or other climbing device on top of scaffold.
- 13. Use guard rails, mid rails and toe boards as required by local, state and federal regulations. Using such safety devices is always recommended.
- 14. Do not climb onto Scaffold from ladder unless both Scaffold and ladder are secured from movement in all directions.
- 15. Scaffolds that are covered in ice or snow cannot be used until they are cleaned off thoroughly. Scaffolds MUST NOT be used during storms or in windy weather.
- 16. Do not ride on or transport items on moving Scaffold.



Wear ANSI-approved safety goggles, a hard hat, heavy-duty work gloves, and OSHA specified safety harness during assembly and use.

Wear additional safety gear as required by local, state, and federal regulations.

- 18. Keep children away from Scaffold.
- Keep work area clean and well lit. Cluttered or dark areas invite accidents.

- 20. Stay alert, watch what you are doing and use common sense when using this Scaffold. Do not use while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while using may result in serious personal injury.
- 21. Only use safety equipment that has been approved by an appropriate standards agency. Unapproved safety equipment may not provide adequate protection. Fall-arrest systems must be OSHA-approved, eye protection must be ANSI-approved, and breathing protection must be NIOSH-approved for the specific hazards in the work area.
- 22. Store idle Scaffold out of the reach of children and do not allow persons unfamiliar with the Scaffold to climb on, or use it for any purpose. The Scaffold is dangerous in the hands of untrained users.
- 23. Check for misalignment or binding of parts, cracks and/or breakage of parts, and any other condition that may affect safe operation. Many accidents are caused by poorly maintained tools.
- 24. The warnings included in this manual are intended to give general safety guidelines. Scaffold safety regulations may change periodically. The operator is responsible to be familiar with and obey current OSHA guidelines as well as local, state, and federal regulations regarding the set up and use of this product.
- 25. Have Scaffold serviced by a qualified repair person only. This will ensure that the safety of this Scaffold is maintained.
- 26. Only use the included platform or an identical replacement platform. The platform must not extend beyond the base support.
- 27. Maintain labels and nameplates on the Scaffold. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.
- 28. The warnings, precautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.



SAVE THESE INSTRUCTIONS.

Specifications

Maximum Weight Capacity	900 lb.
Adjustable Mounting Holes	1/2" Diameter (30 Per Side)
Platform Height	28" to 48" High

Assembly



Read the <u>ENTIRE</u> IMPORTANT SAFETY INFORMATION section at the beginning of this manual including all text under subheadings therein before set up or use of this product.


AWARNING

TO PREVENT SERIOUS INJURY:

Scaffold components from other manufacturers must not be used with this Scaffold. Safety equipment added to this Scaffold, such as rails, toe guards, stability strapping, and safety harnesses, must be installed by a qualified technician. They must fit together without being forced, and the Scaffold's structural integrity must be maintained.


Note: For additional information regarding the parts listed in the following pages, refer to *Parts List and Diagram* on page 10.

 Mount the Swivel Casters (4) to the bottom of the End Frames (1) by sliding each Swivel Caster (4) into a leg and securing it with a Locking Pin (5). Then snap the Pin Spring (6) around the end of the Locking Pin to keep it in place. Refer to Figure A.

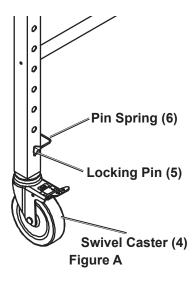


WARNING! TO PREVENT SERIOUS INJURY AND DEATH: Keep platform 48" or lower.

 Slide a Side Rail (2) onto an End Frame and secure in place using Height Adjustment Pin (7) and a Locking Pin and Pin Spring. Secure the other end of the Side Rail to the other End Frame in the same manner. Refer to Figure B. MAKE SURE THE PINS FULLY ENGAGE. Repeat procedure for the other Side Rail.

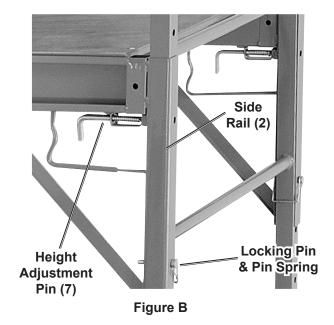


 Lay the Wood Platform (3) over the Flange Pins that extend up from the Side Rails and into the oblong holes cut in the Wood Platform. These Flange Pins must fit properly. Secure the Wood Platform in place with the Platform Hold Downs (8). Refer to Figure C.

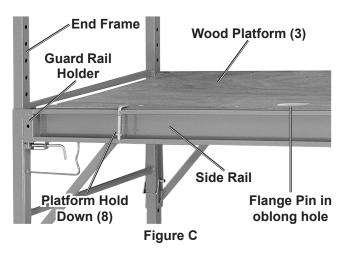

- 4. In addition to the Platform Hold Downs, use the four Bolts (9), Nuts (10) and Washers (11) to further secure the Wood Platform in place.
- Guard rail holders are built into the Scaffold as noted in Figure C. Guard rails (sold separately) must be installed by a qualified technician. They must fit properly into the Scaffold's holders and must be secured in place.



two Platform Hold Downs must be in position as shown at all times to keep the Wood Platform secure.

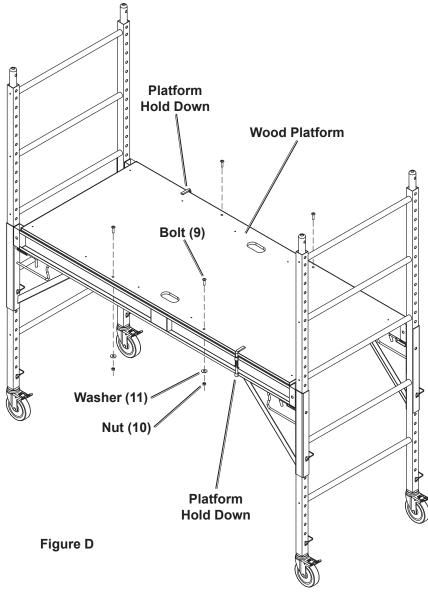

Operating Instructions



Read the <u>ENTIRE</u> IMPORTANT SAFETY INFORMATION section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

A DANGER

TO PREVENT SERIOUS INJURY AND DEATH:

Put on safety harness (not included) before climbing onto Scaffold.

Do not use the End Frames or any other part of this Scaffold as a means of climbing onto the Scaffold.

AWARNING

TO PREVENT SERIOUS INJURY:

Inspect Scaffolds thoroughly before use each day. Check all components and Locking Pins before each use.

Do not use front-end loaders, forklifts or similar pieces of equipment to support Scaffold platforms.

General Operating Instructions

⚠WARNING! TO PREVENT SERIOUS INJURY, DO NOT PERMIT PEOPLE OR EQUIPMENT ON THE SCAFFOLD WHILE IT IS BEING MOVED.

- 1. Wheel the Scaffold to the area where it will be used, grasping and pushing the scaffold at points no higher than 5 feet off the floor to help prevent tipping. The surface where this Scaffold is placed must be capable of supporting the loaded Scaffold without settling or displacement. Use this Scaffold on concrete or asphalt concrete only.
- Lock the Swivel Casters (4) by depressing the Lock Mechanism attached to each Wheel. Pressing down on the end marked ON locks the Swivel Caster. Pressing down on the end marked OFF unlocks the Caster.

<u>**AWARNING!</u>** ALL CASTERS MUST BE LOCKED BEFORE USE TO PREVENT MOVEMENT AND SERIOUS INJURY.</u>

WARNING! TO PREVENT SERIOUS INJURY FROM INSTABILITY:

Use a level to verify that the Scaffold frame is plumb and level in all directions. "Eyeballing" the straightness of the Scaffold is not accurate enough.

- 3. A ladder should normally be used to climb onto the Scaffold. The ladder must be positioned so as not to tip the Scaffold when weight is placed against it. Any "attachable" ladders used must be specifically designed for this type of Scaffold. They must clamp securely in place to the Scaffold and any ladder used must be securely held in place during use to prevent movement. Any ladder (normal or stairway type) must meet OSHA requirements for use with scaffolds.
- 4. If the Scaffold will be accessed directly (such as from an opening in the side of a building), it cannot be more than 14 inches horizontally nor more than 24 inches vertically from the other surface.
- Each worker on a scaffold more than 10 feet above a lower level MUST be protected from falling to that lower level. Fall protection consists of either personal fall arrest systems, or guardrail systems meeting OSHA requirements.
- 6. For most activities, there must be no more than a 14 inch gap between the Scaffold platform and the structure being worked on. One exception is when using for lathing and plastering. For this, a gap of 18 inches is permitted.
- If toe-boards, guardrails, or canopies are used to prevent a "falling object" hazard to passers-by, then the area below the Scaffold must be barricaded and the danger clearly stated.

- 8. All plug-in electric tools used on the Scaffold must be protected by a GFCI outlet or plug.
- 9. When finished using the Scaffold, wipe down the Wood Platform (3) and all metal supports. Then store the tool indoors out of children's reach.

Note: Be aware of any grease or other oily substance spilled on Wood Platform and wipe up immediately.



Maintenance



Procedures not specifically explained in this manual must be performed only by a qualified technician. Only a qualified technician may replace any parts or make any safety equipment additions to this Scaffold.

- BEFORE EACH USE, inspect the general condition of the Scaffold. Check for:
 - cracking or deterioration of Reinforced Wood Platform
 - · cracked or loose wheels or wheel locks
 - · straightness/levelness of Platform and Scaffold
 - · loose bolts
 - · misalignment of parts
 - · cracked, bent or broken parts
 - any other condition that may affect its safe operation.

- Periodically coat wood decking and rails with <u>transparent</u> (penetrating) wood preservative.
 DO NOT PAINT OR USE OPAQUE SURFACE SEALANTS – THEY MAY CONCEAL SERIOUS PROBLEMS.
- 3. **AFTER USE,** clean external surfaces with clean cloth.



PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO.

Parts List and Diagram

Parts List


Part	Description	Qty
1	End Frame	2
2	Side Rail	2
3	Reinforced Wood Platform	1
4	Swivel Caster	4
5	Locking Pin	8
6	Pin Spring	8

Part	Description	Qty
7	Height Adjustment Pin	4
8	Platform Hold Down	2
9	Bolt M8x30	4
10	Nut M8	4
11	Washer M8	4

Record Product's Serial Number Here:_

Note: If product has no serial number, record month and year of purchase instead.

Note: Some parts are listed and shown for illustration purposes only, and are not available individually as replacement parts. Specify UPC 792363630504 when ordering parts.

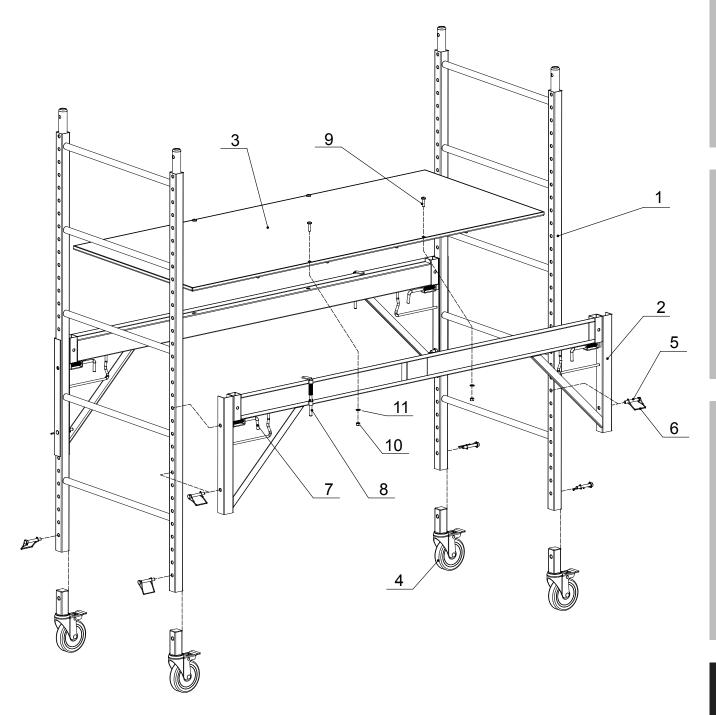

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

