

Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual near the assembly diagram (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

18k

Lynxx®

40V LITHIUM
10" CORDLESS POLE SAW



64718

Visit our website at: <http://www.harborfreight.com>
Email our technical support at: productsupport@harborfreight.com

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-888-866-5797 as soon as possible.

Copyright© 2018 by Harbor Freight Tools®. All rights reserved.
No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

⚠ WARNING

Read this material before using this product.
Failure to do so can result in serious injury.
SAVE THIS MANUAL.

Table of Contents

Safety	2	Maintenance	12
Specifications	5	Parts List and Diagram	14
Assembly	7	Warranty	16
Operation	9		






SAFETY

ASSEMBLY

OPERATION

MAINTENANCE

WARNING SYMBOLS AND DEFINITIONS

	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
	Indicates a hazardous situation which, if not avoided, will result in death or serious injury.
	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
	Addresses practices not related to personal injury.


IMPORTANT SAFETY INSTRUCTIONS

WARNING

When using electric gardening appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury, including the following:

READ ALL INSTRUCTIONS

Gardening Appliance Safety

- Avoid Dangerous Environment -**
Do not use appliances in damp or wet locations.
- Do Not Use In Rain.**
- Keep Children Away -** All visitors should be kept at a distance from work area.
- Dress Properly -** Do not wear loose clothing or jewelry. They can be caught in moving parts. Use of rubber gloves and substantial footwear is recommended when working outdoors. Wear protective hair covering to contain long hair.
-  **Wear ANSI-approved safety goggles, hard hat and heavy-duty rubber work gloves.** Use face or dust mask if operation is dusty.
- Use Right Appliance -** Do not use appliance for any job except that for which it is intended.
- Avoid Unintentional Starting -**
Do not carry appliance with finger on switch.
- Don't grasp the exposed cutting blades or cutting edges when picking up or holding the appliance.
- Do Not Force Appliance -** It will do the job better and with less likelihood of injury at the rate for which it was designed.
- Do not Overreach -**
Keep proper footing and balance at all times.
- Stay Alert -** Watch what you are doing. Use common sense. Do not operate appliance when you are tired.
- Store Idle Appliances Indoors -** When not in use, appliances should be stored indoors in dry, and high or locked-up place - out of reach of children.
- Maintain Appliance With Care -** Keep cutting edge sharp and clean for best performance and to reduce the risk of injury. Follow instructions for lubricating and changing accessories. Keep handles dry, clean, and free from oil and grease.

14. **Check Damaged Parts** - Before further use of the appliance, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other condition that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by a qualified technician unless indicated elsewhere in this manual.
15. Wear full eye protection and protective clothing.
16. If electrolyte contacts the skin, wash it off immediately with water.
17. If electrolyte contacts the eyes, flush thoroughly and immediately with water. Seek medical attention.
18. **Stop working when you feel tired or exhausted.** Make regular breaks to rest.
19. **DANGER! People with pacemakers should not use pole saws.** Pole saws produce strong electromagnetic fields that can cause pacemaker interference or pacemaker failure. People with pacemakers should consult their physician(s) for advice.
20. **When servicing use only identical replacement parts.**
21. **Disconnect Appliance** - Remove Battery Pack when not in use, before servicing, when changing accessories such as blades, and the like.
22. **Carefully follow cutting procedures explained in this manual.** They are specifically planned to reduce risk to the operator.
23. **Lock pole in place securely before using Pole Saw.**

Lithium Battery Safety Warnings



**LITHIUM BATTERIES STORE
A LARGE AMOUNT OF ENERGY AND
WILL VENT FIRE OR EXPLODE IF MISTREATED:**



1. **Keep Battery Pack dry.**
2. **DO NOT DO ANY OF THE FOLLOWING TO THE BATTERY PACK:**
 - a. **Open,**
 - b. **Drop,**
 - c. **Short-circuit,**
 - d. **Puncture,**
 - e. **Incinerate, or**
 - f. **Expose to temperatures greater than 104°F.**
3. Charge Battery Pack only according to its Charger's instructions.
4. Inspect Battery Pack before every use; do not use or charge if damaged.

Battery Charger Safety

1. **SAVE THESE INSTRUCTIONS** - This manual contains important safety and operating instruction for battery charger Model 64718.
2. Before using battery charger, read all instructions and cautionary markings on battery charger, battery, and product using battery.
3. **CAUTION** - To reduce risk of injury, charge only li-ion type rechargeable batteries. Other types of batteries may burst causing personal injury and damage.
4. Do not charge or use appliance in rain, or in wet locations.
5. Do not use battery-operated appliance in rain.
6. Remove or disconnect battery after use, before servicing, cleaning or removing material from the gardening appliance.
7. Do not dispose of battery in a fire. The cell may explode. Check with local codes for possible disposal instructions.
8. Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
9. Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.

Vibration Hazard

This tool vibrates during use. Repeated or long-term exposure to vibration may cause temporary or permanent physical injury, particularly to the hands, arms and shoulders. To reduce the risk of vibration-related injury:

1. Anyone using vibrating tools regularly or for an extended period should first be examined by a doctor and then have regular medical check-ups to ensure medical problems are not being caused or worsened from use. Pregnant women or people who have impaired blood circulation to the hand, past hand injuries, nervous system disorders, diabetes, or Raynaud's Disease should not use this appliance. If you feel any symptoms related to vibration (such as tingling, numbness, and white or blue fingers), seek medical advice as soon as possible.
2. Do not smoke during use. Nicotine reduces the blood supply to the hands and fingers, increasing the risk of vibration-related injury.
3. Wear suitable gloves to reduce the vibration effects on the user.
4. Use appliances with the lowest vibration when there is a choice between different processes.
5. Include vibration-free periods each day of work.
6. Grip appliance as lightly as possible (while still keeping safe control of it). Let the appliance do the work.
7. To reduce vibration, maintain the appliance as explained in this manual. If any abnormal vibration occurs, stop use immediately.


Pole Saw Safety

1. **Keep all parts of the body away from saw chain.** Do not remove cut material or hold material to be cut when saw chain is moving. Make sure the switch is off when clearing jammed material. Saw chain continues to move after the switch is turned off. A moment of inattention while operating the pole saw may result in serious personal injury.
2. **Carry the pole saw by the handle with the saw chain stopped.** When transporting or storing the pole saw, always fit the saw chain device cover. Proper handling of the pole saw will reduce possible personal injury from the saw chain.
3. **Hold Pole Saw by insulated gripping surfaces only,** because the saw chain may contact hidden wiring. Saw chains contacting a "live" wire may make exposed metal parts of the pole sw "live" and could give the operator an electric shock.
4. **Do not use the pole saw in bad weather conditions,** especially when there is a risk of lightning. This decreases the risk of being struck by lightning.
5. **To reduce the risk of electrocution, never use near any electrical power lines.** Contact with or use near power lines may cause serious injury or electric shock resulting in death.
6. **Always use two hands when operating the pole saw.** Hold the pole saw with both hands to avoid loss of control.
7. **Always use head protection when operating the pole saw overhead.** Falling debris can result in serious personal injury.
8. **Keep handles dry, clean, and free from oil and grease.**
9. **Do not touch guide bar tip to any object.** Tip contact may cause guide bar to move suddenly upward and backwards.
10. **Do not operate Pole Saw from within a tree.** Operation of tool while up in a tree may result in personal injury.
11. **Keep proper footing and operate the garden power tool only when standing on fixed, secure and level surface.** Slippery or unstable surfaces such as ladders may cause a loss of balance or control of the garden power tool.
12. **When cutting a limb that is under tension, be alert for spring back.** When the tension in the wood fibers is released, the limb may strike the operator and/or throw the tool out of control.
13. **Do not use for bore cutting, felling or bucking.**
14. **Keep bystanders and other workers at least 50 feet from the work area.**
15. **Do not operate within 50 feet of electrical lines.**
16. **Use extreme caution when cutting brush and saplings.** The slender material may catch the saw chain and be whipped around.
17. **Follow instructions for lubricating, chain tensioning and changing accessories.** Improperly tensioned or lubricated chain may either break or increase the chance for kickback.
18. **Kickback is the result of tool misuse and/or incorrect operating procedures or conditions.** Kickback may occur when the nose or tip of the guide bar touches an object, or when the wood closes in and pinches the saw chain in the cut.

Kickback can be avoided by taking proper precautions as given below:
 - a. Maintain a firm grip, with thumbs and fingers encircling the Pole Saw handles, with both hands on the saw and position your body and arm to allow you to resist kickback forces. Kickback forces can be controlled by the operator, if proper precautions are taken. Do not let go of the garden power tool.
 - b. Do not overreach. This helps prevent unintended tip contact and enables better control of the garden power tool in unexpected situations.

- c. Only use replacement bars and chains specified by the manufacturer. Incorrect replacement bars and chains may cause chain breakage and/or kickback.
- d. Follow the manufacturer's sharpening and maintenance instructions for the saw chain. Decreasing the depth gauge height can lead to increased kickback.

19. **Use for cutting wood only.** Do not use for cutting plastic, masonry or non-wood building materials.

20.  The battery Charger gets hot during use. The Charger's heat can build up to unsafe levels and create a fire hazard if it does not receive adequate ventilation, due to an electrical fault, or if it is used in a hot environment.
Do not place the Charger on a flammable surface.
Do not obstruct any vents on the Charger.
Especially avoid placing the Charger on carpets

and rugs; they are not only flammable, but they also obstruct vents under the Charger.

Place the Charger on a stable, solid, nonflammable surface (such as a stable metal workbench or concrete floor) at least 1 foot away from all flammable objects, such as drapes or walls. Keep a fire extinguisher and a smoke detector in the area. Frequently monitor the Charger and Battery Pack while charging.

21. **Maintain labels and nameplates on the appliance.** These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.
22. **The warnings, precautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur.** It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.



SAVE THESE INSTRUCTIONS.

Specifications

Charger Input Rating	120VAC / 60Hz
Charger Output Rating	36VDC / 3.3A
Battery Rating	40VDC / 2.5Ah / 90Wh
Battery Type	40V Lynxx Li-Ion
Guide Bar	Either Oregon 10" 90 or 91 Sprocket Nose
Saw Chain	Either Oregon 10" 90 or 91 Low Kickback
Lubrication	Bar and chain oil (sold separately) If not available, SAE 30W motor oil may be used

Grounding

WARNING



TO PREVENT ELECTRIC SHOCK AND DEATH FROM INCORRECT GROUNDING:

Check with a qualified electrician if you are in doubt as to whether the outlet is properly grounded. Do not modify the power cord plug provided with the charger. Do not use the charger if the power cord or plug is damaged. If damaged, have it repaired by a service facility before use. If the plug will not fit the outlet, have a proper outlet installed by a qualified electrician.

Extension Cords

Note: Extension cords must not be used with this item's Charger.


Setup - Before Use:



Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

Note: For additional information regarding the parts listed in the following pages, refer to *Parts List and Diagram* on page 14.

Functions

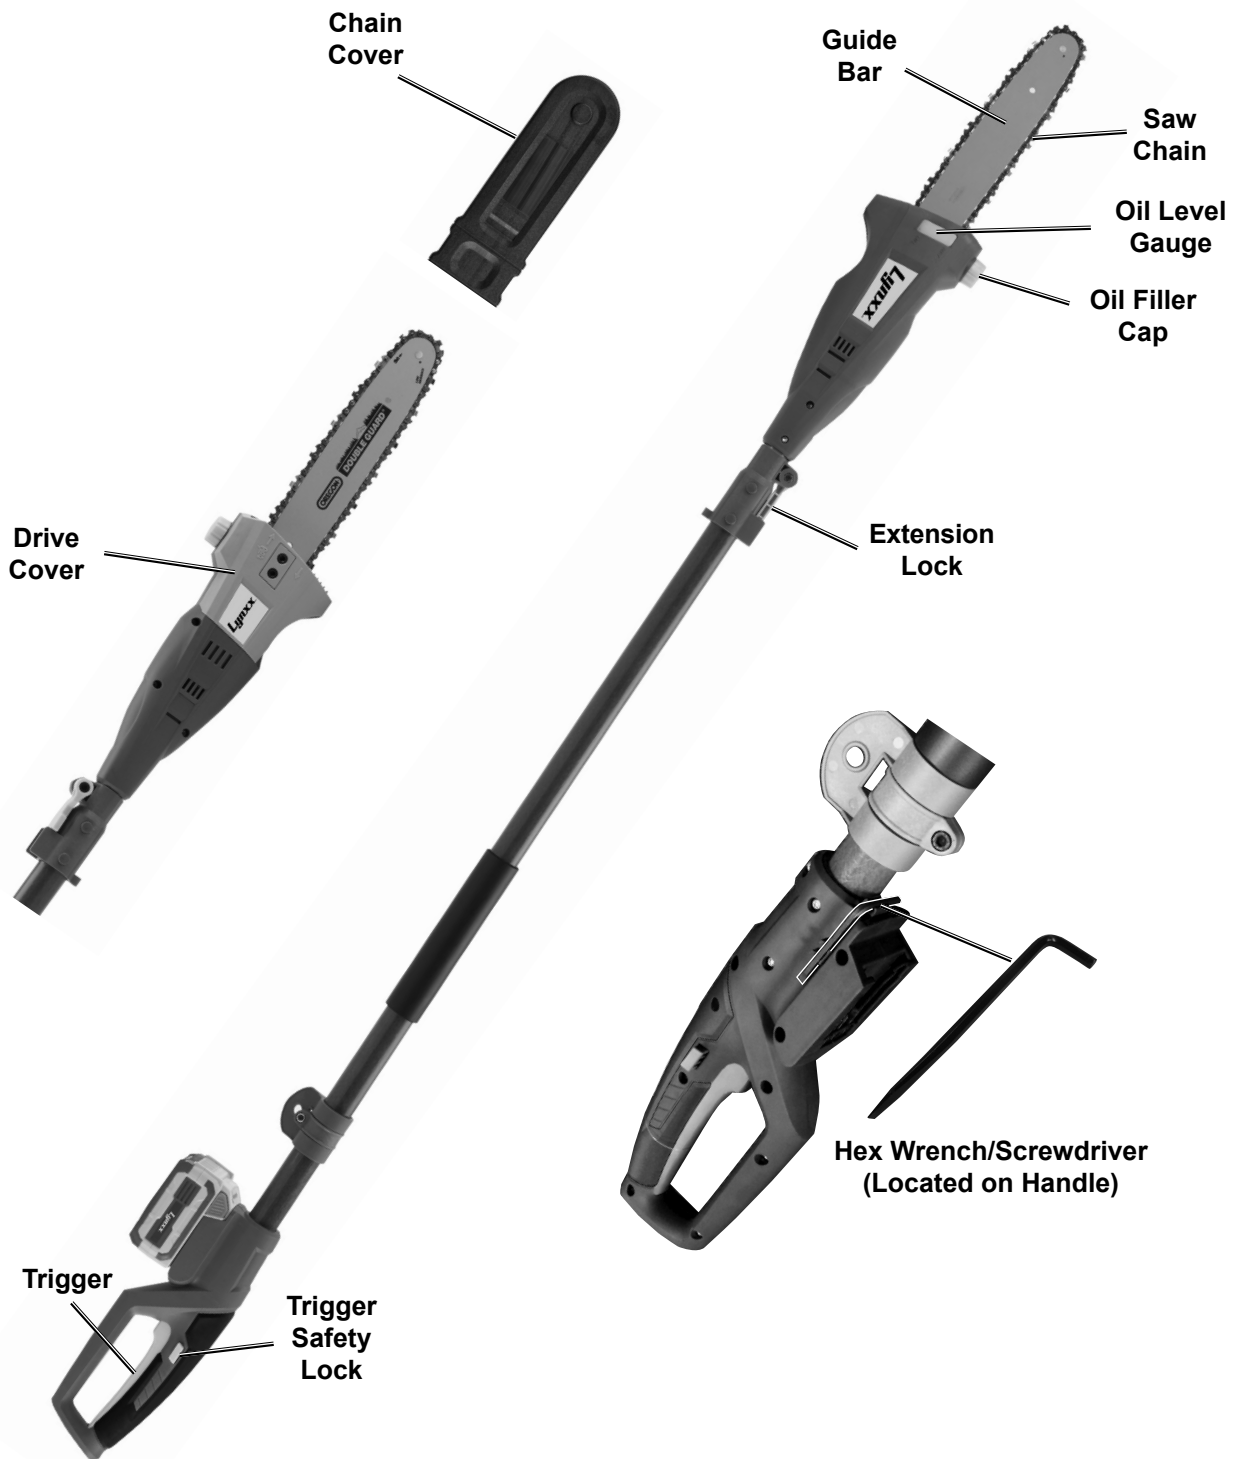

Assembly Instructions



Read the **ENTIRE IMPORTANT SAFETY INSTRUCTIONS** section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

⚠ WARNING


TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION:

Release the Trigger and remove Battery Pack before assembling or making any adjustments.


Install Guide Bar and Saw Chain

CAUTION! Wear heavy-duty work gloves when handling Saw Chain.


1. **BEFORE FIRST USE:** Soak Saw Chain in bar and chain oil (sold separately) overnight.
2. Remove Drive Cover Hex Bolts using Hex Wrench end of included tool (located on Handle), then remove Drive Cover.

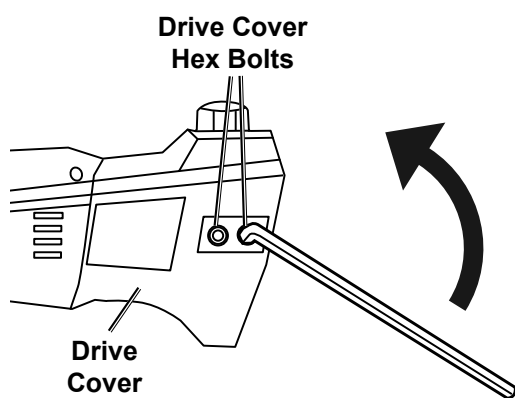


3. Loosen Tensioning Screw using Screwdriver end of tool.

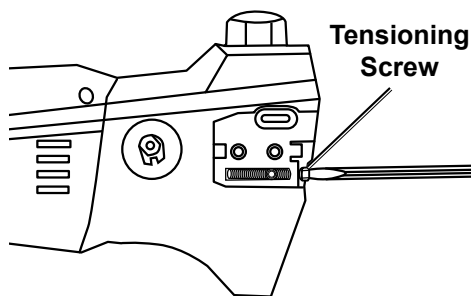


4. Slide Saw Chain's drive links into Guide Bar's groove, making sure chain is installed in correct rotation direction.

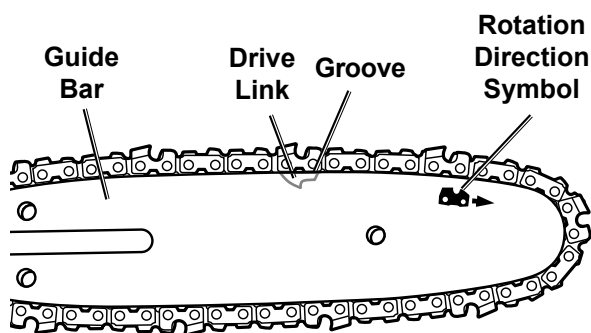

5. Place Saw Chain around Drive Sprocket, place Guide Bar's lower oil hole over Tension Pin.

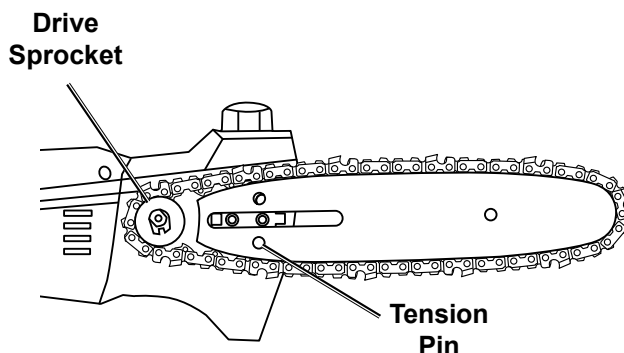

6. Tighten Tensioning Screw until bottoms of cutters contact bottom of Guide Bar, then tighten an additional 1/4 turn.
7. Replace Drive Cover, then tighten Drive Cover Hex Bolt.

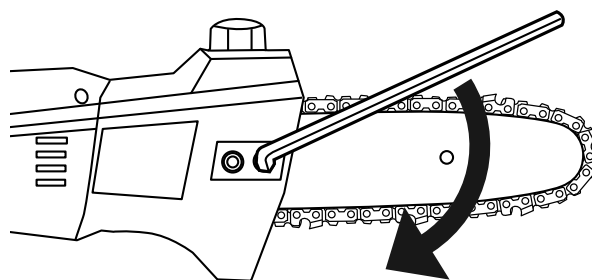

8. Tension Saw Chain according to **Tension Saw Chain** on page 8.

Tension Saw Chain

CAUTION! Wear heavy-duty work gloves when handling Saw Chain.

NOTICE: To prevent damage to Saw Chain, *do not tension hot chain*. Let chain cool before tensioning.

Check tension:

- a. Before every use.
 - b. Often during first half hour of use.
 - c. Periodically during use.
1. Snap Test: Pull Saw Chain away from bottom of Guide Bar, then let go. Saw Chain should snap back to its original position, solidly contacting bottom of Guide Bar.
 2. Pull Saw Chain by hand around Guide Bar several times, it should feel snug and move freely around Guide Bar.
 3. Adjust tension as necessary by tightening or loosening Tensioning Screw, then repeating steps 1. and 2., until proper tension is achieved.

Fill Automatic Oiler Reservoir


NOTICE: To prevent damage to Saw Chain, Drive Bar and Drive Sprocket, keep Oil Reservoir full. Do not operate Pole Saw without oil. Do not put used oil in Reservoir.

Note: Oil is automatically applied to the Saw Chain during operation.

Fill Oiler Reservoir:


- a. Before every use.
 - b. When oil level reaches MIN mark on Oil Level Gauge.
1. Remove Oil Fill Cap.
 2. Using funnel, fill tank with bar and chain oil (sold separately).
 3. Use clean cloth to remove excess oil.

4. Replace Oil Fill Cap and tighten.

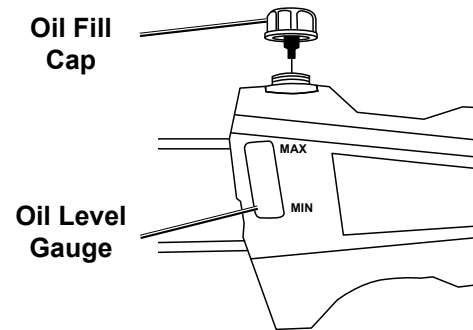


Attach Shoulder Strap

1. If desired, change location of Shoulder Strap Connector by loosening Hex Bolt, moving Connector, then tightening Hex Bolt securely.
2. Clip Shoulder Strap into hole on Connector.

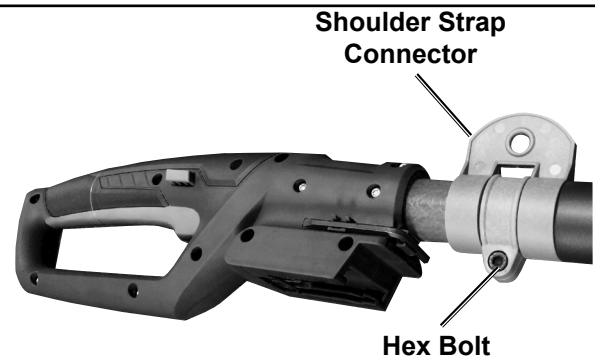

Adjust Pole Saw Length

1. With Pole Saw parallel to ground, move Extension Lock to unlocked position.
2. Pull on motor housing to expose extension pole. Pull out to desired length, then move Extension Lock to locked position until it clicks into place.

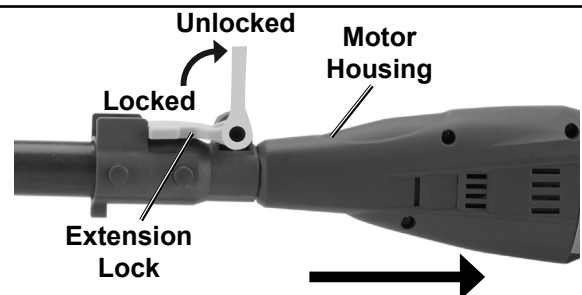

WARNING! To prevent serious injury, check Extension Lock for tightness periodically during use.

Operating Instructions



Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

- Before operating the gardening appliance, put on ANSI-approved safety goggles, hard hat and other safety gear. Safety goggles and other safety gear are sold separately.

Charging Battery Pack

1. Place Battery Charger on a dry, flat, fireproof surface indoors.

Note: Allow battery to cool completely before charging.

2. Examine Battery Pack. **Do not charge a cracked, open, or leaking Battery Pack, or charge a non-recommended type of Battery Pack.**

3. Battery Pack is designed to fit this Charger specifically. If Battery Pack does not fit Charger properly, do not try to insert it. **Do not force Battery Pack into the Charger.**

4. Plug Charger into a grounded, 120VAC, 60Hz receptacle. Green LED will blink, showing that power is supplied to the charger.

5. Slide Battery Pack onto Charger. Red LED will light continuously while charging.

Note: A fully discharged Battery Pack will take about 1 hour to fully charge.

Note: While charging, Battery Pack and Charger may become warm to the touch and the Charger's fan may come on. This is normal.

6. Green LED will light continuously when Battery Pack is charged. Unplug Charger and remove Battery Pack when finished.
7. Allow Battery Pack to cool completely before use.

Installing and Removing Battery Pack

1. To install: Slide Battery Pack into slot on handle until it clicks into place.
2. To remove: Press both Battery Pack Release Buttons and pull Battery Pack out of slot.



Workpiece and Work Area Set Up

1. Designate a work area that is clean and well lit. The work area must not allow access by children or pets to prevent distraction and injury.
2. There must not be objects, such as utility lines, nearby that will present a hazard while working.

Operation

SAFETY

⚠ DANGER

TO PREVENT SERIOUS INJURY AND DEATH:

- **Wear ANSI-approved safety goggles, hard hat and steel-toed boots during use.**
- **Avoid kick back. Do not touch Guide Bar tip to any object.** Tip contact may cause guide bar to move suddenly upward and backwards.
- **Do not operate Pole Saw with one hand.** Only hold Pole Saw with both hands. Do not stand directly under branch being cut.
- **Only stand on fixed, secure and level surface.** Do not stand on a ladder or other support.
- **Do not operate within 50 feet of electrical lines.**

ASSEMBLY


BEFORE EVERY USE:

- a. Check oil level, add oil as necessary (**see Fill Automatic Oiler Reservoir on page 8**).
- b. Run Pole Saw at half throttle for several minutes (**see step 3. below**).
- c. Stop motor and remove Battery Pack. **Let chain cool**, then check tension and adjust as necessary (**see Tension Saw Chain on page 8**).
- d. Make sure Saw Chain is sharp.
- e. Make sure Automatic Oiler is distributing oil.


DURING EVERY USE:

- a. Check tension often during the first half hour of use and periodically during use. Adjust tension as necessary (**see Tension Saw Chain on page 8**).
- b. Check oil level every 10 minutes of use. Fill oil reservoir when oil level reaches **MIN** mark on Oil Level Gauge (**see Fill Automatic Oiler Reservoir on page 8**).


1. Loosen Shoulder Strap, then place over shoulder. Tighten Shoulder Strap, making sure shoulder pad is on top of shoulder.
2. Adjust Pole Saw length as desired.
3. To start, push and hold Trigger Safety Lock, then squeeze and hold Trigger. Release Trigger Safety Lock. To stop, release Trigger.

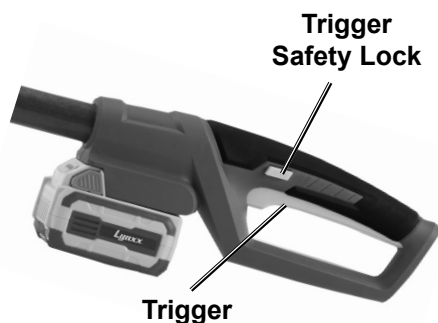

4. Maintain a firm grip, with thumbs and fingers encircling the Pole Saw's handles, with both hands on the saw and position your body and arm to allow you to resist kickback forces.

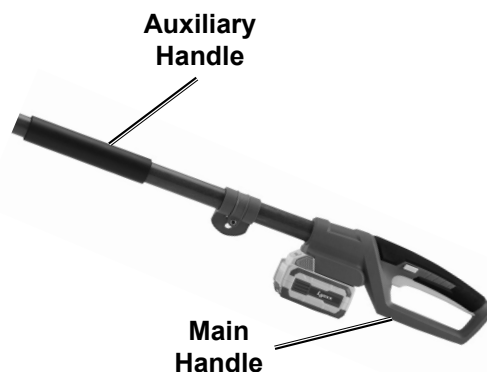

5. Hold the Pole Saw to the side of your body at maximum 60° from horizontal. Do not overreach.

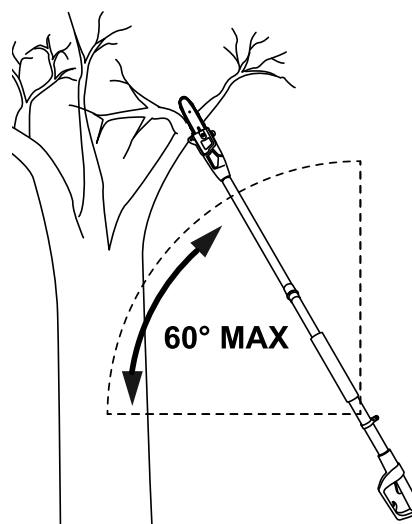

6. Make sure Saw is running at full speed before starting a cut.
7. Cut lower branches first.
8. Do not force Pole Saw, let Pole Saw do the work.
9. Remove the Pole Saw from a cut while it is running.


OPERATION

MAINTENANCE

WARNING! To prevent serious injury, if branch starts to fall, causing the saw to bind, leave the saw and get away from where the saw and branch are likely to fall immediately.


Cutting Long Branches

- a. Make first cut 4" to 6" from end of branch.
- b. Make next cuts 4" to 6" from the previous cuts, working toward the trunk.

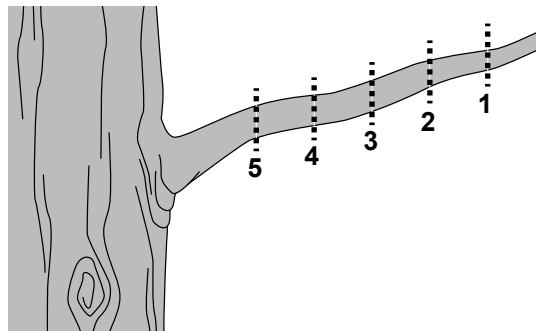

Cutting Thick Branches:

- c. Make first cut 6" away from trunk, on underside, 1/3 way into branch.
- d. Make second cut 2" away. Sever branch from the top.
- e. Make third cut close to the trunk, on underside, 1/3 way into branch.
- f. Make fourth cut from top, severing branch.

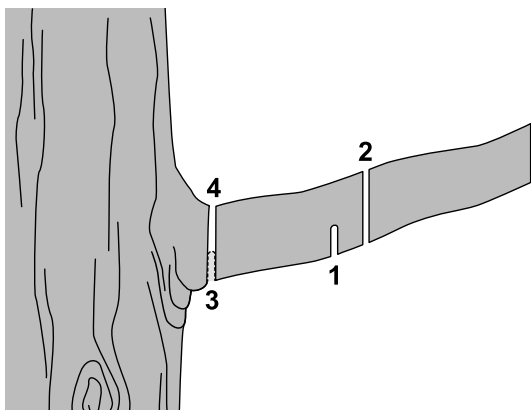

10. When finished:

- a. Release Trigger and remove Battery Pack.

CAUTION! To prevent injury, be prepared for extension pole to return to normal position on its own. Extension pole is is spring loaded.

- b. With Pole Saw parallel to ground, move Extension Lock to unlocked position. Pull extension pole back in, then move Extension Lock to locked position until it clicks into place.
- c. Clean, then store according to **Cleaning, Maintenance and Lubrication** on page 12.

Lynxx[®]

User-Maintenance and Storage



Procedures not specifically explained in this manual must be performed only by a qualified technician.

⚠ WARNING

TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION OR ELECTRIC SHOCK: Release the Trigger and remove the Battery Pack before performing any inspection, maintenance, or cleaning procedures.

TO PREVENT SERIOUS INJURY FROM TOOL FAILURE: Do not use damaged equipment. If abnormal noise or vibration occurs, have the problem corrected before further use.

Cleaning, Maintenance and Lubrication

1. **BEFORE EACH USE**, inspect the general condition of the tool. Check for:
 - leaking, swollen, or cracked battery pack,
 - loose hardware
 - misalignment or binding of moving parts
 - cracked or broken parts
 - dull or damaged Saw Chain
 - any other condition that may affect its safe operation.
2. **BEFORE EACH USE**, tension Saw Chain and add bar and chain oil to oil reservoir.
3. **PERIODICALLY OR WHEN REPLACING SAW CHAIN**, turn the Guide Bar over to distribute the wear on it.
Replace the Guide Bar when bent, cracked, or when the Saw Chain moves excessively from side to side on the Guide Bar due to wear (**see Determining Guide Bar Wear on page 13**).
4. **AFTER USE:**
 - a. Remove Drive Cover, Saw Chain and Guide Bar.
 - b. Scrape debris loose from inside Drive Cover and around Drive Sprocket, then wipe with clean cloth and mild soap and water. *Do not use solvents. Do not immerse tool in liquid.*
 - c. Remove sawdust and sap from the Guide Bar's Groove using a bar groove cleaning tool (sold separately).
 - d. Wipe Guide Bar with clean cloth, including oil passages, then lubricate with bar and chain oil.
 - e. Wipe debris from Saw Chain, then lubricate with bar and chain oil.
 - f. Replace Guide Bar, Saw Chain and Drive Cover, leave Saw Chain loose during storage.
 - g. Clean outside surfaces with a clean, dry cloth. If necessary use mild soap and water.
 - h. Place Chain Cover over Saw Chain, then Store Pole Saw in a dry, secure location away from children.
5. **Li-Ion BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY.**
Do not short, incinerate or open battery.

WARNING! This tool comes with either Oregon 90 or 91 Guide Bar and Saw Chain. When replacing Guide Bar, make sure the replacement matches the Saw Chain.

Sharpening/Replacing Saw Chain

1. Have the cutters sharpened by a qualified technician when:
 - a. The sawdust becomes powder-like.
 - b. You can't make the cut without extra force.
 - c. The Pole Saw does not cut straight.
 - d. Vibration increases.
2. A Saw Chain that is damaged or too worn to be restored by sharpening will need to be replaced.


WARNING! This tool comes with either Oregon 90 or 91 Guide Bar and Saw Chain. When replacing Saw Chain, make sure the replacement matches the Guide Bar.

Replacing Drive Sprocket


Have the Drive Sprocket replaced by a qualified technician when the Saw Chain is replaced.

Determining Guide Bar Wear

The rails of the Guide Bar groove should always be parallel to each other. Place a ruler along the side of the Guide Bar and Saw Chain. If there is a gap, the bar is normal.

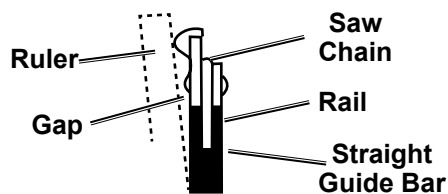

If the ruler is flush with the Guide Bar and Saw Chain, or the Chain tilts to one side, then the Guide Bar is worn and needs to be replaced.

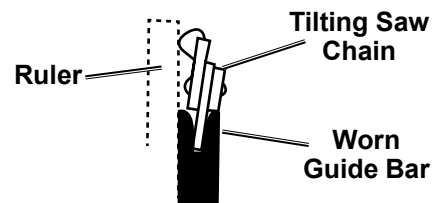

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

Parts List


Part	Description	Qty	Part	Description	Qty
1	Discharge Board	1	35	Oil Pump Cam	1
2	Screw	4	36	Output Shaft	1
3	Left Handle	1	37	Large Bevel Gear	1
4	Switch Board	1	38	Small Bevel Gear	1
5	Trigger Spring	1	39	Screw	2
6	Trigger Safety Lock	1	40	Pressing Plate	1
7	Trigger Safety Lock Spring	1	41	Oil Tube	2
8	Pressing Plate	2	42	Spring	1
9	Screw	20	43	Oil Pump	1
10	Handle Tube	1	44	Screw	3
11	Sponge Sleeve	1	45	Pressing Plate	1
12	Nut	2	46	Nut	2
13	Screw	1	47	Right Housing	1
14	Sleeve	1	48	Adjusting Screw	1
15	Shoulder Strap Connector	1	49	Nut	1
16	Pin	4	50	Limit Plate	1
17	Locking Sleeve	1	51	Sealing Gasket	1
18	Extension Lock	1	52	Screw	2
19	Screw	1	53	Bar Press Block	1
20	887 Motor	1	54	Drive Cover	1
21	Pad	1	55	Washer	1
22	Support Plate	1	56	Pressing Plate	1
23	Spring Washer	2	57	Sprocket	1
24	Screw	2	58	Spring Line	1
25	Extension Pole	1	59	Microswitch	1
26	Left Housing	1	60	Battery Contact Plate	1
27	Chain Bar	1	61	Battery Contact	3
28	Saw Chain	1	62	Right Handle	1
29	Oiler	1	63	Internal Wire	1
30	Oil Fill Cap Tether	1	64	Chain Cover	1
31	Breather Valve	1	65	Hex Wrench/Screwdriver	1
32	Washer	1	66	Shoulder Strap	1
33	Oil Fill Cap	1	67	Battery Pack	1
34	Ball Bearing	2	68	Charger	1

Record Product's Serial Number Here: _____

Note: If product has no serial number, record month and year of purchase instead.

Note: Some parts are listed and shown for illustration purposes only, and are not available individually as replacement parts.

Assembly Diagram

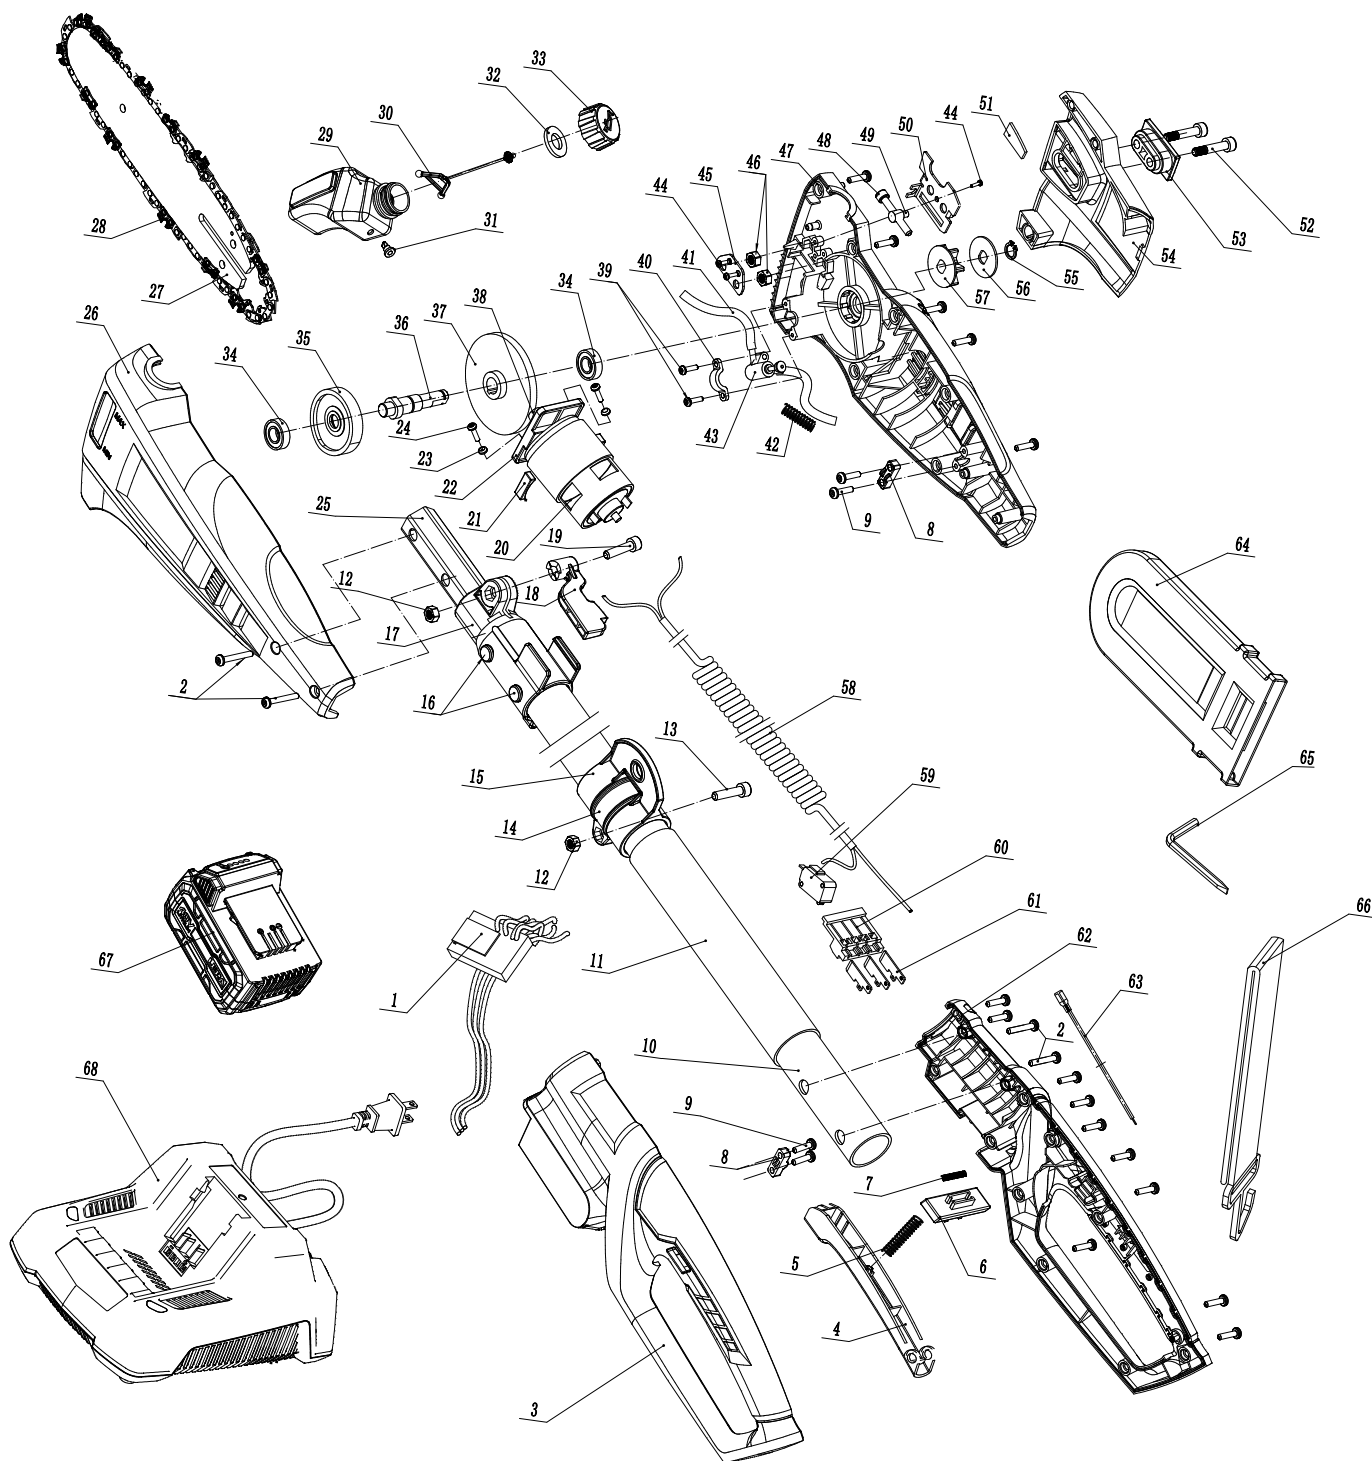

SAFETY

ASSEMBLY

OPERATION

MAINTENANCE

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

The logo for Lynxx, featuring the word "Lynxx" in a bold, italicized, sans-serif font. The letters are black, and there is a registered trademark symbol (®) at the end of the word.