


Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's date code in the back of the manual near the assembly diagram (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

25f

Bauer™ **20v LITHIUM-ION**

19115C-B

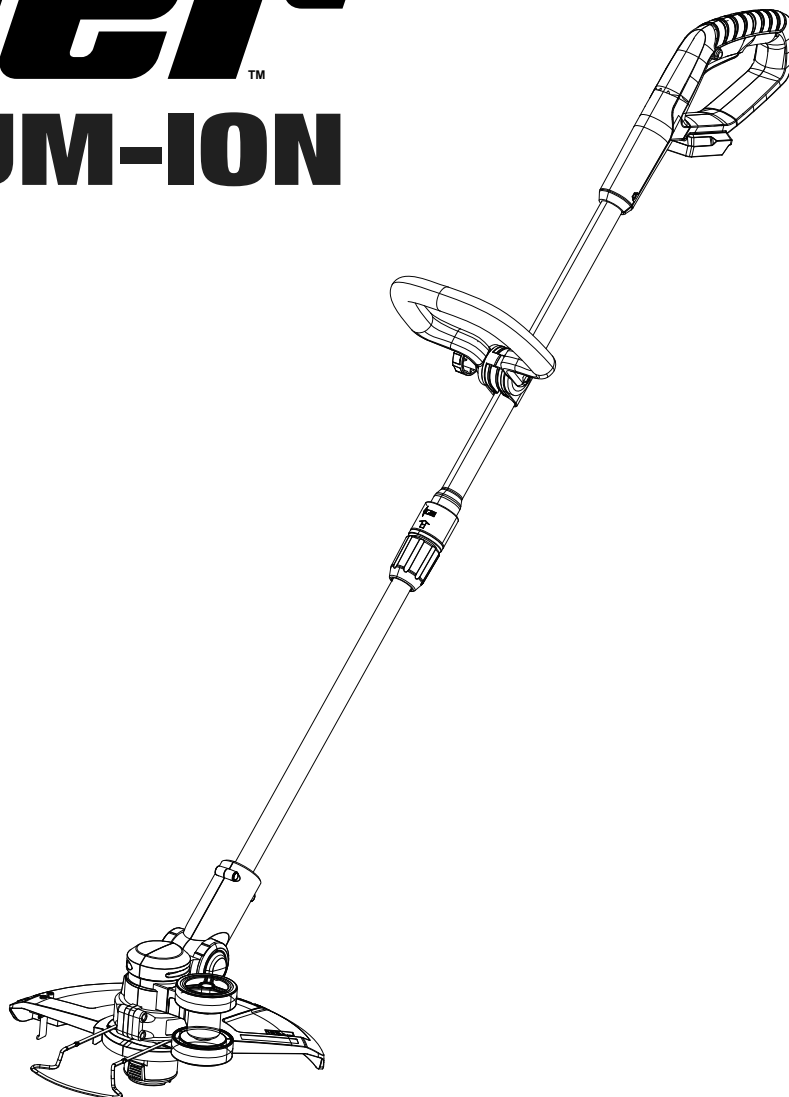

12" CORDLESS STRING TRIMMER

Visit our website at: <https://www.harborfreight.com>
Email our technical support at: productsupport@harborfreight.com

64995

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-800-444-3353 as soon as possible.

Copyright© 2025 by Harbor Freight Tools®. All rights reserved.

No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

⚠ WARNING

Read this material before using this product. Failure to do so can result in serious injury.
SAVE THIS MANUAL.

Table of Contents

Safety	2	Maintenance	12
Specifications	6	Parts List and Diagram	14
Setup	6	Warranty	16
Operation.....	6		

Bauer

WARNING SYMBOLS AND DEFINITIONS

	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
 DANGER	Indicates a hazardous situation which, if not avoided, will result in death or serious injury.
 WARNING	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
 CAUTION	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
NOTICE CAUTION	Addresses practices not related to personal injury.

IMPORTANT SAFETY INSTRUCTIONS

WARNING

When using electric gardening appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury, including the following:

Read All Instructions

Gardening Appliance Use and Care

1. Avoid Dangerous Environment - Do not use appliances in damp or wet locations.
2. Do not Use In Rain.
3. Keep Children Away - All visitors should be kept at a distance from work area.
4. Dress Properly - Do not wear loose clothing or jewelry. They can be caught in moving parts. Use of rubber gloves and substantial footwear is recommended when working outdoors. Wear protective hair covering to contain long hair.
5. Use Safety Glasses - Always use face or dust mask if operation is dusty.
6. Use Right Appliance - Do not use appliance for any job except that for which it is intended.
7. Avoid Unintentional Starting - Don't carry plugged-in appliance with finger on switch. Be sure switch is off when plugging in.
8. Do not Force Appliance - It will do the job better and with less likelihood of injury at the rate for which it was designed.
9. Don't Overreach - Keep proper footing and balance at all times.
10. Stay Alert - Watch what you are doing. Use common sense. Do not operate appliance when you are tired.

11. Store Idle Appliances Indoors - When not in use, appliances should be stored indoors in dry, and high or locked-up place - out of reach of children.
12. Maintain Appliance With Care - Keep cutting edge sharp and clean for best performance and to reduce the risk of injury. Follow instructions for lubricating and changing accessories. Inspect appliance cord periodically, and if damaged, have it repaired by an authorized service facility. Inspect extension cords periodically and replace if damaged. Keep handles dry, clean, and free from oil and grease.
13. Check Damaged Parts - Before further use of the appliance, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other condition that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by a qualified technician unless indicated elsewhere in this manual.
14. Keep guards in place and in working order.
15. Keep hands and feet away from cutting area.
16.  **Wear thick jeans and steel-toed work boots to help prevent injury caused by flying debris.**
17. When servicing use only identical replacement parts.
18. Only replace the line on this appliance with the line material and diameter of line listed on the Specifications table. Other materials, such as wire, rope, or blades can damage the appliance and be forcefully and dangerously ejected from the appliance upon breaking.

Battery Tool Use and Care

1. **Prevent unintentional starting.** *Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.*
2. **Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance.** *Such preventive safety measures reduce the risk of starting the appliance accidentally.*
3. **Recharge only with the charger specified by the manufacturer.** *A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.*
4. **Use appliance only with specifically designated battery packs.** *Use of any other battery packs may create a risk of injury and fire.*
5. **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** *Shorting the battery terminals together may cause burns or a fire.*
6. **Under abusive conditions, liquid may be ejected from the battery; avoid contact.** *If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.*
7. **Do not use a battery pack or appliance that is damaged or modified.** *Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.*
8. **Do not expose a battery pack or appliance to fire or excessive temperature.** *Exposure to fire or temperature above 140°F may cause explosion.*
9. **Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions.** *Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.*
10. **Have servicing performed by a qualified repair person using only identical replacement parts.** *This will ensure that the safety of the product is maintained.*
11. **Do not modify or attempt to repair the appliance or the battery pack except as indicated in the instructions for use and care.**
12.  The battery Charger gets hot during use. The Charger's heat can build up to unsafe levels and create a fire hazard if it does not receive adequate ventilation, due to an electrical fault, or if it is used in a hot environment. Do not place the Charger on a flammable surface. Do not obstruct any vents on the Charger. **Especially avoid placing the Charger on carpets and rugs; they are not only flammable, but they also obstruct vents under the Charger.** Place the Charger on a stable, solid, nonflammable surface (such as a stable metal workbench or concrete floor) at least 1 foot away from all flammable objects, such as drapes or walls. Keep a fire extinguisher and a smoke detector in the area. Frequently monitor the Charger and Battery Pack while charging.

Lithium Battery Safety Warnings



LITHIUM BATTERIES STORE A LARGE AMOUNT OF ENERGY AND WILL VENT FIRE OR EXPLODE IF MISTREATED:

1. Keep Battery Pack dry.

2. **DO NOT DO ANY OF THE FOLLOWING TO THE BATTERY PACK:**
 - a. Open,
 - b. Drop,
 - c. Short-circuit,
 - d. Puncture,
 - e. Incinerate, or
 - f. Expose to temperatures greater than 140°F.
3. Charge Battery Pack only according to its Charger's instructions.
4. Inspect Battery Pack before every use; do not use or charge if damaged.

Vibration Hazard

This appliance vibrates during use. Repeated or long-term exposure to vibration may cause temporary or permanent physical injury, particularly to the hands, arms and shoulders. To reduce the risk of vibration-related injury:

1. Anyone using vibrating appliances regularly or for an extended period should first be examined by a doctor and then have regular medical check-ups to ensure medical problems are not being caused or worsened from use. Pregnant women or people who have impaired blood circulation to the hand, past hand injuries, nervous system disorders, diabetes, or Raynaud's Disease should not use this appliance. If you feel any symptoms related to vibration (such as tingling, numbness, and white or blue fingers), seek medical advice as soon as possible.
2. Do not smoke during use. Nicotine reduces the blood supply to the hands and fingers, increasing the risk of vibration-related injury.
3. Wear suitable gloves to reduce the vibration effects on the user.
4. Use appliances with the lowest vibration when there is a choice between different processes.
5. Include vibration-free periods each day of work.
6. Grip appliance as lightly as possible (while still keeping safe control of it). Let the appliance do the work.
7. To reduce vibration, maintain the appliance as explained in this manual. If any abnormal vibration occurs, stop use immediately.

General Safety

1. The spool will continue to rotate for a few seconds after use. Allow it to stop completely and remove battery before putting the appliance down, making any adjustments, or servicing the appliance.
2. Do not use in rain, snow, sprinklers, or wet grass. Do not rinse off the Trimmer.
3. Use only during daylight hours.
4. Carefully inspect the wire spool and guard before attaching battery pack to the Trimmer. Do not use Trimmer if any part is cracked or damaged.
5. Cover the Trimming Blade after every use.
6. Maintain labels and nameplates on the appliance. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.
7. The warnings, precautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.



SAVE THESE INSTRUCTIONS.

⚠️ WARNING



TO PREVENT ELECTRIC SHOCK AND DEATH FROM INCORRECT GROUNDING: Check with a qualified electrician if you are in doubt as to whether the outlet is properly grounded. Do not modify the power cord plug provided with the charger. Do not use the charger if the power cord or plug is damaged. If damaged, have it repaired by a service facility before use. If the plug will not fit the outlet, have a proper outlet installed by a qualified electrician.

Extension Cords

Note: Extension cords must not be used with this item's Charger.

Symbology

V	Volts		WARNING marking concerning Risk of Fire. Do not cover Charger ventilation ducts. Charge on fireproof surface only.
=	Direct Current		WARNING marking concerning Risk of Electric Shock. Properly connect Charger's power cord to appropriate outlet.
A	Amperes		WARNING marking concerning Risk of Explosion. Do not puncture, short, or open battery packs and do not charge damaged battery packs.
n0 xxxx/min.	No Load Revolutions per Minute (RPM)		
	WARNING marking concerning Risk of Eye Injury. Wear ANSI-approved safety goggles with side shields.		
	Read the manual before set-up and/or use.		

Specifications

Battery Type	20V Bauer Li-Ion
Charger Type	20V Bauer Li-Ion
No Load Speed	8000 RPM
Cutting Diameter	300mm
Replacement Line Type	0.065" Nylon

Setup - Before Use:



Read the **ENTIRE IMPORTANT SAFETY INSTRUCTIONS** section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

⚠ WARNING

TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION:

Make sure that the Trigger is in the off-position and unplug the tool from its electrical outlet before performing any procedure in this section.


Note: For additional information regarding the parts listed in the following pages, refer to *Parts List and Diagram* on page 22.

Assembly

Installing Guard

WARNING! TO PREVENT SERIOUS INJURY FROM FLYING DEBRIS AND PIECES OF TRIMMING LINE: Install the guard only in the orientation shown.

1. Turn the Trimmer upside down and remove Screw.
2. Align the Guard with the bottom of the Trimmer Head. Slide the tabs on the Guard into the slots on the bottom of the Trimmer Head.
3. Secure the Guard to the Trimmer Head using the Attachment Screw provided. Do not overtighten.

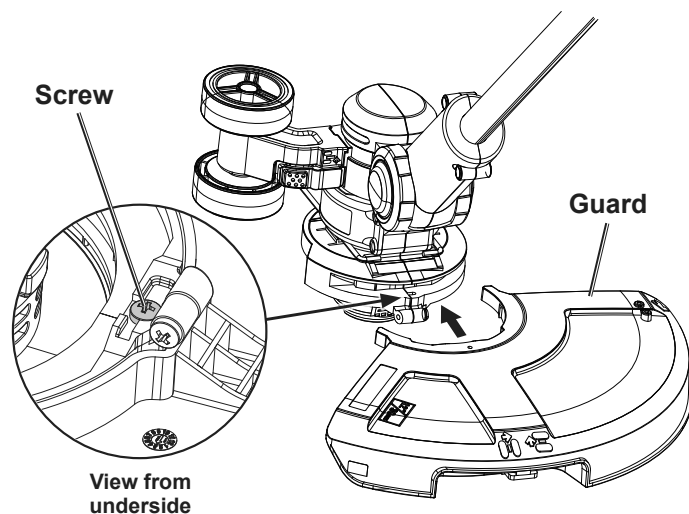


Bauer™

Installing Wheel Assembly

The Wheel Assembly may be installed in one of three optional positions to use the tool for forward and reverse trimming, side to side trimming, or edging procedures.


Edger Wheel Setup

1. Slide the Wheel Assembly down onto the Metal Plate located on the side of the Trimmer Head. Make sure the Wheel Assembly locks onto the Plate—it will click into place when properly installed.
2. Remove the Wheel Assembly by pushing in on the Tab and pulling up on the Wheels.

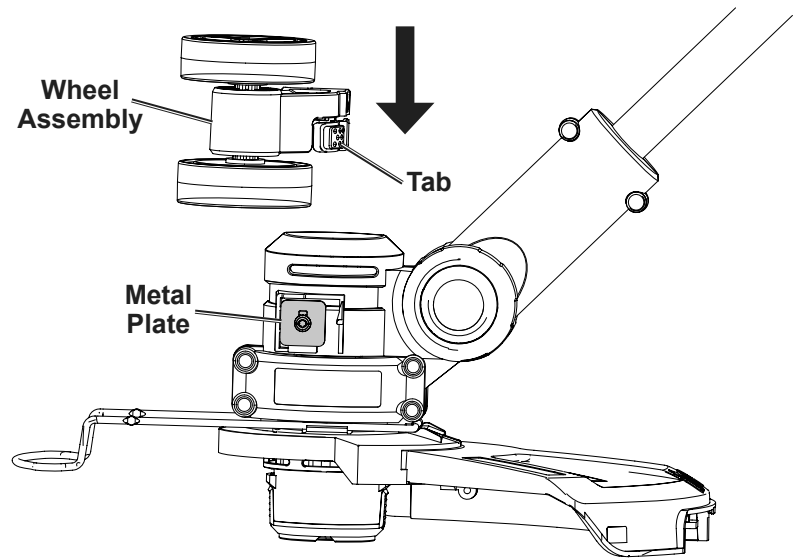

Forward and Reverse Trimming Wheel Setup


1. Turn the Trimmer upside down. Slide the Wheel Assembly horizontally with wheels facing forward onto the Metal Plate located on the underside of the Guard. Make sure the Wheel Assembly locks onto the Plate—it will click into place when properly installed.
2. Remove the Wheel Assembly by pushing in on the Tab and pulling Wheels away from the Metal Plate.

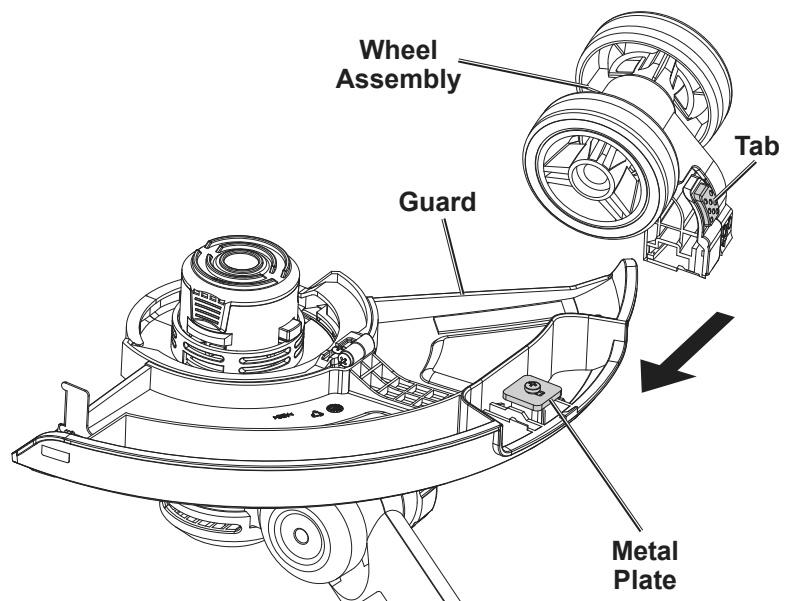


Bauer™

Side to Side Trimming Wheel Setup

1. Turn the Trimmer upside down. Slide the Wheel Assembly vertically with wheels facing sideways onto the Metal Plate located on the underside of the Guard. Make sure the Wheel Assembly locks onto the Plate—it will click into place when properly installed.
2. Remove the Wheel Assembly by pushing in on the Tab and pulling Wheels away from the Metal Plate.

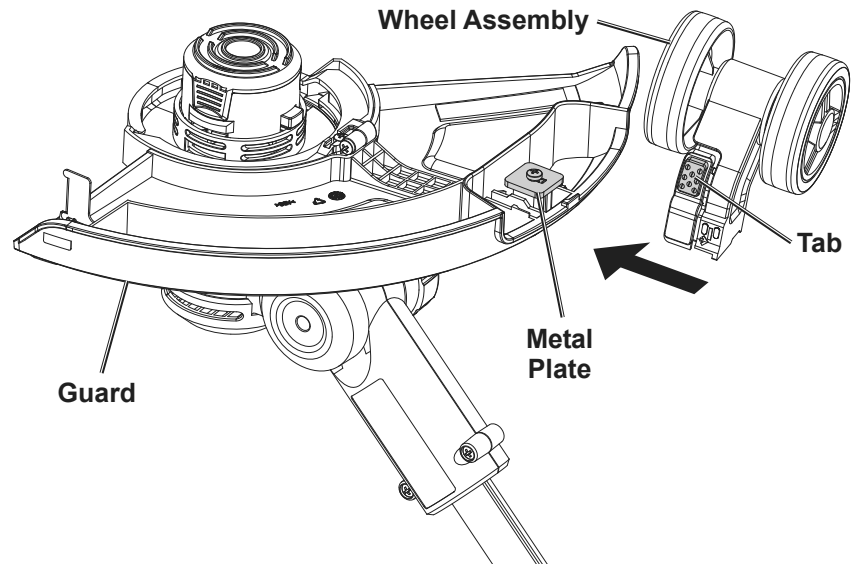

Functions

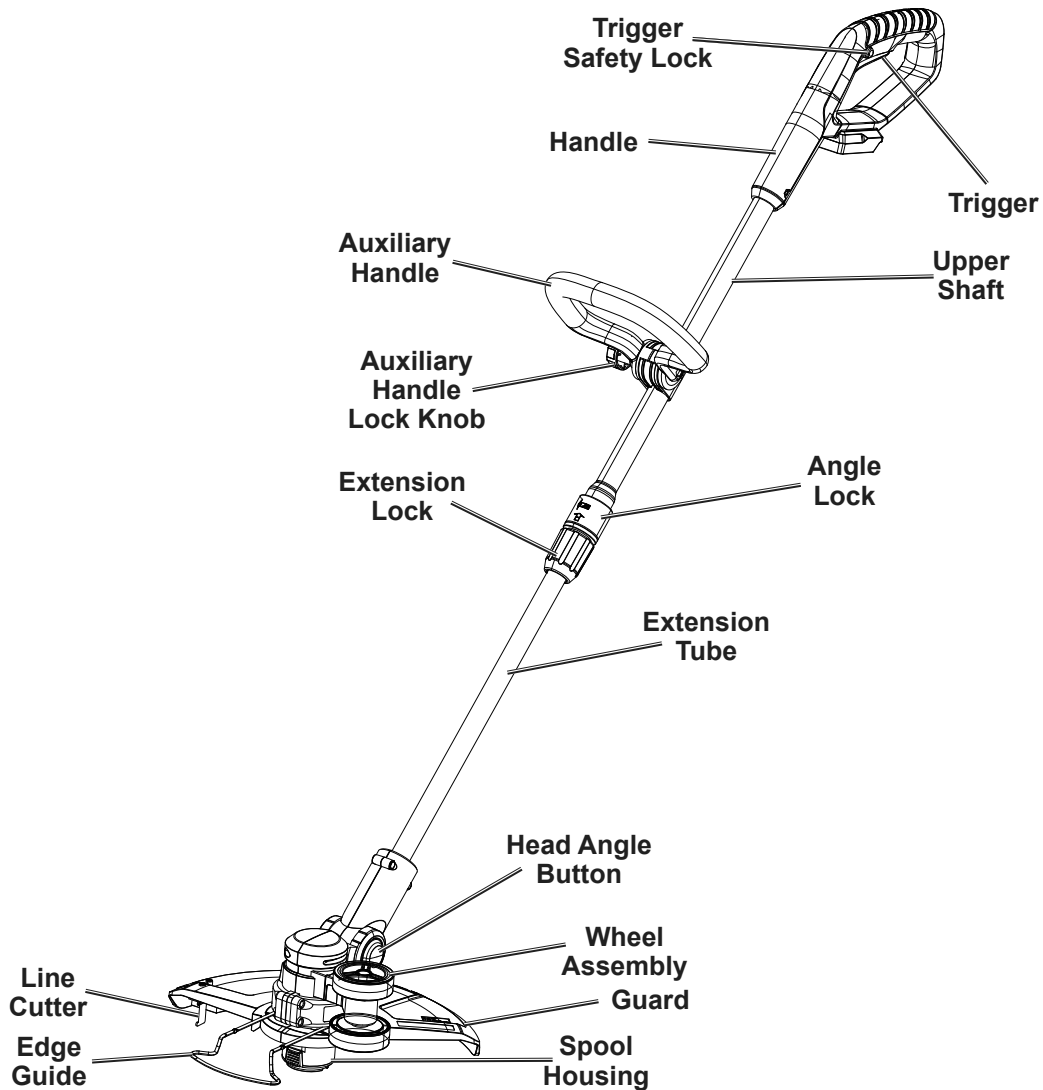

Available Accessories/Attachments

⚠ WARNING

Use of any accessory or attachment other than those listed below may increase the risk of serious injury.

Only replace the line on this appliance with the line material and diameter of line listed on the Specifications table. Other materials, such as wire, rope, or blades can damage the appliance and be forcefully and dangerously ejected from the appliance upon breaking.

Operating Instructions



Read the **ENTIRE** IMPORTANT SAFETY INSTRUCTIONS section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

⚠ WARNING

TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION:

Make sure that the Trigger is in the off-position and remove its Battery Pack before performing any procedure in this section.

TO PREVENT SERIOUS INJURY:

Before operating the garden appliance, put on ANSI-approved safety goggles, closed-toe work boots, long pants, and other safety gear. Safety goggles and other safety gear are sold separately.

TO PREVENT SERIOUS INJURY AND PROPERTY DAMAGE:


Inspect the area before using the String Trimmer. Remove all hard objects from work area. Use both hands when operating Trimmer.

Charging

Charge Battery before using this tool. Follow instructions included with Battery Charger. Battery Pack and Charger sold separately.

Replacing Spool


1. Press tabs on Spool Cover, remove Spool Cover, then remove old Spool from Spool Housing.
2. Clean interior of Spool Housing with soft cloth.
3. Replace with new Spool, insert Line through Line Outlet in Spool Housing and pull line out past Line Cutter.
4. Replace Spool Cover.

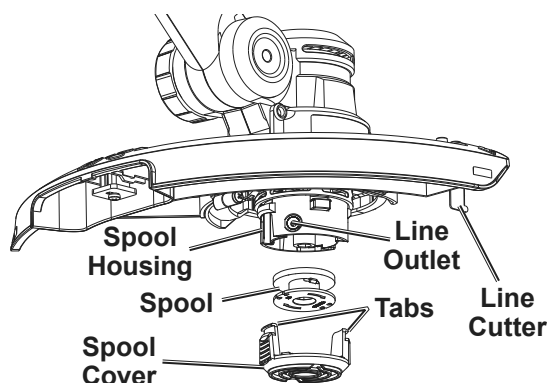


Replacing Nylon Line

WARNING! TO PREVENT SERIOUS INJURY: Only replace the line on this tool with the line material and diameter of line listed on the Specifications table. Other materials, such as wire, rope, or blades can damage the tool and be forcefully and dangerously ejected from the tool upon breaking.

1. Press tabs on Spool Cover, remove Spool Cover, then remove Spool from Spool Housing.
2. Remove old line from Spool.
3. Clean interior of Spool Housing with soft cloth.

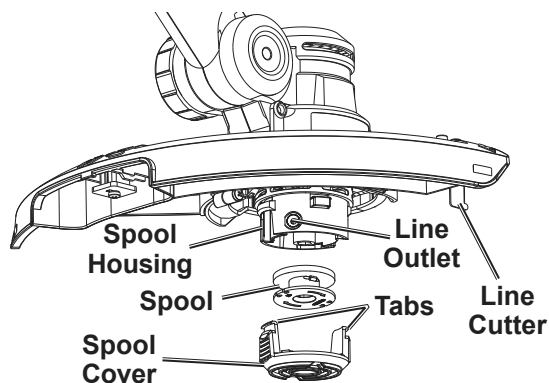

4. Insert end of Nylon Line (up to 10 feet) into Line Insertion Hole.
5. Wrap Line onto Spool in neat, straight rows, under tension, following arrow direction on top of Spool.

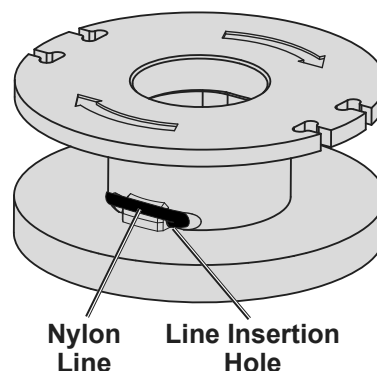

6. Replace Spool, insert Line through Line Outlet in Spool Housing and pull line out past Line Cutter.
7. Replace Spool Cover.

Workpiece and Work Area Set Up

1. Designate a work area that is clean and well lit. The work area must not allow access by children or pets to prevent distraction and injury.
2. There must not be objects, such as utility lines, nearby that will present a hazard while working.

Automatic Line Feeder

NOTICE: To prevent damage to Trimmer, **DO NOT BUMP SPOOL HOUSING ON GROUND.** This string trimmer feeds Line automatically when stopping and restarting.

1. Press Trigger Safety Lock and Trigger to restart. Line will be fed out and cut to proper length by Line Cutter.
2. If Trimmer is not cutting correctly, Spool may be tangled. Remove Spool and rewind Line.
3. To advance Line by hand, push Line Outlet Button on Spool Housing and pull out Line at the same time. Approximately 1/4" of Line can be pulled out each time the button is pushed.

Bauer™

Trimmer Operation

1. Adjust Auxiliary Handle as necessary. Loosen Auxiliary Handle Lock Knob and move Handle to desired position. Tighten Lock Knob securely after adjustment.
2. Adjust length as necessary by turning Extension Lock clockwise, pulling Extension Tube out to desired length, then turning Extension Lock counterclockwise securely.
3. Adjust head angle by rotating the Head Angle Knob to the unlock position, moving head until desired angle is achieved, then rotating Head Angle Knob back to the lock position.
4. Pull Edge Guide out until it locks into place.
5. If using Wheel Assembly for trimming refer to *Installing Wheel Assembly* on page 7.
6. Install fully charged Battery Pack.

7. Put on safety goggles.

NOTICE: To prevent damage to tool or property, avoid contact with fences, trees, shrubs and the like.

8. Holding Trimmer with both hands, press Trigger Safety Lock, then press Trigger.
9. **DO NOT REST TRIMMER ON GROUND.**
10. Do not force the Trimmer. Use the tip of the Line to do the cutting.
11. Release Trigger when done.
12. When finished, to prevent accidents:
 - Remove Battery Pack.
 - Wipe external surfaces of the tool with clean cloth. Store in a dry, indoor area out of reach of children.

Edger Operation

1. Place the Wheel Assembly in the proper position for edging operation. Refer to *Edger Wheel Setup* on page 7.
2. Pull up on the Angle Lock, rotate Handle/Upper Shaft clockwise 90° and release Angle Lock. The Upper Shaft will click into place.
3. Adjust Auxiliary Handle as necessary. Loosen Auxiliary Handle Lock Knob and move Handle to desired position. Tighten Lock Knob securely after adjustment.
4. Adjust length as necessary by turning Extension Lock clockwise, pulling Extension Tube out to desired length, then turning Extension Lock counterclockwise securely.
5. Adjust head angle by rotating the Head Angle Knob to the unlock position, moving head until desired angle is achieved, then rotating Head Angle Knob back to the lock position.

6. Install fully charged Battery Pack.

7. Put on safety goggles.

NOTICE: To prevent damage to tool or property, avoid contact with fences, trees, shrubs and the like.

8. Rest Trimmer on Wheel Assembly.
9. Holding Trimmer with both hands, press Trigger Safety Lock, then press Trigger.
10. Do not force the Trimmer. Use the tip of the Line to do the cutting.
11. Release Trigger when done.
12. When finished, to prevent accidents:
 - Remove Battery Pack.
 - Wipe external surfaces of the tool with clean cloth. Store in a dry, indoor area out of reach of children.

Bauer™

Maintenance and Servicing Instructions



Procedures not specifically explained in this manual must be performed only by a qualified technician.

WARNING

TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION:

Make sure that the Trigger is in the off-position and remove its Battery Pack before performing any procedure in this section.

TO PREVENT SERIOUS INJURY FROM TOOL FAILURE:

Do not use damaged equipment. If abnormal noise or vibration occurs, have the problem corrected before further use.

Cleaning, Maintenance, and Lubrication

1. **BEFORE EACH USE**, inspect the general condition of the tool. Check for:
 - leaking, swollen, or cracked battery pack,
 - loose hardware,
 - misalignment or binding of moving parts,
 - cracked or broken parts, and
 - any other condition that may affect its safe operation.
2. **AFTER USE**, wipe external surfaces of the tool with clean cloth.
3. Li-Ion BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY.
Do not short, incinerate or open battery.
4. Disconnect battery pack and store battery pack, charger, and tool in dry, indoor area out of reach of children and away from metal objects (i.e., paperclips, coins) to prevent shorting.
5. All parts are permanently lubricated.
Do not use additional lubrication.

Troubleshooting

Problem	Possible Causes	Likely Solutions
Tool will not start.	1. Battery Pack not properly connected. 2. Battery Pack not properly charged. 3. Battery Pack stopped working. 4. Internal damage or wear. (Carbon brushes or bearings, for example.)	1. Remove Battery Pack, make sure there are no obstructions, reinsert the Battery Pack according to its shape (it should only fit one way), and press firmly until the Battery Pack locks in place. 2. Make sure Charger is connected and operating properly. Give enough time for Battery Pack to recharge properly. 3. Dispose of old Battery Pack properly or recycle. Replace Battery Pack. 4. Have technician service tool.
Tool operates slowly.	1. Forcing tool to work too fast. 2. Battery Pack wearing out.	1. Allow tool to work at its own rate. 2. Dispose of old Battery Pack properly or recycle. Replace Battery Pack.
Performance decreases over time.	Carbon brushes worn or damaged.	Have qualified technician replace brushes.
Excessive noise or rattling.	Internal damage or wear. (Carbon brushes or bearings, for example.)	Have qualified technician service tool.
Overheating.	1. Forcing tool to work too fast. 2. Blocked motor housing vents.	1. Allow tool to work at its own rate. 2. Wear ANSI-approved safety goggles and NIOSH-approved dust mask/respirator while blowing dust out of motor using compressed air.
 Follow all safety precautions whenever diagnosing or servicing the tool. Disconnect Battery Pack and Charger power supply before service.		

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

Parts List

Part	Description	Qty
1	Left Handle	1
2	Nut M4	1
3	Spring	1
4	Trigger Safety Lock	1
5	Handle Cover	1
6	Self-Locking Spring	1
7	Switch	1
8	Push Button Spring	1
9	Trigger	1
10	PCBA	1
11	Insert Socket	1
12	Right Handle	1
13	Screw St4x16	13
14	Screw M4x35	1
15	Closed Terminal	2
16	Upper Shaft	1
17	Angle Lock	1
18	Sliding Sleeve	1
19	Slider	2
20	Telescopic Spring	2
21	Fixed Sleeve	1
22	Aluminum Tube Plug	1
23	Extension Tube	1
24	Locking Sleeve	1
25	Head Angle Button	2
26	Button Spring	2
27	Screw St4x10	4


Part	Description	Qty
28	Right Rotating Arm	1
29	Left Rotating Arm	1
30	Screw St2.9x30	1
31	Screw St2.9x18	1
32	Right Decorative Cover	1
33	Right House	1
34	Edge Guide	1
35	Left House	1
36	Left Decorative Cover	1
37	Metal Plate	2
38	Auxiliary Handle	1
39	Nut M6	1
40	Auxiliary Handle Locking Knob	1
41	Auxiliary Handle Rotating Plate	2
42	Auxiliary Handle Holder	1
43	Bolt M6x70	1
44	Guard	1
45	Line Cutter	1
46	Motor	1
47	Shaft Sleeve	1
48	Motor Bracket	1
49	Screw M4x10	2
50	Screw M6x12	1
51	Spool Housing Assembly	1
52	Screw St4.8x12	2
53	Wheel	2
54	Wheel Bracket	1

Record Product's Date Code Here: _____

Note: If product has no date code, record month and year of purchase instead.

Note: Some parts are listed and shown for illustration purposes only, and are not available individually as replacement parts. Specify UPC 193175511553 when ordering parts.

Assembly Diagram

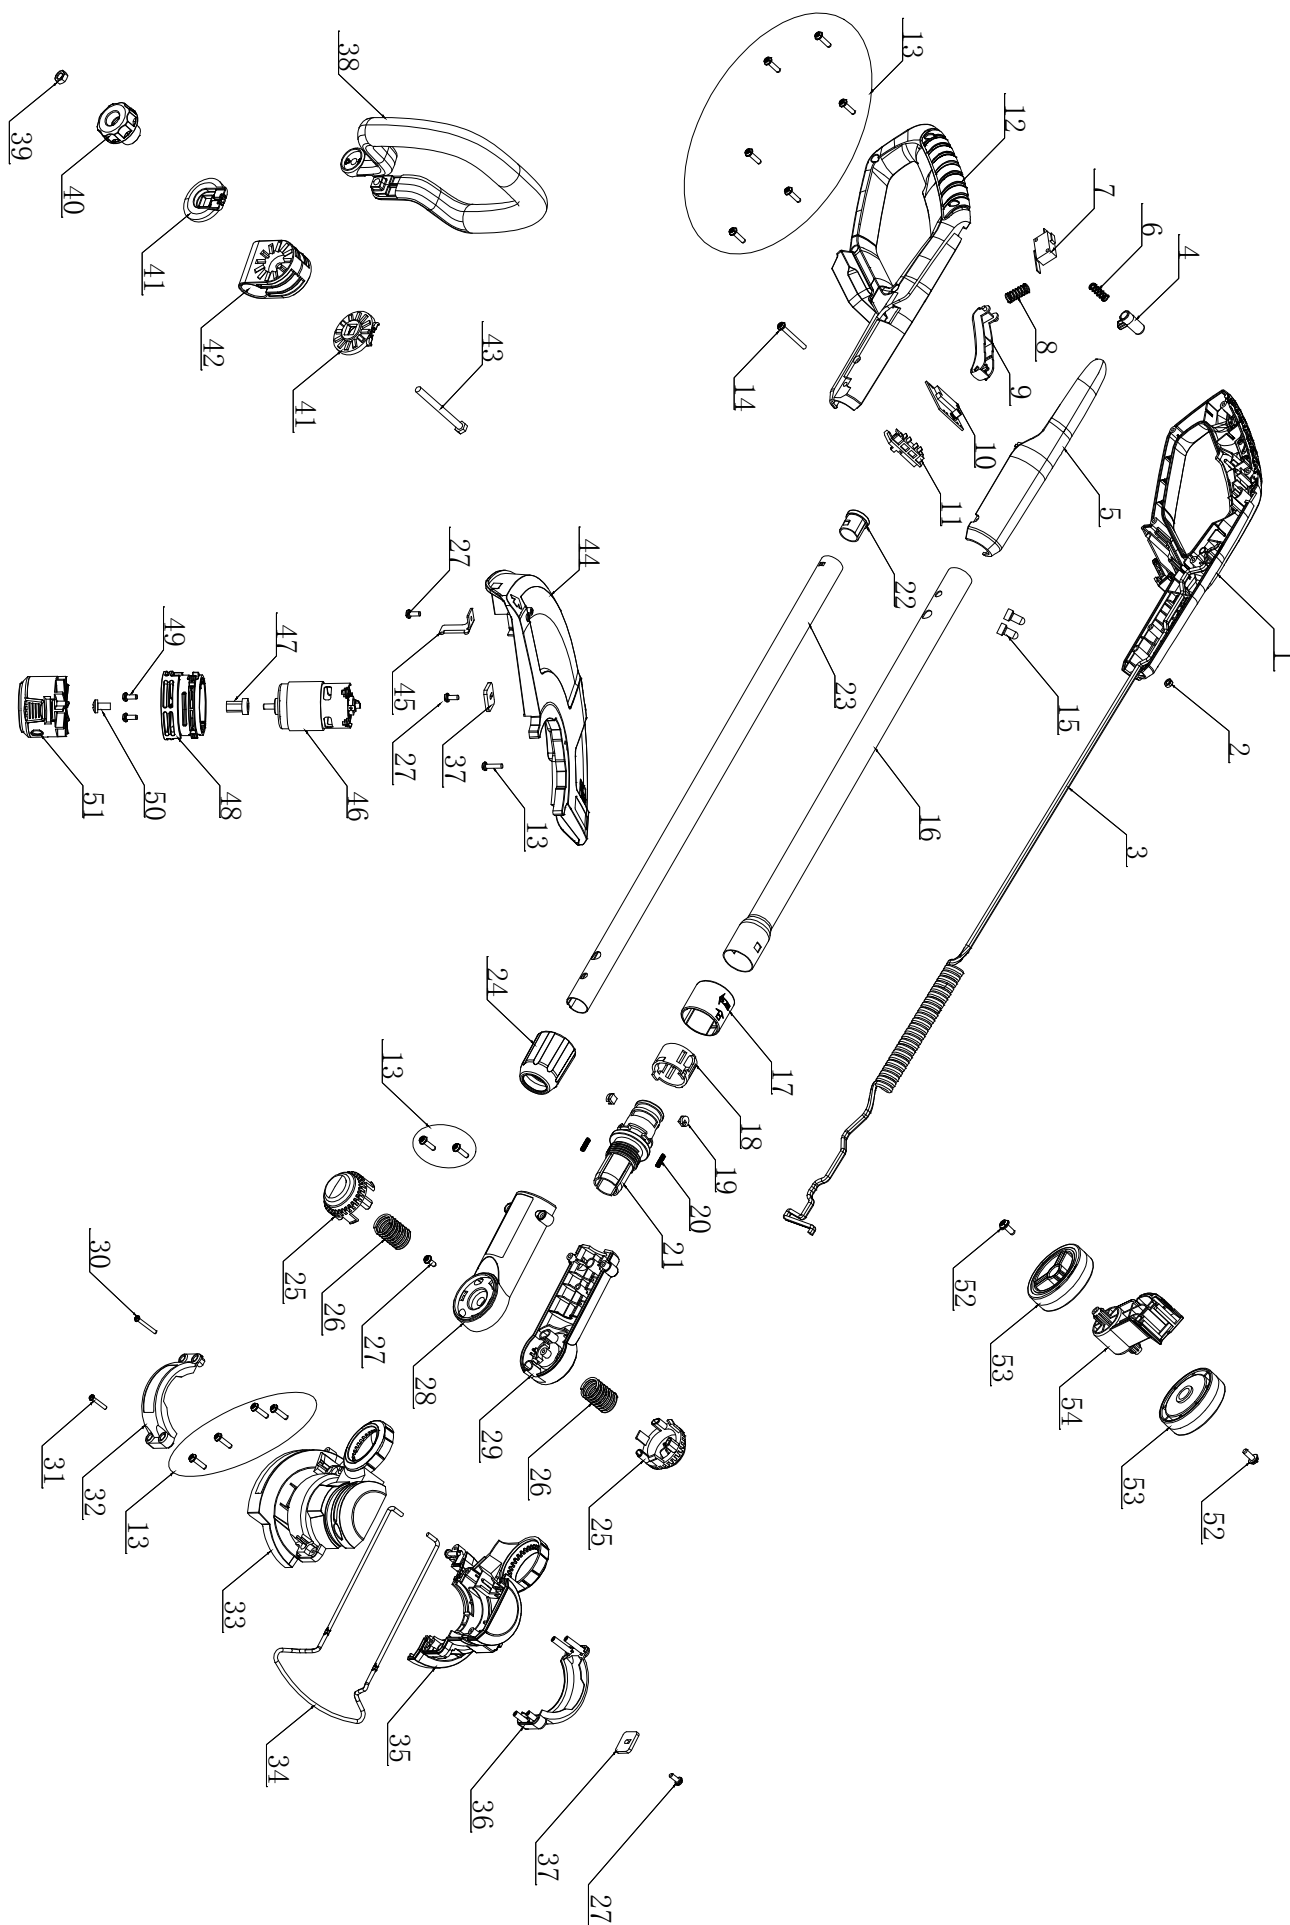

SAFETY

SETUP

OPERATION

MAINTENANCE

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

The logo for Bauer, featuring the word "Bauer" in a bold, italicized, sans-serif font. The letters are black with a white outline, giving it a three-dimensional appearance. A small trademark symbol (TM) is located at the end of the word.

26677 Agoura Road • Calabasas, CA 91302 • 1-800-444-3353