
Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

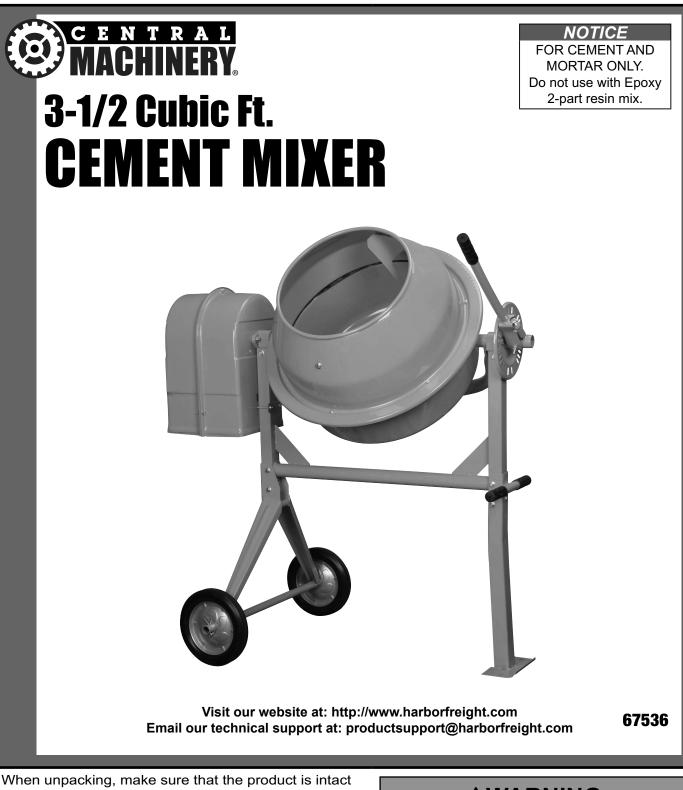

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-888-866-5797 as soon as possible.

Copyright[©] 2022 by Harbor Freight Tools[®]. All rights reserved. No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

AWARNING

23b

Read this material before using this product. Failure to do so can result in serious injury. SAVE THIS MANUAL.

FOR CEMENT AND MORTAR ONLY. Do not use with Epoxy 2-part resin mix.

Table of Contents

Safety	2
Specifications	5
Setup	6
Operation	10

Maintenance	11
Parts List and Diagram	14
Warranty	16

WARNING SYMBOLS AND DEFINITIONS

	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.	
	ER Indicates a hazardous situation which, if not avoided, will result in death or serious injury.	
	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.	
	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.	
NOTICE CAUTION	Addresses practices not related to personal injury.	

IMPORTANT SAFETY INFORMATION



WARNING Read all safety warnings and instructions. *Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.* **Save all warnings and instructions for future reference.**

Assembly Precautions

- 1. Assemble only according to these instructions. Improper assembly can create hazards.
- 2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
- 3. Keep assembly area clean and well lit.

Use Precautions

- 1. This product is not a toy. Do not allow children to play with or near this item.
- 2. Use as intended only.
- 3. Inspect before every use; do not use if parts are loose or damaged.
- Do not exceed listed weight capacity.
 Be aware of dynamic loading! Sudden load movement may briefly create excess load causing product failure.
- 5. DO NOT OVERLOAD MIXER. An overload can damage equipment.

- 4. Keep bystanders out of the area during assembly.
- 5. Do not assemble when tired or when under the influence of alcohol, drugs or medication.
- 6. Weight capacity and other product capabilities apply to properly and completely assembled product only.
- 6. DO NOT MOVE MIXER DURING OPERATION. The Mixer can tip over or motor could be damaged.
- 7. KEEP SAFE CLEARANCE AROUND MIXER. Keep all persons (except operator) at least six feet from Mixer during operation.
- DON'T USE IN DANGEROUS ENVIRONMENT. Don't use power tools in damp or wet locations, or expose them to rain. Keep work area well lighted.
- KEEP CHILDREN AWAY. All visitors should be kept safe distance from work area.
- 10. MAKE WORKSHOP KID PROOF with padlocks, master switches, or by removing starter keys.

Page 2

- 11. DON'T FORCE TOOL. It will do the job better and safer at the rate for which it was designed.
- 12. USE RIGHT TOOL. Don't force tool or attachment to do a job for which it was not designed.
- 13. USE PROPER EXTENSION CORD. Make sure your extension cord is in good condition. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating. Table A shows the correct size to use depending on cord length and nameplate ampere rating. If in doubt, use the next heavier gauge. The smaller the gauge number, the heavier the cord.
- 14. WEAR PROPER APPAREL. Do not wear loose clothing, gloves, neckties, rings, bracelets, or other jewelry which may get caught in moving parts. Nonslip footwear is recommended. Wear protective hair covering to contain long hair.
- 15. SECURE WORK. Use clamps or a vise to hold work when practical. It's safer than using your hand and it frees both hands to operate tool.

- 16. DON'T OVERREACH. Keep proper footing and balance at all times.
- 17. MAINTAIN TOOLS WITH CARE. Keep tools sharp and clean for best and safest performance. Follow instructions for lubricating and changing accessories.
- DISCONNECT TOOLS before servicing; when changing accessories, such as blades, bits, cutters, and the like.
- 19. REDUCE THE RISK OF UNINTENTIONAL STARTING. Make sure switch is in off position before plugging in.
- 20. NEVER STAND ON TOOL. Serious injury could occur if the tool is tipped or if the cutting tool is unintentionally contacted.
- 21. NEVER LEAVE TOOL RUNNING UNATTENDED. TURN POWER OFF. Don't leave tool until it comes to a complete stop.
- 22. Maintain product labels and nameplates. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.

Mixer Safety Warnings

1. FOR CEMENT AND MORTAR ONLY. DO NOT USE WITH EPOXY 2-PART RESIN MIX.

- 2. Do not attempt to move the Cement Mixer when it is full and/or in operation. It is unsafe to move the mixer while in this condition, and serious injury to personnel could occur.
- 3. When servicing use only identical replacement parts.
- 4. Only use safety equipment that has been approved by an appropriate standards agency. Unapproved safety equipment may not provide adequate protection. Eye protection must be ANSI-approved and breathing protection must be NIOSH-approved for the specific hazards in the work area.
- 5. Industrial applications must follow OSHA guidelines.

- Maintain labels and nameplates on the tool. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.
- 7. Avoid unintentional starting. Prepare to begin work before turning on the tool.
- 8. People with pacemakers should consult their physician(s) before use. Electromagnetic fields in close proximity to heart pacemaker could cause pacemaker interference or pacemaker failure.
- 9. The warnings, precautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

FOR CEMENT AND MORTAR ONLY. Do not use with Epoxy 2-part resin mix.


Grounding

TO PREVENT ELECTRIC SHOCK AND DEATH FROM INCORRECT GROUNDING WIRE CONNECTION:

Check with a qualified electrician if you are in doubt as to whether the outlet is properly

grounded. Do not modify the power cord plug provided with the tool. Never remove the grounding prong from the plug. Do not use the tool if the power cord or plug is damaged. If damaged, have it repaired by a service facility before use. If the plug will not fit the outlet, have a proper outlet installed by a qualified electrician.

Grounded Tools: Tools with Three Prong Plugs

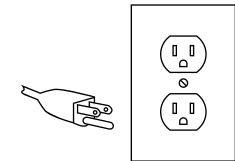

3-Prong Plug and Outlet

- 1. Tools marked with "Grounding Required" have a three wire cord and three prong grounding plug. The plug must be connected to a properly grounded outlet. If the tool should electrically malfunction or break down, grounding provides a low resistance path to carry electricity away from the user, reducing the risk of electric shock. (See 3-Prong Plug and Outlet.)
- 2. The grounding prong in the plug is connected through the green wire inside the cord to the grounding system in the tool. The green wire in the cord must be the only wire connected to the tool's grounding system and must never be attached to an electrically "live" terminal. (See 3-Prong Plug and Outlet.)
- 3. The tool must be plugged into an appropriate outlet, properly installed and grounded in accordance with all codes and ordinances. The plug and outlet should look like those in the preceding illustration. (See 3-Prong Plug and Outlet.)

- **Extension Cords**
- Grounded tools require a three wire extension cord. Double Insulated tools can use either a two or three wire extension cord.
- As the distance from the supply outlet increases, you must use a heavier gauge extension cord. Using extension cords with inadequately sized wire causes a serious drop in voltage, resulting in loss of power and possible tool damage. (See Table A.)
- 3. The smaller the gauge number of the wire, the greater the capacity of the cord. For example, a 14 gauge cord can carry a higher current than a 16 gauge cord. (See Table A.)
- 4. When using more than one extension cord to make up the total length, make sure each cord contains at least the minimum wire size required. (See Table A.)

- 5. If you are using one extension cord for more than one tool, add the nameplate amperes and use the sum to determine the required minimum cord size. (See Table A.)
- If you are using an extension cord outdoors, make sure it is marked with the suffix "W-A" ("W" in Canada) to indicate it is acceptable for outdoor use.
- 7. Make sure the extension cord is properly wired and in good electrical condition. Always replace a damaged extension cord or have it repaired by a qualified electrician before using it.
- 8. Protect the extension cords from sharp objects, excessive heat, and damp or wet areas.

NOTICE FOR CEMENT AND MORTAR ONLY.

Do not use with Epoxy 2-part resin mix.

TABLE A: RECOMMENDED MINIMUM WIRE GAUGE FOR EXTENSION CORDS* (120/240 VOLT)					
NAMEPLATE AMPERES	EXTENSION CORD LENGTH				
(at full load)	25´	50 ′	75´	100´	150´
0 – 2.0	18	18	18	18	16
2.1 – 3.4	18	18	18	16	14
3.5 – 5.0	18	18	16	14	12
5.1 – 7.0	18	16	14	12	12
7.1 – 12.0	18	14	12	10	-
12.1 – 16.0	14	12	10	-	-
16.1 – 20.0	12	10	-	-	-
* Based on limiting the line voltage drop to five volts at 150% of the rated amperes.					

Vibration Safety

This tool vibrates during use. Repeated or long-term exposure to vibration may cause temporary or permanent physical injury, particularly to the hands, arms and shoulders. To reduce the risk of vibration-related injury:

 Anyone using vibrating tools regularly or for an extended period should first be examined by a doctor and then have regular medical checkups to ensure medical problems are not being caused or worsened from use. Pregnant women or people who have impaired blood circulation to the hand, past hand injuries, nervous system disorders, diabetes, or Raynaud's Disease should not use this tool. If you feel any medical or physical symptoms related to vibration (such as tingling, numbness, and white or blue fingers), seek medical advice as soon as possible.


Specifications

Electrical Input	120VAC / 60Hz / 3.35A
Motor No Load Speed	1400 RPM
Drum Speed	23 RPM
Drum Capacity	3.5 Cubic Feet
Drum Opening	15"

Connecting Cords

To reduce the risk of the cords pulling apart during operation, do one of the following:

a. Make a knot as shown below then connect the cords:

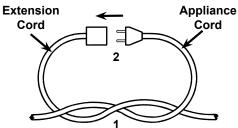

- b. Or, use a plug-receptacle retaining strap or connector designed to hold extension cords to appliance cords.
- 2. Do not smoke during use. Nicotine reduces the blood supply to the hands and fingers, increasing the risk of vibration-related injury.
- 3. Wear suitable gloves to reduce the vibration effects on the user.
- 4. Use tools with the lowest vibration when there is a choice between different processes.
- 5. Include vibration-free periods each day of work.
- 6. To reduce vibration, maintain the tool as explained in this manual. If any abnormal vibration occurs, stop use immediately.

<u>NOTICE</u>

FOR CEMENT AND MORTAR ONLY. Do not use with Epoxy 2-part resin mix.

Setup - Before Use




Read the <u>ENTIRE</u> IMPORTANT SAFETY INFORMATION section at the beginning of this document including all text under subheadings therein before set up or use of this product.

AWARNING

TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION: Turn the Power Switch of the tool off before performing any procedure in this section.

Note: For additional information regarding the parts listed in the following pages, refer to the Assembly Diagram near the end of this manual.


Components and Controls

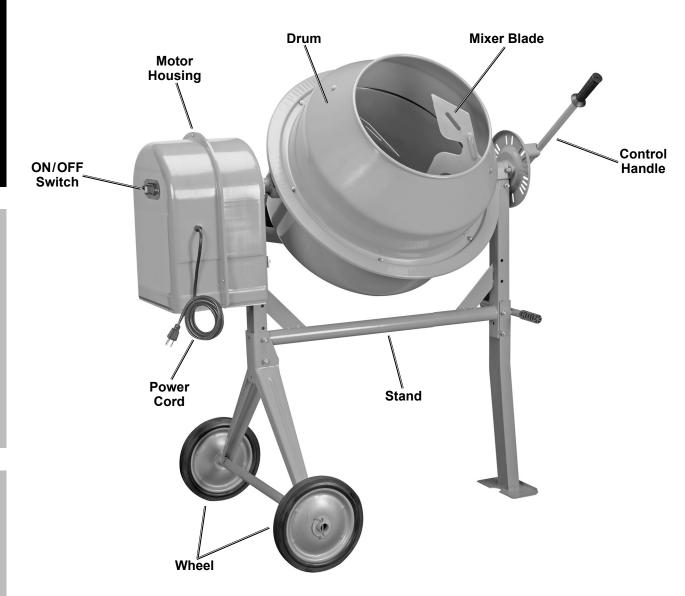


FOR CEMENT AND MORTAR ONLY. Do not use with Epoxy 2-part resin mix.

Assembly/Mounting


 Attach the Wheel Bracket (33) to the Stand (46) using one M8x55 Hex Bolt (44), two M8x65 Hex Bolts (45), three M8 Washers (6), and three M8 Nuts (5). Tighten securely.

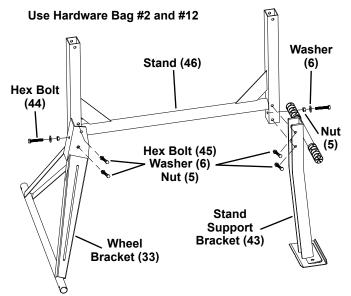


- Attach the Stand Support Bracket (43) to the Stand using one M8x55 Bolt (44), two M8x65 Bolts (45), three M8 Washers (6), and three M8 Nuts (5). Tighten securely.
- 3. Slide an M25 Flat Washer (34), Wheel (35), and second Flat Washer onto each end of the Wheel Bracket axle. Insert a Cotter Pin (36) through holes in each end of Bracket axle and bend Cotter Pins to secure Wheels.

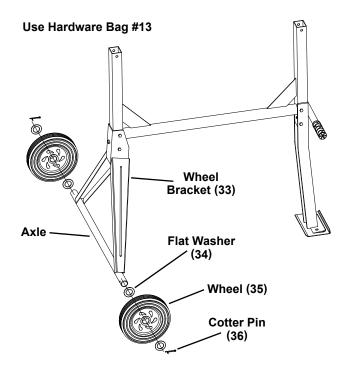


 With assistance, set the Lower Drum (61) with attached Support Bracket (63) and Support Bracket Seats (11) into Stand assembly. Fasten together using two M8x60 Hex Bolts (57), M8 Washers (6), and M8 Nuts (5). Tighten securely.

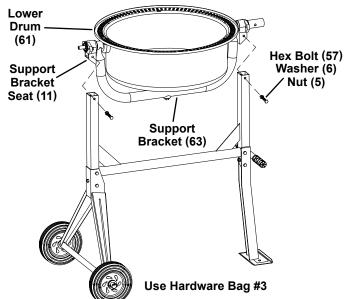


 Mount Mixer Blades (8) inside Lower Drum with the pointed ends facing downward using two M8x20 Hex Bolts (60), M8 Washers (6), and M8 Nuts (5). The open end of each Blade should point in direction of Drum rotation (counterclockwise).

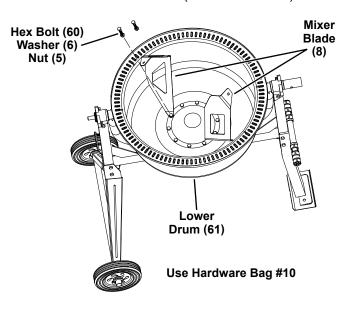


6. Use gasket sealer (not included) to stick the Rubber Gasket (62) to the Upper Drum (4), making sure the holes in both align. The Gasket must be flat on the Upper Drum to ensure a proper seal.

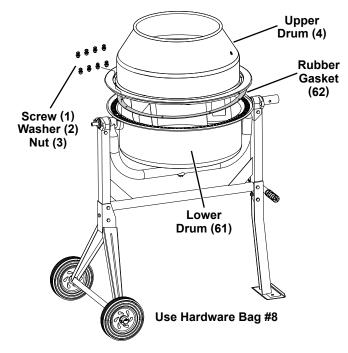


- Place the Upper Drum onto the Lower Drum (61), making sure the mounting holes align in both.
 Fasten Drums together using eight M6x16 Screws (1), M6 Washers (2), and M6 Nuts (3).
- Mount Control Handle Plate (53) to Support Bracket Seat (11) using two M8x25 Hex Bolts (47), M8 Washers (6), and M8 Nuts (5).

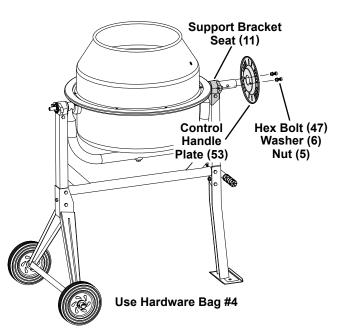

- 9. Insert Washer (49), then Coil Spring (48) into lower hole on Control Handle (54).
- Place Control Handle over Support Arm (55) shaft. Press down on Handle to align holes on Handle and Support Arm.
- 11. Secure Control Handle to Support Arm shaft with a M10x70 Hex Bolt (50), M10 Washer (51), and two M10 Nuts (52).

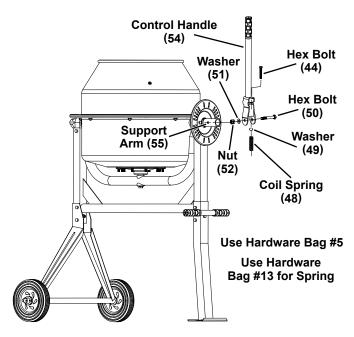

12. Thread M8x55 Hex Bolt (44) into nut on Control Handle to secure Coil Spring down.

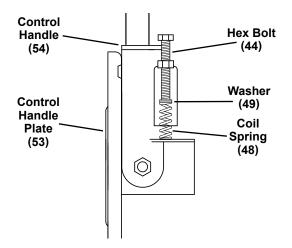

SAFET


- Fasten tops of Mixer Blades to Upper Drum using two M8x16 Screws (7), M8 Washers (6), and M8 Nuts (5), one set per Blade.
- Mount the Motor Hood (12) to the Support Bracket Seat (11) using two M8x25 Hex Bolts (47), M8 Washers (6), and M8 Nuts (5). Tighten securely.
- Attach the Motor Bracket (24) to the Motor Hood and Wheel Bracket using two M8x60 Hex Bolts (31), M8 Washers (6), M8 Nuts (5), and Clamp (32). Tighten securely.
- 16. Clean the Pinion Shaft (9) of all protective material and other debris. Clean debris out of the Drum Pulley (13) hub. Remove screw and washer from Pinion Shaft.
- 17. Spread a few drops of lubricating oil on the Pinion Shaft and squarely push the Drum Pulley onto the Shaft, aligned so the groove in the Pulley hub engages the Flat Key (10). The Pulley should be flush with the step on the Pinion Shaft. Secure Drum Pulley with screw and washer removed in previous step.

Note: Do not hammer the Drum Pulley onto the Pinion Shaft. Doing so can damage the unit and lead to a loose fitting V-Belt (18).

- Place the Motor (23) onto the Motor Bracket. Secure the Motor to the Bracket using four M8x16 Hex Bolts (25), M8 Washers (6), and M8 Nuts (5). Hand-tighten all four Nuts.
- 19. Attach the V-Belt by placing it around the Motor Pulley (19) and then over the Drum Pulley. Use a flat-edge screwdriver (not included) to push the Motor inward until the Motor Pulley is directly under the Drum Pulley. Tighten the Bolts securing the Motor to the Motor Bracket.
- Slightly loosen the Hex Bolts (31) holding the Motor Bracket in place. Push the Motor down until V-Belt tension is tight. When proper V-Belt tension is achieved, tighten the Hex Bolts. Refer to *Belt Inspection and Tensioning* on page 11.
- 21. Check if Motor and V-Belt turn correctly. Hand turn the Drum Pulley and verify that Motor Pulley and Drum Pulley do not rub against any other part. Adjust Motor location as needed.

22. Undo four Screws and remove backplate from Switch Box (16). Attach green ground wire from Motor to ground bolt inside Switch Box and secure with nut. Connect white and black motor wires to terminals on Switch–black to black, white to white. Replace backplate and secure with four screws previously removed.

Note: Refer to *Wiring Connection Diagram* on page 12. If you are uncertain about your ability to perform this procedure safely or correctly have the work performed by an electrician or qualified technician.

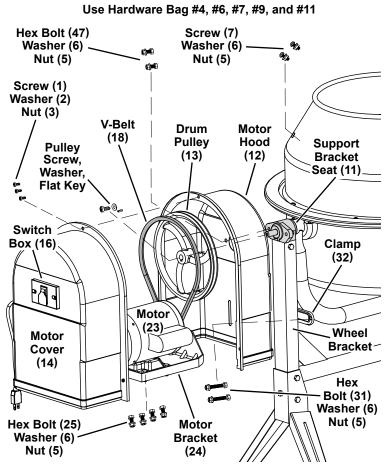

 Mount the Motor Cover (14) to the Motor Hood (12) using three M6x16 Screws (1), M6 Washers (2), and M6 nuts (3).

<u>CAUTION!</u> Make sure that the wiring from the Motor to the Switch does not come in contact with any moving parts.

24. Check all connections to verify that all screws, nuts, and bolts are securely tightened.

MAINTENANCE

FOR CEMENT AND MORTAR ONLY.

Do not use with Epoxy 2-part resin mix.

Operating Instructions



Read the <u>ENTIRE</u> IMPORTANT SAFETY INFORMATION section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

General Operating Instructions

WARNING! TO PREVENT SERIOUS INJURY:

Do not operate the Mixer on slopes or uneven surfaces with an incline greater than 5°. Ensure the Mixer is stable before and after starting the Motor.

WARNING! TO PREVENT SERIOUS INJURY:

Do not attempt to move the Mixer when it is full and/or in operation. Block the wheels with wheel chocks (not included).

WARNING! TO PREVENT SERIOUS INJURY: Keep

clear of rollers and other pinch points when running the Mixer, pivoting, or changing the angle of the Drum.

- 1. This appliance is intended for household use only.
- 2. Place the Cement Mixer on a solid, even surface.
- Connect the Power Cord to an electric outlet (or properly rated, grounded three prong extension cord).
- 4. Adjust the Drum angle by pulling on the Control Handle. First, disengage the locking pins by pulling the Control Handle away from the Drum and then pushing on the Handle until the desired angle is reached. Re-engage the locking pins.

Note: Turn the Motor on before filling the Drum. This will protect the Motor and evenly mix materials.

- Press the ON/OFF Switch to the ON (I) position-the Drum will spin.
- Add material to the Drum. Typical maximum quantities include: 2 gallons water with 3 shovels of cement and 15 shovels aggregate rock (using a size 3 shovel, not included.). Refer to material manufacturer's instructions.

Note: Inspect the mix frequently to ensure it does not harden or dry. Allowing mix to harden or dry could damage the Mixer or cause a malfunction.

7. Once materials are mixed, use the Control Handle to tilt Drum opening downward and dump materials where needed. The materials are dumped while the Drum is rotating.

<u>CAUTION!</u> Never leave the Cement Mixer running while unattended. Do not turn Mixer off while full of cement.

- When finished, press the ON/OFF Switch to the OFF (O) position-the Drum will stop. Disconnect the Power Cord.
- 9. Tilt the Drum angle as far down as possible to drain all fluids from Drum.
- 10. Clean, then store indoors out of children's reach.



FOR CEMENT AND MORTAR ONLY. Do not use with Epoxy 2-part resin mix.

Maintenance and Servicing



Procedures not specifically explained in this manual must be performed only by a qualified technician.

AWARNING TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION: Turn the Power Switch of the tool to its "OFF" position and unplug the tool from its electrical outlet before performing any inspection, maintenance, or cleaning procedures.

TO PREVENT SERIOUS INJURY FROM TOOL FAILURE: Do not use damaged equipment. If abnormal noise or vibration occurs, have the problem corrected before further use.

Cleaning, Maintenance, and Lubrication

- 1. **BEFORE EACH USE,** inspect the general condition of the tool. Check for:
 - Loose hardware
 - · Misalignment or binding of moving parts
 - · Cracked or broken parts
 - · Damaged electrical wiring
 - Damaged or cracked belts
 - Any other condition that may affect its safe operation.

Belt Inspection and Tensioning

- 1. Retighten V-Belt after the first 25 hours of use. To test the tension, follow the steps below.
- 2. Remove Motor Cover.
- 3. Examine Belt for cracks, tears in the backing, or other damage. Replace Belt if damaged according to steps below:
 - a. Loosen the Motor Bracket Bolts and slide Motor Bracket up as far as possible.
 - b. Slide the old Belt off of the Drum Pulley first, then remove it from the Motor Pulley.
 - c. Put the new Belt around the Motor Pulley first, then around the Drum Pulley.
 - d. Move the Motor Bracket down until the Belt is properly tensioned according to the directions below. Tighten the Motor Bracket Bolts.
- 4. Check and adjust belt tension according to the following steps:
 - a. Press on the center of the longest span on the Belt with moderate finger pressure. Then measure the deflection distance, the distance that the Belt moved. The Belt should deflect anywhere from 1/2" to 3/4".

b. If the Belt deflects too much, tighten Belt by loosening the Motor Bracket Bolts and moving the Motor down slightly, away from the Drum Pulley. Secure Motor Bracket Bolts and retest tension. If the Belt is too long to be properly tensioned, it must be replaced.

2. AFTER USE, immediately wash out all debris

handled bristle brush for best results. Wipe external surfaces of the tool with clean cloth.

3. DO NOT apply water in or around the Motor.

4. **PERIODICALLY** recheck all fasteners

and other connections for tightness.


5. **AWARNING! TO PREVENT SERIOUS**

by a qualified service technician.

INJURY: If the supply cord of this power

tool is damaged, it must be replaced only

from the inside and outside of the Cement Mixer. Scrub the inside of the Drum with a stiff. long

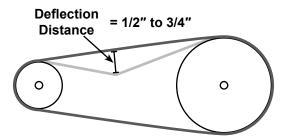

- c. **If the Belt deflects too little,** loosen the Motor Bracket Bolts and lift Motor upward. Secure Motor Bracket Bolts and retest tension.
- 5. Before use, replace Motor Cover.

FOR CEMENT AND MORTAR ONLY. Do not use with Epoxy 2-part resin mix.


Troubleshooting

Problem	Possible Causes	Likely Solutions
Tool will not start.	1. Cord not connected.	1. Check that cord is plugged in.
	2. No power at outlet.	 Check power at outlet. If outlet is unpowered, turn off tool and check circuit breaker. If breaker is tripped, make sure circuit has the correct capacity for the tool and circuit has no other loads.
	3. Internal damage or wear.	3. Have technician service tool.
Tool operates slowly.	Extension cord too long or wire size too small.	Eliminate use of extension cord. If an extension cord is needed, use shorter/heavier gauge cord. See <i>Extension Cords</i> in <i>GROUNDING</i> section.
Excessive noise or rattling.	Internal damage or wear.	Have technician service tool.
Overheating/ Overloading.	 Running at 100% load for extended time. 	1. Allow for lighter no-load intervals.
	2. Blocked motor housing vents.	 Wear ANSI-approved safety goggles and NIOSH- approved dust mask/respirator while blowing dust out of motor using compressed air.
	 Motor being strained by long or small diameter extension cord. 	 Eliminate use of extension cord. If an extension cord is needed, use one with the proper diameter for its length and load. See <i>Extension Cords</i> in <i>GROUNDING</i> section.



Follow all safety precautions whenever diagnosing or servicing the tool. Disconnect power supply before service.

Wiring Connection Diagram

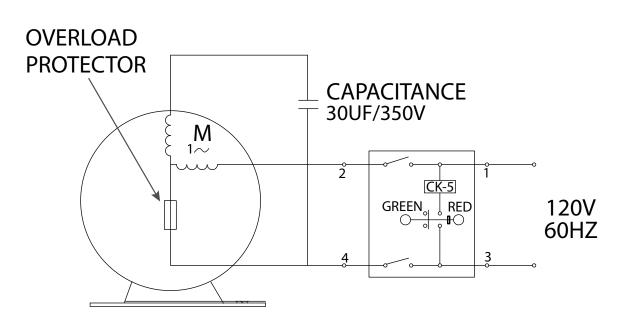

SETUP

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS DOCUMENT AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

SAFET

Record Serial Number Here:_

Note: If product has no serial number, record month and year of purchase instead.

Note: Some parts are listed and shown for illustration purposes only, and are not available individually as replacement parts. Specify UPC 792363675369 when ordering parts.


FOR CEMENT AND MORTAR ONLY. Do not use with Epoxy 2-part resin mix.

Parts List and Diagram

Parts List

Part	Description	Qty
1	Screw M6x16	13
2	Elastic Washer M6	13
	Nut M6	11
4	Upper Drum	1
5	Nut M8	30
6	Washer M8	30
7	Screw M8x16	2
8	Mixer Blade	2
9	Pinion Shaft	
10	Flat Key A5x28	1
11	Support Bracket Seat	2
12	Motor Hood	1
13	Drum Pulley	1
14	Motor Cover	1
15	Cross Recessed Screw M4	2
16	Switch Box	1
17	Switch	1
18	V-Belt	1
19	Motor Pulley	1
20	Set Screw M6x12	2
21	Cord Sleeve	1
22	Power Cord	1
23	Motor	1
24	Motor Bracket	1
25	Hex Bolt M8x16	4
26	Washer M6	5
27	Ball Bearing	1
28	Gear	1
29	Flat Key A5x16	1
30	Flat Washer M15	1
31	Hex Bolt M8x60	2
32	Clamp	1

Part	Description	Qty
33	Wheel Bracket	1
34	Flat Washer M25	4
35	Wheel	2
36	Cotter Pin 5x45	2
37	Lower Bearing Cover	1
38	Ball Bearing 60206	2
39	Washer	2-4
40	Hex Bolt M14x30	1
41	Elastic Washer M14	1
42	Washer	1
43	Stand Support Bracket	1
44	Hex Bolt M8x55	3
45	Hex Bolt M8x65	4
46	Stand	1
47	Hex Bolt M8x25	4
48	Coil Spring	1
49	Washer	1
50	Hex Bolt M10x70	1
51	Washer M10	1
52	Nut M10	2
53	Control Handle Plate	1
54	Control Handle	1
55	Support Arm	1
56	C-Clip	2
57	Hex Bolt M8x60	2
58	Shaft	1
59	Upper Bearing Cover	1
60	Hex Bolt M8x20	10
61	Lower Drum	1
62	Rubber Gasket	1
63	Support Bracket	1

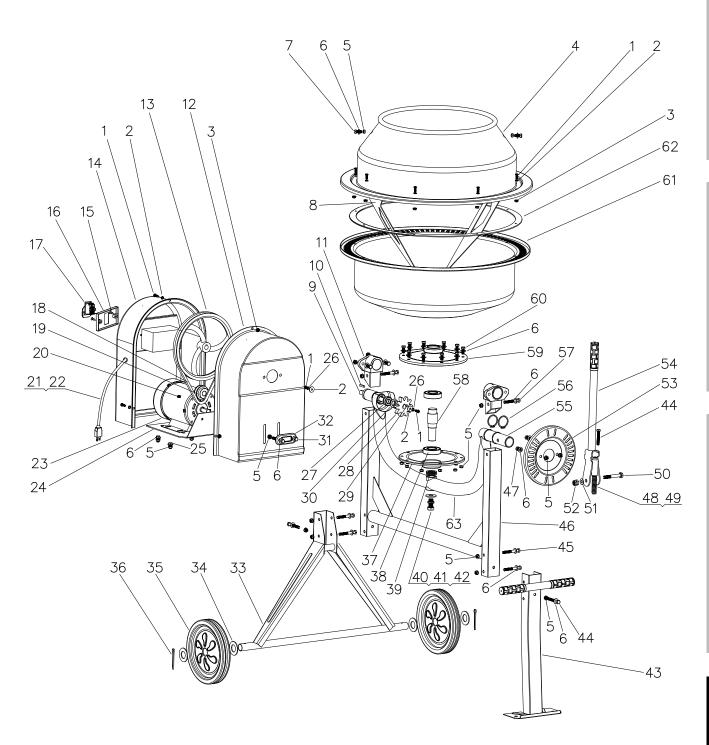

LIMITED 90 DAY WARRANTY

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.



26677 Agoura Road • Calabasas, CA 91302 • 1-888-866-5797