




## PREVENT BLOWN FUSE.

Turn unit **ON** BEFORE connecting to tire valve.

FIRST turn ON, THEN inflate tire.

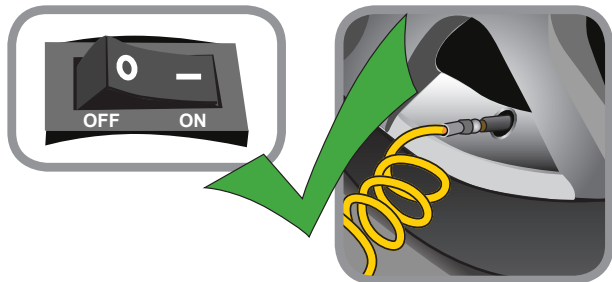

If you plug into tire, THEN turn on,



you will blow  
the fuse.

### CAUTION

To prevent compressor damage:

IF COMPRESSOR SHUTS OFF AUTOMATICALLY, allow to cool for 30 minutes before restarting.  
Compressor shuts off to prevent overheating damage.