

Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's date code in the back of the manual near the assembly diagram (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

25c

ATLASTM

BRUSHLESS

10" CORDLESS CULTIVATOR

80V

LITHIUM



Visit our website at: <https://www.harborfreight.com>
Email our technical support at: productsupport@harborfreight.com

70312

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-800-444-3353 as soon as possible.

Copyright© 2025 by Harbor Freight Tools®. All rights reserved.
No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

⚠ WARNING

Read this material before using this product.
Failure to do so can result in serious injury.
SAVE THIS MANUAL.

Table of Contents

Safety	2	Maintenance	13
Specifications	6	Parts Lists and Diagrams	14
Setup	7	Warranty	16
Operation.....	11		

ATLAS™

WARNING SYMBOLS AND DEFINITIONS

	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
	Indicates a hazardous situation which, if not avoided, will result in death or serious injury.
	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
	Addresses practices not related to personal injury.

IMPORTANT SAFETY INSTRUCTIONS

WARNING

When using electric gardening appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury, including the following:

READ ALL INSTRUCTIONS

Gardening Appliance Safety

- Avoid Dangerous Environment** - Do not use appliances in damp or wet locations.
- Do Not Use In Rain.**
- Keep Children Away** - All visitors should be kept at a distance from work area.
- Dress Properly** - Do not wear loose clothing or jewelry. They can be caught in moving parts. Use of rubber gloves and substantial footwear is recommended when working outdoors. Wear protective hair covering to contain long hair.
- Use Safety Glasses** - Always use face or dust mask if operation is dusty.
- Use Right Appliance** - Do not use appliance for any job except that for which it is intended.
-  **Wear ANSI-approved safety goggles, hard hat and heavy-duty rubber work gloves.** Use face or dust mask if operation is dusty.
-  **Keep hands away from blades.**
-  **Wear thick jeans and steel-toed work boots to help prevent injury caused by flying debris.**

10. **Avoid Unintentional Starting -**
Do not carry appliance with finger on switch.
11. Don't grasp the exposed cutting blades or cutting edges when picking up or holding the appliance.
12. **Do Not Force Appliance -** It will do the job better and with less likelihood of injury at the rate for which it was designed.
13. **Do not Overreach -**
Keep proper footing and balance at all times.
14. **Stay Alert -** Watch what you are doing. Use common sense. Do not operate appliance when you are tired.
15. **Store Idle Appliances Indoors -** When not in use, appliances should be stored indoors in dry, and high or locked-up place—out of reach of children.
16. **Maintain Appliance With Care -** Keep cutting edge sharp and clean for best performance and to reduce the risk of injury. Follow instructions for lubricating and changing accessories. Keep handles dry, clean, and free from oil and grease.
17. **Check Damaged Parts -** Before further use of the appliance, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other condition that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by a qualified technician unless indicated elsewhere in this manual.
18. Keep guards in place and in working order.
19. Keep hands and feet away from tines.
20. Wear full eye protection and protective clothing.
21. **Stop working when you feel tired or exhausted.**
Make regular breaks to rest.
22. People with pacemakers should consult their physician(s) before use. Electromagnetic fields in close proximity to heart pacemaker could cause pacemaker interference or pacemaker failure.
23. **When servicing use only identical replacement parts.**
24. **Carefully follow cutting procedures explained in this manual.** They are specifically planned to reduce risk to the operator.
25. **Only use accessories and attachments designed for use with this appliance. Follow all accessory and attachment instructions. Use of any other accessory or attachments may increase the risk of injury.**

Battery Tool Use and Care

1. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the power tool. Carrying the power tool with your finger on the switch or energizing power tool that have the switch on invites accidents.
2. Disconnect the battery pack from the power tool before making any adjustments, changing accessories, or storing power tool. Such preventive safety measures reduce the risk of starting the power tool accidentally.
3. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
4. Use power tools only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
5. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
6. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
7. Do not use a battery pack or power tool that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
8. Do not expose a battery pack or power tool to fire or excessive temperature. Exposure to fire or temperature above 140°F may cause explosion.

9. Follow all charging instructions and do not charge the battery pack or power tool outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.

10. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.

11. Do not modify or attempt to repair the power tool or the battery pack except as indicated in the instructions for use and care.

12.  The battery Charger gets hot during use. The Charger's heat can build up to unsafe levels and create a fire hazard if it does not receive adequate ventilation, due to an electrical fault, or if it is used in a hot environment. Do not place the Charger on a flammable surface. Do not obstruct any vents on the Charger. **Especially avoid placing the Charger on carpets and rugs; they are not only flammable, but they also obstruct vents under the Charger.** Place the Charger on a stable, solid, nonflammable surface (such as a stable metal workbench or concrete floor) at least 1 foot away from all flammable objects, such as drapes or walls. Keep a fire extinguisher and a smoke detector in the area. Frequently monitor the Charger and Battery Pack while charging.

13. To Reduce Risk of Injury to Persons:

- Do Not Recharge Batteries in a Confined or Unvented Area; and,
- Do Not Smoke, Strike a Match, or Cause a Spark in the Vicinity of the Battery During Charging.

14. Do not charge appliance in rain, or in wet locations.

15. Do not use battery-operated appliance in rain.

16. Remove or disconnect battery before servicing, cleaning or removing material from the gardening appliance.

17. Do not dispose of the battery(ies) in a fire. The cell may explode. Check with local codes for possible special disposal instructions.

18. Do not open or mutilate the battery(ies). Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.

19. Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.

Lithium Battery Safety Warnings



LITHIUM BATTERIES STORE A LARGE AMOUNT OF ENERGY AND WILL VENT FIRE OR EXPLODE IF MISTREATED:

1. **Keep Battery Pack dry.**

2. **DO NOT DO ANY OF THE FOLLOWING TO THE BATTERY PACK:**

- Open,
- Drop,
- Short-circuit,
- Puncture,
- Incinerate, or
- Expose to temperatures greater than 140°F.

3. Charge Battery Pack only according to its Charger's instructions.

4. Inspect Battery Pack before every use; do not use or charge if damaged.

Vibration Hazard

This appliance vibrates during use.

Repeated or long-term exposure to vibration may cause temporary or permanent physical injury, particularly to the hands, arms and shoulders.

To reduce the risk of vibration-related injury:

1. Anyone using vibrating appliances regularly or for an extended period should first be examined by a doctor and then have regular medical check-ups to ensure medical problems are not being caused or worsened from use. Pregnant women or people who have impaired blood circulation to the hand, past hand injuries, nervous system disorders, diabetes, or Raynaud's Disease should not use this appliance. If you feel any symptoms related to vibration (such as tingling, numbness, and white or blue fingers), seek medical advice as soon as possible.
2. Do not smoke during use. Nicotine reduces the blood supply to the hands and fingers, increasing the risk of vibration-related injury.
3. Wear suitable gloves to reduce the vibration effects on the user.
4. Use appliances with the lowest vibration when there is a choice between different processes.
5. Include vibration-free periods each day of work.
6. Grip appliance as lightly as possible (while still keeping safe control of it). Let the appliance do the work.
7. To reduce vibration, maintain the appliance as explained in this manual. If any abnormal vibration occurs, stop use immediately.

General Safety

This cutting machine is capable of amputating hands and feet and throwing objects. Failure to observe the following safety instructions could result in serious injury or death.

1. Read, understand, and follow all instructions on the machine and in the manual before starting.
2. Only allow responsible adults who are familiar with the instructions to operate this machine.
3. **Thoroughly inspect the area where the Cultivator is to be used.** Beware of possible buried obstacles such as cable, conduit, irrigation lines, and landscape fabric. Remove all large sticks, stones, wires, or other foreign objects.
4. **NEVER operate above or near any electrical cables, gas pipes, or any other utility lines.** Contact your local utility company before using the Cultivator.
5. Do not put hands or feet near or under rotating parts.
6. Be sure the area is clear of bystanders before operating. Stop machine if anyone enters the area.
7. Do not operate machine barefooted or while wearing sandals. Always wear substantial footwear.
8. Do not pull machine backward unless absolutely necessary. Always look down and behind before and while moving backward.
9. Never leave a running machine unattended.
10. Never operate the Cultivator without good visibility or light. Operate machine only in daylight.
11. Do not use the Cultivator on steep inclines. Use only on level ground surfaces.
12. Keep a safe distance from the edges and banks of ditches. Avoid any actions that may cause the Cultivator to tip over.
13. Be careful when operating in hard ground. The tines may catch in the ground and propel the Cultivator forward. If this occurs, let go of the handlebars and do not restrain the machine.
14. Do not operate machine while under the influence of alcohol or drugs.
15. If the machine should start to vibrate abnormally, stop the machine and check for the cause immediately. Vibration is generally a warning sign of trouble.
16. Always wear eye protection when operating machine.
17. The warnings and precautions discussed in this manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.
18. Maintain labels and nameplates on the appliance. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.



SAVE THESE INSTRUCTIONS.

Grounding

⚠ WARNING



TO PREVENT ELECTRIC SHOCK AND DEATH FROM INCORRECT GROUNDING:

Check with a qualified electrician if you are in doubt as to whether the outlet is properly grounded. Do not modify the power cord plug provided with the charger. Do not use the charger if the power cord or plug is damaged. If damaged, have it repaired by a service facility before use. If the plug will not fit the outlet, have a proper outlet installed by a qualified electrician.

Extension Cords

Note: Extension cords must not be used with this item's Charger.

Symbology

V	Volts		WARNING marking concerning Risk of Electric Shock. Properly connect Charger's power cord to appropriate outlet.
	Direct Current		WARNING marking concerning Risk of Explosion. Do not puncture, short, or open battery packs and do not charge damaged battery packs.
A	Amperes		Do not expose to rain or damp conditions.
n ₀ xxxx/min.	No Load Revolutions per Minute (RPM)		Thrown objects can ricochet and result in personal injury or property damage.
	WARNING marking concerning Risk of Eye Injury. Wear ANSI-approved safety goggles with side shields.		Keep hands and feet away from rotating tines.
	WARNING marking concerning Risk of Hearing Loss. Wear hearing protection.		
	Read the manual before set-up and/or use.		
	WARNING marking concerning Risk of Fire. Do not cover Charger ventilation ducts. Charge on fireproof surface only.		

Specifications

Electrical Rating	80VDC
Battery Type	Atlas 40V/80V Li-Ion
Charger Type	Atlas 40V/80V Li-Ion
Maximum Cultivating Depth	5 Inches
Maximum Cultivating Width	10 Inches

Components and Controls



Assembly Instructions



Read the **ENTIRE IMPORTANT SAFETY INSTRUCTIONS** section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

WARNING


TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION:

Release Trigger of the appliance and remove Battery Pack before performing any procedure in this section.

Note: For additional information regarding the parts listed in the following pages, refer to the Assembly Diagram near the end of this manual.

Attach Wheel Assembly




1. Place Cultivator in a stable position on a level surface.
2. Insert the shaft on the Wheel Assembly into the support bracket.
3. Align holes in Wheel Assembly shaft with hole in bracket to desired position:
 - a. Use lower hole to increase cultivating depth.
 - b. Use higher hole to decrease cultivating depth.
4. Slide Clevis Pin (13) through holes in shaft and bracket.
5. Secure Clevis Pin in place with R-Clip (12).

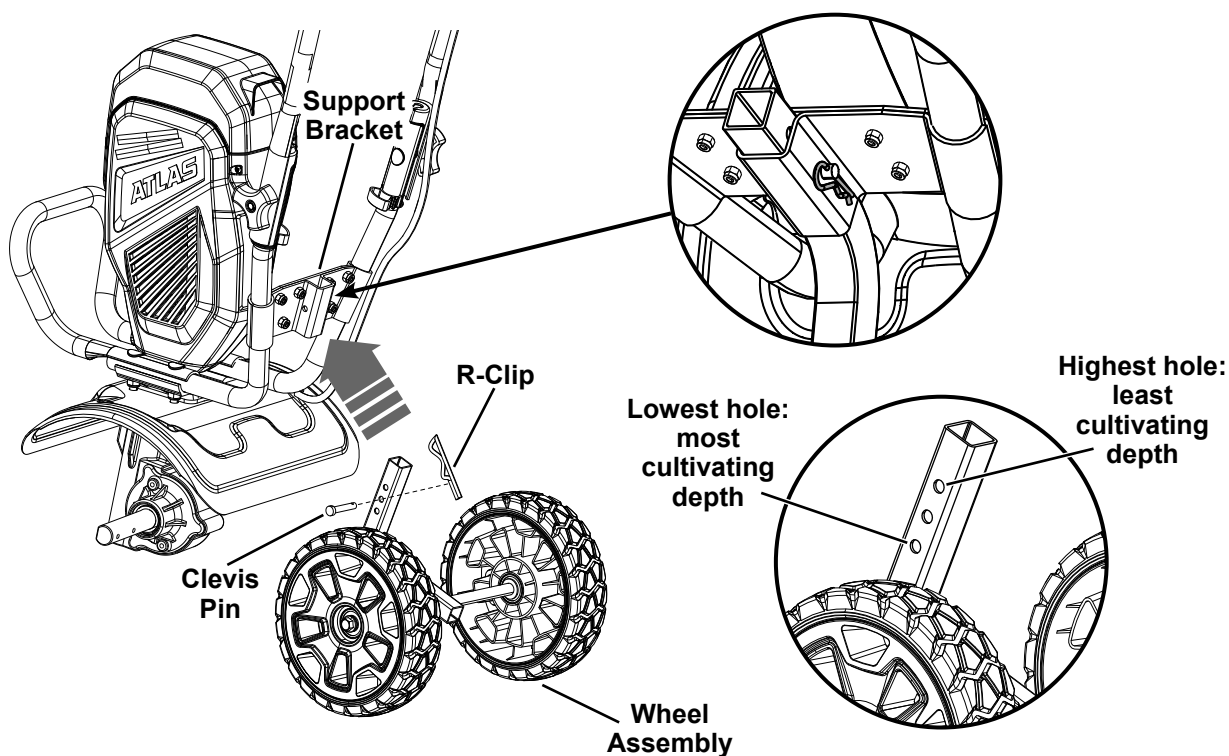

Install Tines

NOTICE: Tines must be installed in the exact orientation described for the Cultivator to function properly. Perform these procedures facing the front of the Cultivator.

1. Lean the Cultivator back on its wheels with the lower handle resting on the ground.
2. Place Tine B (20) on Tine Shaft on right side of Gearbox with sleeve on Tine facing away from Gearbox.
3. Place Tine C (22) on Tine Shaft on left side of Gearbox with sleeve on Tine facing away from Gearbox.
4. Slide a Felt Washer (19) onto each side of Tine Shaft up against sleeves on Tines B and C.
5. Place Tine D (23) on left side of Tine Shaft with sleeve facing Felt Washer on Tine C.
6. Place Tine A (18) on right side of Tine Shaft with sleeve facing Felt Washer on Tine B.
7. Insert Linch Pins (17) into holes on each side of Tine Shaft to secure Tines in place.

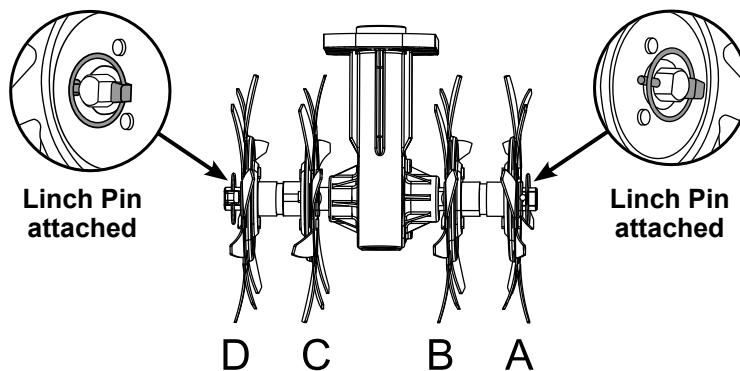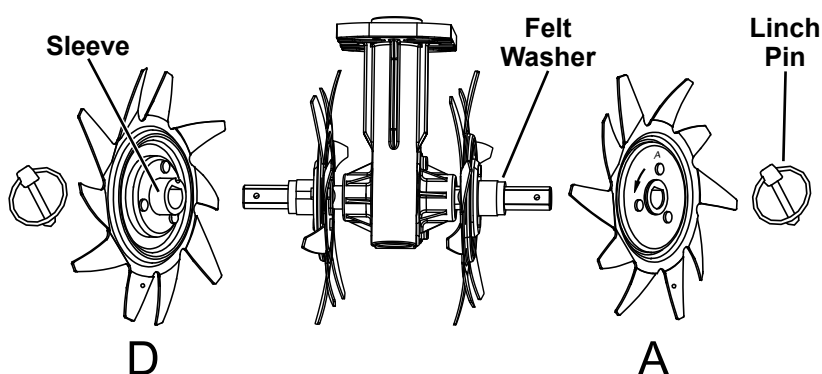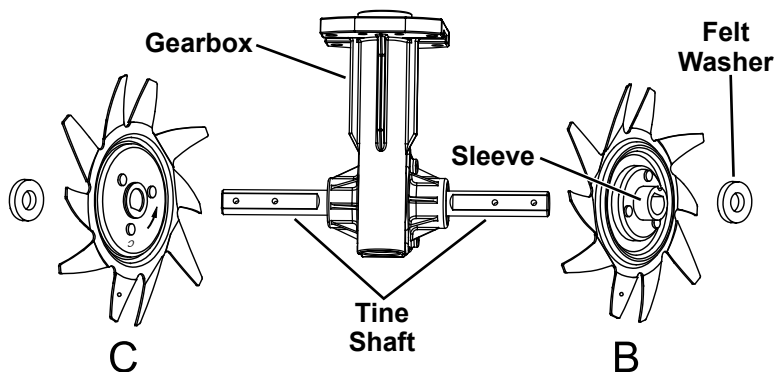


Note: When Tines are properly installed, directional arrows on Tines will point to the front and sleeves on Tines will face each other.

Two Tine Installation

For cultivating narrow areas, Cultivator may be used with two tines.

1. Place Tine B (20) on Tine Shaft on right side of Gearbox with sleeve on Tine facing away from Gearbox.
2. Place Tine C (22) on Tine Shaft on left side of Gearbox with sleeve on Tine facing away from Gearbox.
3. Insert Linch Pins (17) into inner holes on each side of Tine Shaft to secure Tines in place.

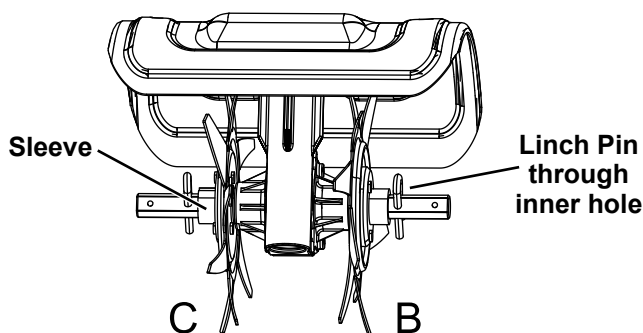

Handle Assembly


SAFETY

SETUP

OPERATION

MAINTENANCE

1. Connect Middle Handle (2) to Lower Handles (7, 49) using two Handle Knobs (5) and Handle Knob Bolts (4). Tighten securely.
2. Connect Upper Handle (1) to Middle Handle using two Handle Knobs and Handle Knob Bolts. Tighten securely.

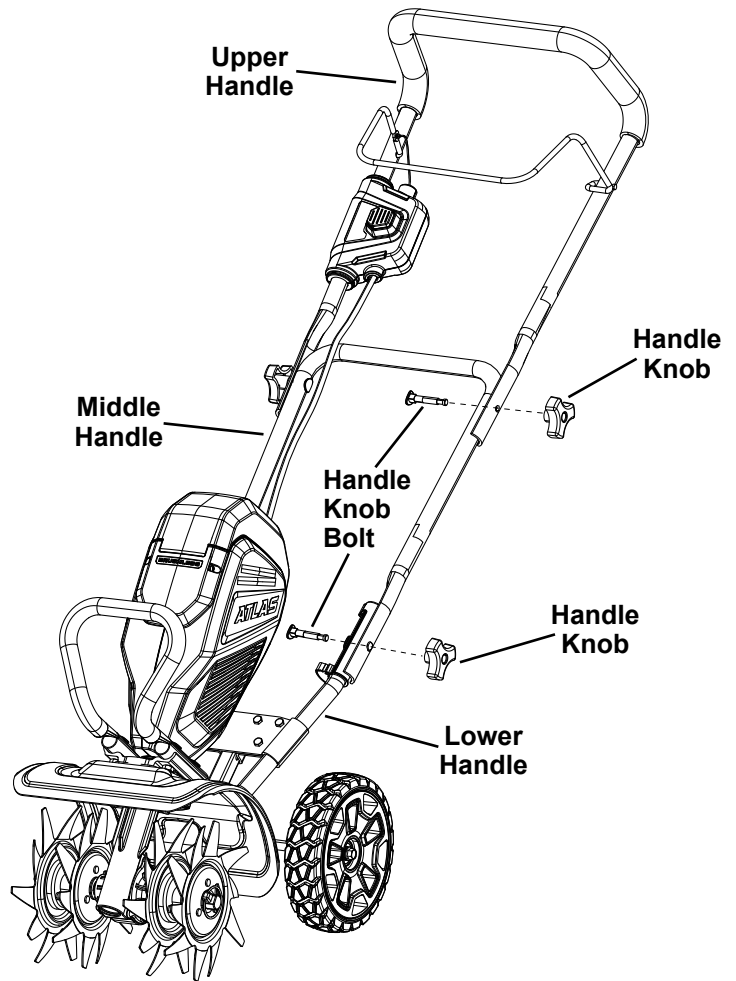

Operating Instructions



Read the **ENTIRE** IMPORTANT SAFETY INFORMATION section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

⚠ WARNING

TO PREVENT SERIOUS INJURY:

Before operating the gardening appliance, put on ANSI-approved safety goggles, steel toe work boots, long pants, and other safety gear. Safety goggles and other safety gear are sold separately. Keep hands, fingers, feet, and loose clothing away from rotating Tines.

TO PREVENT SERIOUS INJURY AND PROPERTY DAMAGE:

Inspect the area before using the Cultivator. Remove all hard objects from work area. Use both hands when operating the Cultivator.

BEWARE of possible buried obstacles such as cable, conduit, irrigation lines, and landscape fabric.


DO NOT operate above or near any electrical cables, gas pipes, or any other utility lines. Contact your local utility company before using the Cultivator.

Battery Charging

Charge Battery Pack before using this tool. Follow instructions included with Battery Charger. Battery and Charger sold separately.

Installing and Removing Battery Pack

1. To install: Open Battery Door, insert Battery Pack into battery compartment and push down until it clicks into place. Close Battery Door.
2. To remove: Press Battery Pack Release Button and pull Battery Pack out of battery compartment. Close Battery Door.

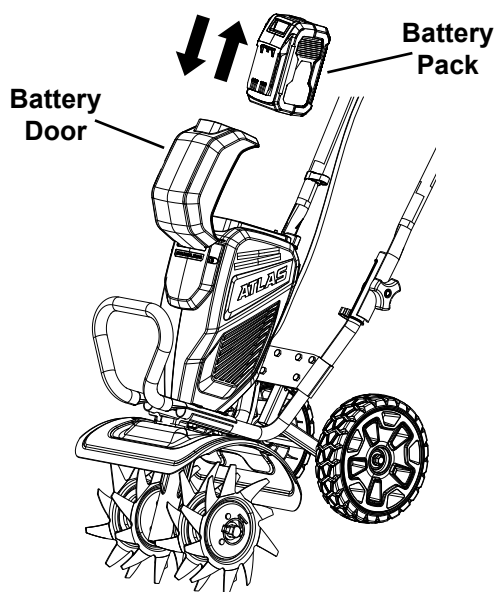

General Operation

⚠ WARNING

TO PREVENT SERIOUS INJURY: Do not put hands or feet near or under rotating Tines.

Wear ANSI-approved safety goggles, steel toe work boots, heavy-duty work gloves, long pants, and other safety gear during use.

Clear the area of large sticks, rocks, wire, or other foreign objects which could be thrown by the Tines.

Stay behind the handle when the Cultivator is running.

Be sure the area is clear of bystanders before operating.

Stop machine if anyone enters the area.

1. Set the desired cultivating depth by adjusting the Wheel Assembly. Refer to *Attach Wheel Assembly* on page 8.

Note: Optimum cultivating depth will vary with soil conditions. If Cultivator shakes or is difficult to control, the cultivating depth is not correctly set for the conditions. Adjustment through trial and error is required to achieve the correct setting.

WARNING! TO PREVENT SERIOUS INJURY:

Before first use, practice operating the Cultivator controls with Tines raised off of the ground. Know how to keep control at all times and how to stop the Tines from turning. For actual field use, operate at a slow pace until familiar with Cultivator handling.

2. Open Battery Door, insert fully-charged Battery Pack into battery compartment and push down until it clicks into place. Close Battery Door.
3. Press and hold down Power Switch, then pull and hold Bail Control Bar against Handle.
4. When Cultivator has started, release Power Switch.
5. Grip the Handle firmly with both hands.


6. To stop Cultivator, release Bail Control Bar.

7. The following soil conditions can affect cultivating results:

- a. On soil that is too hard and/or dried out for the Tines to penetrate, the Cultivator will shake excessively and jump across the soil surface. Moisten dry, hardened soil prior to cultivating and use a shallow depth setting.
- b. Exceedingly wet soil will form clumps during cultivating and clog the Tines. Allow wet soil to partially dry before cultivating and operate at a slow pace to improve results.

NOTICE: Should the Tines jam or the Cultivator strike a foreign object during use, immediately release the Bail Control Bar to shut off the Cultivator. Wait until the machine completely stops, then remove the Battery Pack. Remove foreign objects and inspect the Cultivator. If any damage is found have the problem corrected before further use.

8. After use, to prevent accidents, remove Battery Pack, then clean and store tool according to *Cleaning, Maintenance, and Lubrication* on page 13.

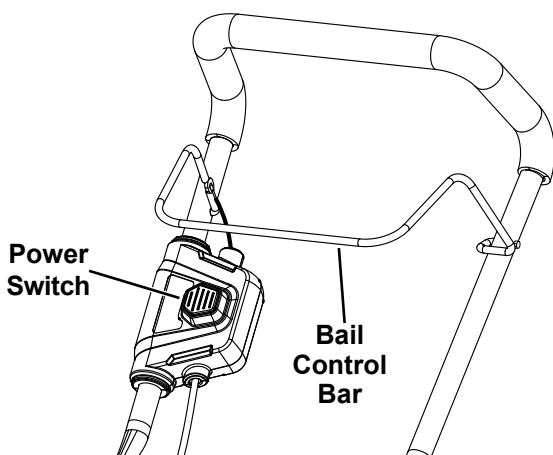

Maintenance and Servicing



Procedures not specifically explained in this manual must be performed only by a qualified technician.

!WARNING

TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION:

Remove Battery Pack before performing any procedure in this section.

TO PREVENT SERIOUS INJURY FROM TOOL FAILURE:

Do not use damaged equipment. If abnormal noise or vibration occurs, have the problem corrected before further use.

Cleaning, Maintenance, and Lubrication

- BEFORE EACH USE**, inspect the general condition of the tool. Check for:
 - loose or damaged Tines
 - leaking, swollen, or cracked battery pack
 - loose hardware
 - misalignment or binding of moving parts
 - cracked or broken parts
 - any other condition that may affect its safe operation.
- AFTER USE**, clean external surfaces with clean cloth. Wipe Tines with oil to prevent corrosion. Apply oil to Bail Control Bar cable.
- LI-ION BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY.**
Do not short, incinerate or open battery.
- Remove Battery Pack and store Battery Pack, Charger, and Cultivator in dry, indoor area out of reach of children. Keep Battery Pack away from metal objects (i.e., paperclips, coins) to prevent shorting.

Troubleshooting

Problem	Possible Causes	Probable Solutions
Cultivator won't start.	- Battery Pack not properly connected. - Battery Pack not properly charged. - Debris jamming Tines. - Internal damage or wear.	- Make sure Battery Pack is inserted correctly and locked in place. - Make sure Charger is connected and operating properly. Give enough time for Battery Pack to charge properly. - Turn off Cultivator, remove battery pack and remove debris from Tines. - Have machine serviced by qualified technician.
Excessive shaking/ Cultivator difficult to control.	- Ground too hard and/or dried out. - Cultivating depth not correctly set for soil conditions.	- Moisten the ground prior to cultivating. - Adjust Wheel Assembly as needed to achieve correct depth setting.
Motor runs but Tines do not rotate.	Gear train failure.	Have machine serviced by qualified technician.
Cultivator stops during use.	Thermal overload protection has tripped.	Remove Battery Pack and allow Cultivator to cool at least 15 minutes.



Follow all safety precautions whenever diagnosing or servicing the equipment.

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

Parts List


Part	Description	Qty	Part	Description	Qty
1	Upper Handle	1	27	Nylon Bracket	1
2	Middle Handle	1	28	Shock Absorbing Cushion	1
3	Wire Hook	1	29	Blade Guard	1
4	Handle Knob Bolt	4	30	Lift Handle	1
5	Handle Knob	4	31	Rubber Gasket	1
6	Insulation Sleeve	2	32	Motor	1
7	Left Lower Handle	1	33	Hoop	1
8	M6 External Hex Bolt	6	34	Rubber Gasket	1
9	Type 1 Non-Metallic Hex Locknut	6	35	Rubber Gasket	1
10	Upper Support Plate	1	36	PCBA	1
11	Lower Support Plate	1	37	Right Housing	1
12	R-Clip	1	38	Cover	1
13	Clevis Pin	1	39	Hex Pan Head Self-Tapping Screw	13
14	Hex Flange Bolt	2	40	Male Plug	1
15	Wheel	2	41	Pin	1
16	Wheel Frame	1	42	Battery Door	1
17	Linch Pin	2	43	Self-Tapping Screw	1
18	Tine A	1	44	Magnet	1
19	Felt Washer	2	45	Compression Spring	2
20	Tine B	1	46	Spring Seat	1
21	Gearbox	1	47	Left Housing	1
22	Tine C	1	48	Cover	1
23	Tine D	1	49	Right Lower Handle	1
24	Hex Flange Bolt	4	50	Type 1 Non-Metallic Hex Locknut	4
25	Spring Washer	4	51	Lower Handle Bolt	4
26	Flexible Shaft	1			

Record Product's Date Code Here: _____

Note: If product has no date code, record month and year of purchase instead.

Note: Some parts are listed and shown for illustration purposes only, and are not available individually as replacement parts. Specify UPC 193175574220 when ordering parts.

Assembly Diagram

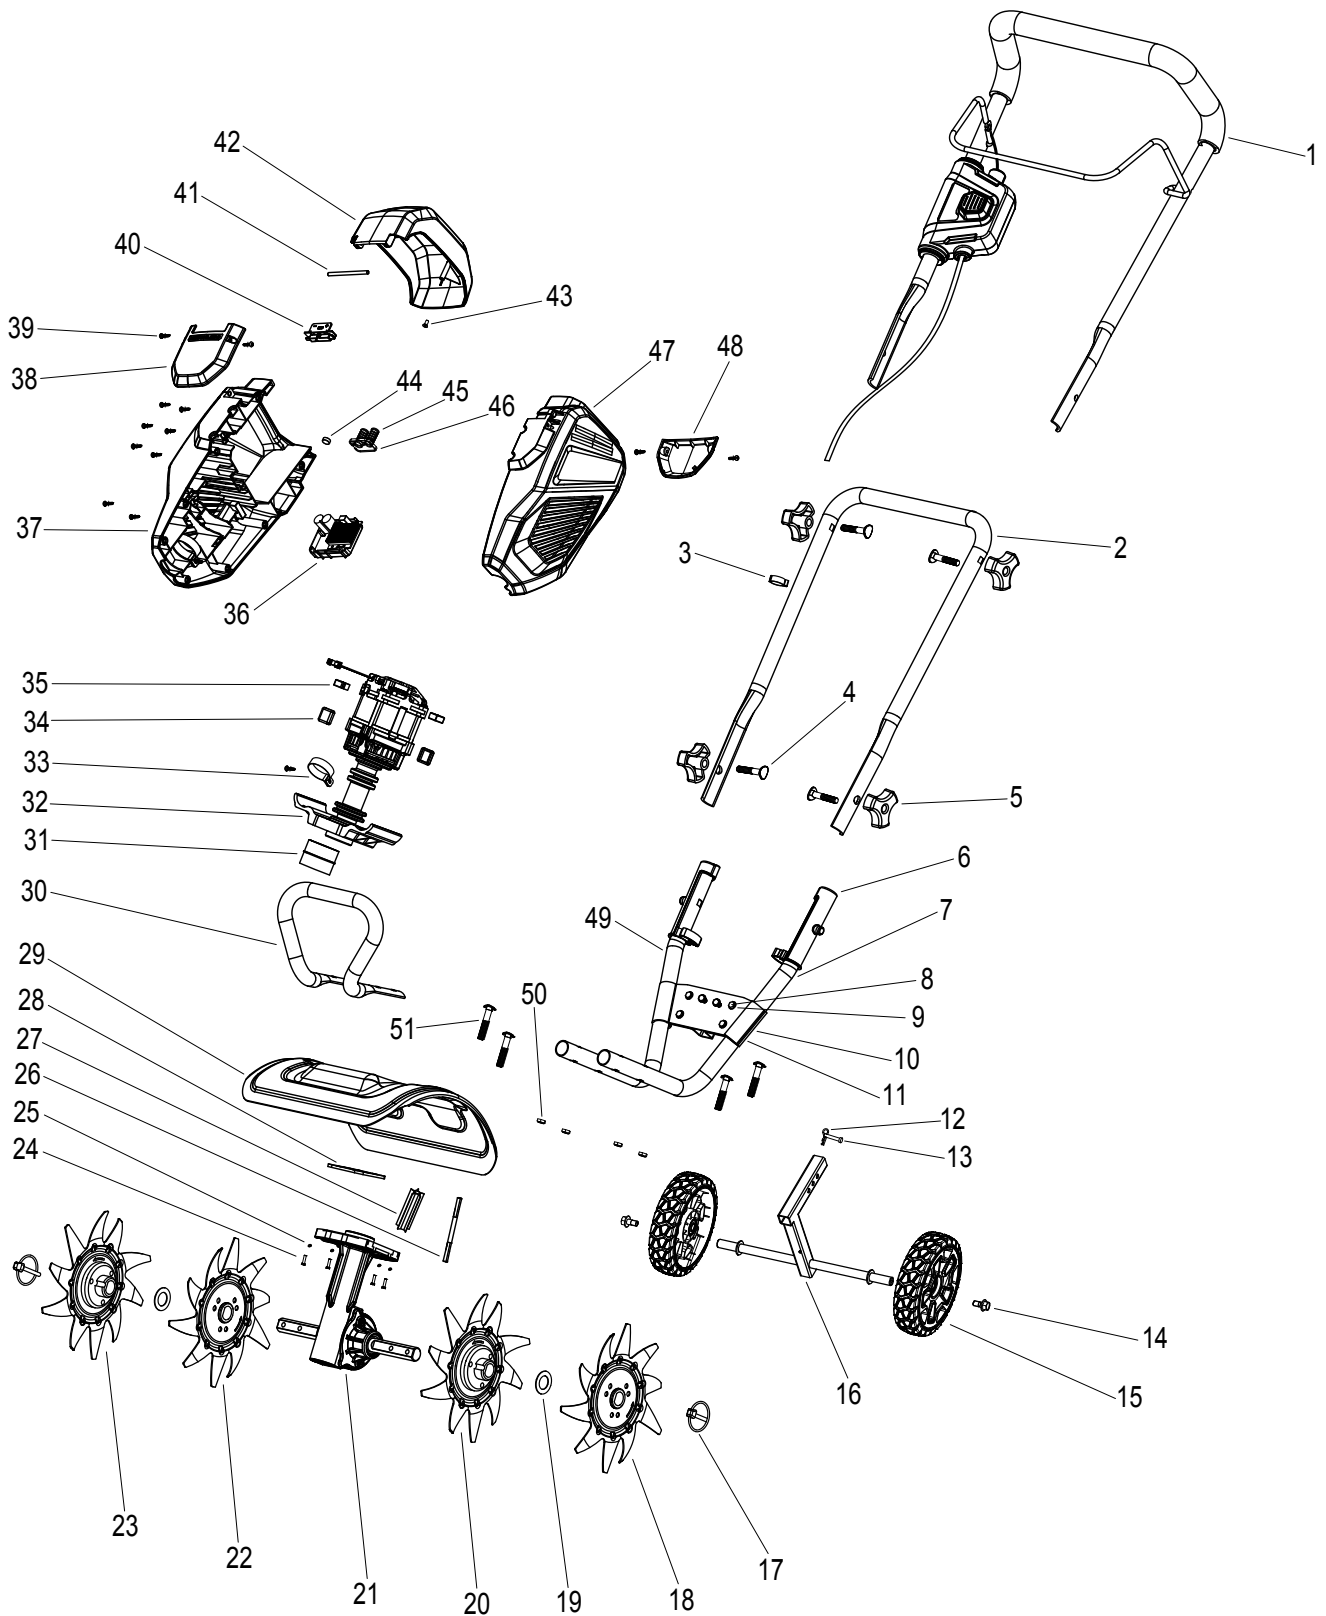

SAFETY

SETUP

OPERATION

MAINTENANCE

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

ATLAS™

26677 Agoura Road • Calabasas, CA 91302 • 1-800-444-3353