# Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual near the assembly diagram (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

231

# WARRIOR

# 2" MINI CUT-OFF SAW



Visit our website at: http://www.harborfreight.com Email our technical support at: productsupport@harborfreight.com

70478

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-888-866-5797 as soon as possible.

Copyright<sup>©</sup> 2023 by Harbor Freight Tools<sup>®</sup>. All rights reserved.

No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools.

Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein.

Tools required for assembly and service may not be included.

#### **AWARNING**

Read this material before using this product. Failure to do so can result in serious injury. SAVE THIS MANUAL.

#### **Table of Contents**

Safety	2	Maintenance	12
Specifications	7	Parts List and Diagram	14
Setup	8	Warranty	16
Operation	9		



WARNING SYMBOLS AND DEFINITIONS			
A	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.		
<b>▲</b> DANGER	Indicates a hazardous situation which, if not avoided, will result in death or serious injury.		
<b>▲</b> WARNING	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.		
<b>ACAUTION</b>	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.		
NOTICE CAUTION	Addresses practices not related to personal injury.		

# **IMPORTANT SAFETY INFORMATION**

#### **General Power Tool Safety Warnings**

#### **AWARNING**

Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

- 1. Work area safety
  - a. Keep work area clean and well lit.

    Cluttered or dark areas invite accidents.
- b. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- c. Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

#### 2. Electrical safety

- a. Power tool plugs must match the outlet.

  Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- b. Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.

  There is an increased risk of electric shock if your body is earthed or grounded.
- c. Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- d. Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- e. When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f. If operating a power tool in a damp location is unavoidable, use a ground fault circuit interrupter (GFCI) protected supply. Use of a GFCI reduces the risk of electric shock.

#### 3. Personal safety

- a. Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- b. Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.
- d. Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e. Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.

- f. Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts.

  Loose clothes, jewelry or long hair can be caught in moving parts.
- g. If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.
- h. Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles. A careless action can cause severe injury within a fraction of a second.
- i. Only use safety equipment that has been approved by an appropriate standards agency. Unapproved safety equipment may not provide adequate protection. Eye protection must be ANSI-approved and breathing protection must be NIOSH-approved for the specific hazards in the work area.
- j. Avoid unintentional starting.Prepare to begin work before turning on the tool.
- k. Do not leave the tool unattended when it is plugged into an electrical outlet.
   Turn off the tool, and unplug it from its electrical outlet before leaving.
- This product is not a toy.
   Keep it out of reach of children.
- m. People with pacemakers should consult their physician(s) before use. Electromagnetic fields in close proximity to heart pacemaker could cause pacemaker interference or pacemaker failure. In addition, people with pacemakers should:
  - · Avoid operating alone.
  - Do not use with Trigger locked on.
  - Properly maintain and inspect to avoid electrical shock.
  - Properly ground power cord.
     Ground Fault Circuit Interrupter (GFCI) should also be implemented it prevents sustained electrical shock.
- n. The warnings, precautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

#### 4. Power tool use and care

a. Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.

- b. Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c. Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.

  Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d. Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- e. Maintain power tools and accessories.
  Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- f. **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g. Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.
- h. Keep handles and grasping surfaces dry, clean and free from oil and grease. Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

#### 5. Service

- a. Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.
- Maintain labels and nameplates on the tool.
   These carry important safety information.
   If unreadable or missing, contact
   Harbor Freight Tools for a replacement.
- 6. Safety instructions for mitre saws
  - a. Mitre saws are intended to cut wood or wood-like products, they cannot be used with abrasive cut-off wheels for cutting ferrous material such as bars, rods, studs, etc. Abrasive dust causes moving parts such as the lower guard to jam. Sparks from abrasive cutting will burn the lower guard, the kerf insert and other plastic parts.

- b. Use clamps to support the workpiece whenever possible. If supporting the workpiece by hand, you must always keep your hand at least 100 mm from either side of the saw blade. Do not use this saw to cut pieces that are too small to be securely clamped or held by hand. If your hand is placed too close to the saw blade, there is an increased risk of injury from blade contact.
- c. The workpiece must be stationary and clamped. Do not feed the workpiece into the blade or cut "freehand" in any way.

  Unrestrained or moving workpieces could be thrown at high speeds, causing injury.
- d. Never cross your hand over the intended line of cutting either in front or behind the saw blade. Supporting the workpiece "cross handed" i.e. holding the workpiece to the right of the saw blade with your left hand or vice versa is very dangerous.
- e. Do not reach behind the vise with either hand closer than 100 mm from either side of the saw blade, to remove wood scraps, or for any other reason while the blade is spinning. The proximity of the spinning saw blade to your hand may not be obvious and you may be seriously injured.
- f. Do not use the saw until the table is clear of all tools, wood scraps, etc., except for the workpiece. Small debris or loose pieces of wood or other objects that contact the revolving blade can be thrown with high speed.
- g. **Cut only one workpiece at a time.**Stacked multiple workpieces cannot be adequately clamped or braced and may bind on the blade or shift during cutting.
- h. Ensure the mitre saw is mounted or placed on a level, firm work surface before use.

  A level and firm work surface reduces the risk of the mitre saw becoming unstable.
- i. Provide adequate support such as table extensions, saw horses, etc. for a workpiece that is wider or longer than the table top. Workpieces longer or wider than the mitre saw table can tip if not securely supported. If the cut-off piece or workpiece tips, it can lift the lower guard or be thrown by the spinning blade.
- j. Do not use another person as a substitute for a table extension or as additional support. Unstable support for the workpiece can cause the blade to bind or the workpiece to shift during the cutting operation pulling you and the helper into the spinning blade.
- k. The cut-off piece must not be jammed or pressed by any means against the spinning saw blade. If confined, i.e. using length stops, the cut-off piece could get wedged against the blade and thrown violently.

- I. Let the blade reach full speed before contacting the workpiece. This will reduce the risk of the workpiece being thrown.
- m. If the workpiece or blade becomes jammed, turn the mitre saw off. Wait for all moving parts to stop and disconnect the plug from the power source and/or remove the battery pack. Then work to free the jammed material. Continued sawing with a jammed workpiece could cause loss of control or damage to the mitre saw.
- n. After finishing the cut, hold the saw head down and wait for the blade to stop before removing the cut-off piece. Reaching with your hand near the coasting blade is dangerous.
- o. Hold the handle firmly when making an incomplete cut. The braking action of the saw may cause the saw head to be suddenly pulled downward, causing a risk of injury.

#### 7. Vibration Safety

This tool vibrates during use.
Repeated or long-term exposure to vibration may cause temporary or permanent physical injury, particularly to the hands, arms and shoulders.
To reduce the risk of vibration-related injury:


- a. Anyone using vibrating tools regularly or for an extended period should first be examined by a doctor and then have regular medical check-ups to ensure medical problems are not being caused or worsened from use. Pregnant women or people who have impaired blood circulation to the hand, past hand injuries, nervous system disorders, diabetes, or Raynaud's Disease should not use this tool. If you feel any symptoms related to vibration (such as tingling, numbness, and white or blue fingers), seek medical advice as soon as possible.
- b. Do not smoke during use. Nicotine reduces the blood supply to the hands and fingers, increasing the risk of vibration-related injury.
- c. Wear suitable gloves to reduce the vibration effects on the user.
- d. Use tools with the lowest vibration when there is a choice.
- e. Include vibration-free periods each day of work.
- f. Grip tool as lightly as possible (while still keeping safe control of it). Let the tool do the work.
- g. To reduce vibration, maintain the tool as explained in this manual. If any abnormal vibration occurs, stop use immediately.

# **AWARNING**

TO PREVENT ELECTRIC SHOCK AND DEATH FROM INCORRECT GROUNDING WIRE CONNECTION:

Check with a qualified electrician if you are in doubt as to whether the outlet is properly grounded. Do not modify the power cord plug provided with the tool. Never remove the grounding prong from the plug. Do not use the tool if the power cord or plug is damaged. If damaged, have it repaired by a service facility before use. If the plug will not fit the outlet, have a proper outlet installed by a qualified electrician.


#### **Grounded Tools: Tools with Three Prong Plugs**

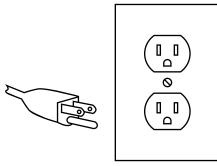


3-Prong Plug and Outlet

- Tools marked with "Grounding Required" have a three wire cord and three prong grounding plug. The plug must be connected to a properly grounded outlet. If the tool should electrically malfunction or break down, grounding provides a low resistance path to carry electricity away from the user, reducing the risk of electric shock. (See 3-Prong Plug and Outlet.)
- 2. The grounding prong in the plug is connected through the green wire inside the cord to the grounding system in the tool. The green wire in the cord must be the only wire connected to the tool's grounding system and must never be attached to an electrically "live" terminal. (See 3-Prong Plug and Outlet.)
- The tool must be plugged into an appropriate outlet, properly installed and grounded in accordance with all codes and ordinances. The plug and outlet should look like those in the preceding illustration. (See 3-Prong Plug and Outlet.)

# **Double Insulated Tools: Tools with Two Prong Plugs**

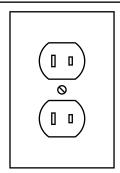

 

**Outlets for 2-Prong Plug** 

- Tools marked "Double Insulated" do not require grounding. They have a special double insulation system which satisfies OSHA requirements and complies with the applicable standards of Underwriters Laboratories, Inc., the Canadian Standard Association, and the National Electrical Code.
- 2. Double insulated tools may be used in either of the 120 volt outlets shown in the preceding illustration. (See Outlets for 2-Prong Plug.)

#### **Extension Cords**

- Grounded tools require a three wire extension cord.
   Double Insulated tools can use either a two or three wire extension cord.
- As the distance from the supply outlet increases, you must use a heavier gauge extension cord. Using extension cords with inadequately sized wire causes a serious drop in voltage, resulting in loss of power and possible tool damage. (See Table A.)
- 3. The smaller the gauge number of the wire, the greater the capacity of the cord. For example, a 14 gauge cord can carry a higher current than a 16 gauge cord. (See Table A.)
- When using more than one extension cord to make up the total length, make sure each cord contains at least the minimum wire size required. (See Table A.)

- If you are using one extension cord for more than one tool, add the nameplate amperes and use the sum to determine the required minimum cord size. (See Table A.)
- 6. If you are using an extension cord outdoors, make sure it is marked with the suffix "W-A" ("W" in Canada) to indicate it is acceptable for outdoor use.
- Make sure the extension cord is properly wired and in good electrical condition. Always replace a damaged extension cord or have it repaired by a qualified electrician before using it.
- 8. Protect the extension cords from sharp objects, excessive heat, and damp or wet areas.

TABLE A: RECOMMENDED MINIMUM WIRE GAUGE FOR EXTENSION CORDS* (120/240 VOLT)				
EXTENSION CORD LENGTH				
25´	50´	75´	100´	150´
18	18	18	18	16
18	18	18	16	14
18	18	16	14	12
18	16	14	12	12
18	14	12	10	-
14	12	10	-	-
12	10	_	-	-
	25´ 18 18 18 18 18 14	TENSION COR EXTEN L 25 50 18 18 18 18 18 18 18 18 16 18 14 14 12	EXTENSION CORDS* (12  EXTENSION  LENGT  25´ 50´ 75´  18 18 18  18 18 18  18 18 16  18 16 14  18 14 12  14 12 10	EXTENSION CORDS* (120/240   EXTENSION CORD   LENGTH     25´   50´   75´   100´     18

<sup>\*</sup> Based on limiting the line voltage drop to five volts at 150% of the rated amperes.

# **Symbology**

	Double Insulated
V	Volts
~	Alternating Current
A	Amperes
n <sub>0</sub> xxxx/min.	No Load Revolutions per Minute (RPM)

	WARNING marking concerning Risk of Eye Injury. Wear ANSI-approved safety goggles with side shields.
	Read the manual before set-up and/or use.
	WARNING marking concerning Risk of Fire. Do not cover ventilation ducts. Keep flammable objects away.
<u>A</u>	WARNING marking concerning Risk of Electric Shock. Properly connect power cord to appropriate outlet.

#### **Specifications**

Electrical Rating	120VAC / 60Hz / 0.9A
Rated No Load Speed	n <sub>0</sub> : 10,600/min
Max. Accessory Diameter	2"
Arbor Size	3/8" Round
Cutting Capacity	1/2"
Maximum Miter	45°
Mounting Hardware	2 x 1/8" bolts, washers, and nuts (sold separately)

#### **Setup - Before Use:**



Read the <u>ENTIRE</u> IMPORTANT SAFETY INFORMATION section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

**Note:** For additional information regarding the parts listed in the following pages, refer to *Parts List and Diagram* on page 14.


#### **Mounting**

<u>CAUTION!</u> Choose a mounting surface that is capable of supporting the weight of the Saw and the workpiece.

 Using the Base as a template, mark locations of mounting holes.

- 2. Drill holes appropriate for the proper hardware (sold separately) at the marked locations.
- 3. Align mounting holes with pilot holes, then secure the Base with the hardware.

#### **Functions**

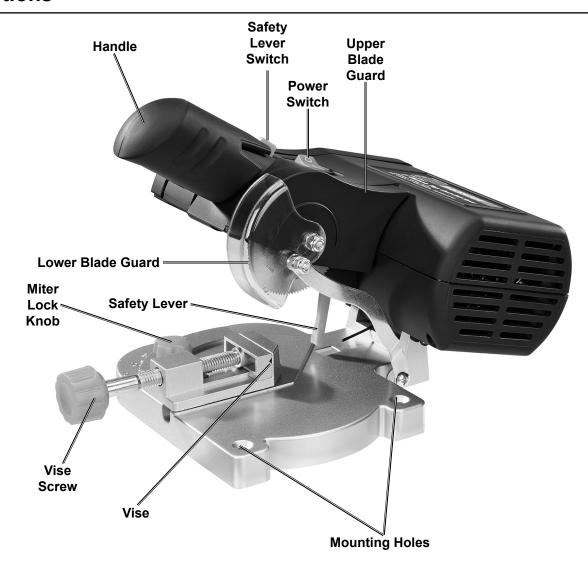

#### Operating Instructions



Read the <u>ENTIRE</u> IMPORTANT SAFETY INFORMATION section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

#### **Tool Set Up**

# **AWARNING**

TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION:


Turn the Power Switch of the tool off and unplug the tool from its electrical outlet before performing any procedure in this section.

#### TO PREVENT SERIOUS INJURY:


DO NOT OPERATE WITH ANY GUARD DISABLED, DAMAGED, OR REMOVED. Moving guards must move freely and close instantly.

#### **Replacing Blade**


Remove the Screw.

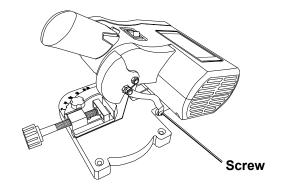

2. Remove Guard Assembly.

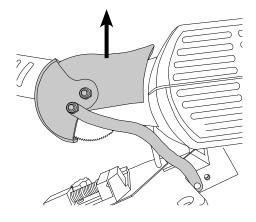


3. Use included small Hex Wrench to lock Spindle. Use included Large Hex Wrench to remove Arbor Bolt, then remove Flange.

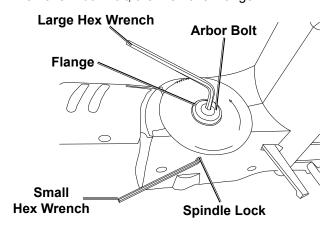

- 4. Remove used Saw Blade. Replace with new Blade.
- 5. Replace Flange and Arbor Bolt. Remove Small Hex Wrench from spindle lock.
- 6. Replace Guard Assembly and Screw, tightening securely.

#### **Setting Miter Angle**

- 1. Loosen the Miter Lock Knob.
- Use Vise Screw to adjust angle until Angle Indicator aligns with desired angle.
- 3. Tighten Miter Lock Knob.

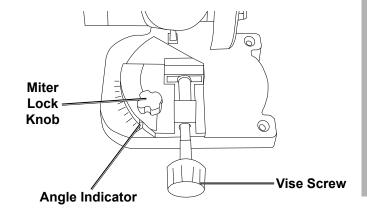

#### Workpiece and Work Area Set Up

- Designate a work area that is clean and well lit.
   The work area must not allow access by children or pets to prevent distraction and injury.
- Route the power cord along a safe route to reach the work area without creating a tripping hazard or exposing the power cord to possible damage. The power cord must reach the work area with enough extra length to allow free movement while working.
- Secure loose workpieces using included Clamp to prevent movement while working.
- There must not be objects, such as utility lines, nearby that will present a hazard while working.
- Allow room on both left and right sides of saw for extended workpieces.

- 6. Use additional supports if needed to ensure the stability of the workpiece. Use additional supports to provide a surface on the same level as the saw table. If the work surface and any workpiece supports are not level, and on the same level, unwanted bevel angles will appear in the cuts resulting in poor joinery.
- 7. Secure workpieces to the saw table using clamping devices (not included). Securing the workpiece will provide safety by preventing kick back and by removing the need to hold workpieces near the blade by hand. Clamping the workpiece will also improve cutting accuracy by preventing the workpiece from moving during the cutting operation.



#### **General Instructions for Use**

- 1. Make sure all Adjustment Knobs are tight.
- 2. Mark location of intended cut on workpiece.
- 3. Align the marked location of the cut on workpiece with the Saw Blade.

**NOTE:** To prevent your workpiece from being cut too short, align the edge of the blade with the measured mark, keeping the rest of the blade on the waste side of the cut.

- 4. Hold the workpiece in place using the Vise. Ensure that workpiece is level and supported securely.
- 5. Make sure that the Power Switch is in the OFF Position, then plug in the tool. Push Power Switch to ON Position.



<u>DANGER!</u> Saws can quickly amputate fingers if misused. Keep hands well clear of cutting area.

- 6. Allow Saw Blade to reach maximum speed.
- 7. Push and hold Safety Lever Switch, then pull down the Handle to begin cutting.
- 8. When cut is complete, raise Handle until Safety Lever engages.
- 9. Push Power Switch to OFF Position.
- 10. To prevent accidents, turn off the tool and unplug it after use. Clean, then store the tool indoors out of children's reach.



#### **Maintenance and Servicing Instructions**



Procedures not specifically explained in this manual must be performed only by a qualified technician.

#### **AWARNING**

TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION:

Make sure that the Trigger is in the off-position and unplug the tool from its electrical outlet before performing any procedure in this section.

#### TO PREVENT SERIOUS INJURY FROM TOOL FAILURE:

Do not use damaged equipment. If abnormal noise or vibration occurs, have the problem corrected before further use.


### Cleaning, Maintenance, and Lubrication

- 1. **BEFORE EACH USE**, inspect the general condition of the tool. Check for:
  - · loose hardware,
  - · misalignment or binding of moving parts,
  - · damaged cord/electrical wiring,
  - · cracked or broken parts, and
  - any other condition that may affect its safe operation.


- AFTER USE, wipe external surfaces of the tool with clean cloth.
- Periodically, wear ANSI-approved safety goggles and NIOSH-approved breathing protection and blow dust out of the motor vents using dry compressed air.
- 4. AWARNING! TO PREVENT SERIOUS INJURY: If the plug or the supply cord of this power tool is damaged, it must be replaced only by a qualified service technician.

#### **Replacing Drive Belt**


Remove Belt Cover.

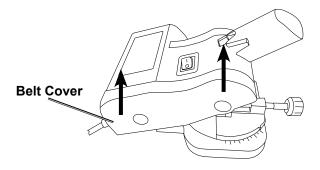

2. Remove the Drive Belt from Pulley A, then remove from Pulley B.

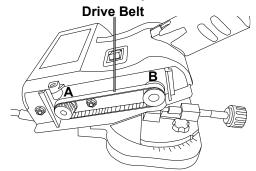

3. Place new Drive Belt over Pulley B, then over Pulley A.

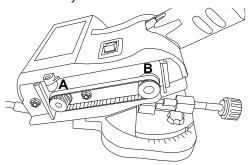

4. Center Drive Belt on Pulleys, then replace the Belt Cover.

# **Troubleshooting**

Problem	Possible Causes	Likely Solutions
Tool will not start.	Cord not connected.	Check that cord is plugged in.
	2. No power at outlet.	Check power at outlet. If outlet is unpowered, turn off tool and check circuit breaker.     If breaker is tripped, make sure circuit is right capacity for tool and circuit has no other loads.
	Internal damage or wear. (Carbon brushes or bearings, for example.)	3. Have technician service tool.
Tool operates slowly.	Forcing tool to work too fast.	Allow tool to work at its own rate.
	Extension cord too long or cord diameter too small.	2. Eliminate use of extension cord. If an extension cord is needed, use one with the proper diameter for its length and load. See <i>Extension Cords</i> in <i>Grounding</i> section on page 6.
Performance decreases over time.	Carbon brushes worn or damaged.	Have qualified technician replace brushes.
Excessive noise or rattling.	Internal damage or wear. (Carbon brushes or bearings, for example.)	Have technician service tool.
Overheating.	Forcing tool to work too fast.	Allow tool to work at its own rate.
	Blocked motor housing vents.	Wear ANSI-approved safety goggles and NIOSH-approved dust mask/respirator while blowing dust out of motor using compressed air.
	Motor being strained by long or small diameter extension cord.	3. Eliminate use of extension cord. If an extension cord is needed, use one with the proper diameter for its length and load. See <i>Extension Cords</i> in <i>Grounding</i> section on page 6.



Follow all safety precautions whenever diagnosing or servicing the tool. Disconnect power supply before service.

#### PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO.

#### **Parts List**


Part	Description	Qty
1	Motor	1
2	Washer	4
3	Lock Ring	2
4	Pulley	1
5	Drive Belt	1
6	Switch	1
7	Belt Cover	1
8	Handle	1
9	Vise	1
10	Base	1
11	Vise Screw	1
12	Pulley	1
13	Screw	4
14	Bearing	2
15	Spindle	1
16	Arbor	1
17	2" HSS Blade	1
18	Flange	1
19	Screw	1
20	Upper Blade Guard	1
21	Miter Lock Knob	1
22	Nut	1

Part	Description	Qty
23	Clamp	1
24	Moveable Jaw	1
25	Ring	2
26	Safety Lever	1
27	Torsion Spring	1
28	Pin	1
29	Ring	2
30	Motor Housing A	1
31	Cord Clamp	1
32	Screw	2
33	Cord Cover	1
34	Power Cord	1
35	Motor Housing B	1
36	Screw	6
37	Washer	1
38	Bushing	1
39	Screw	1
40	Spring	1
41	Small Hex Wrench	1
42	Lower Blade Guard	1
43	Connecting Rod	1
44	Large Hex Wrench	1

Record Product's Serial Number Here:\_

Note: If product has no serial number, record month and year of purchase instead.

**Note:** Some parts are listed and shown for illustration purposes only, and are not available individually as replacement parts. Specify UPC 193175498298 when ordering parts.

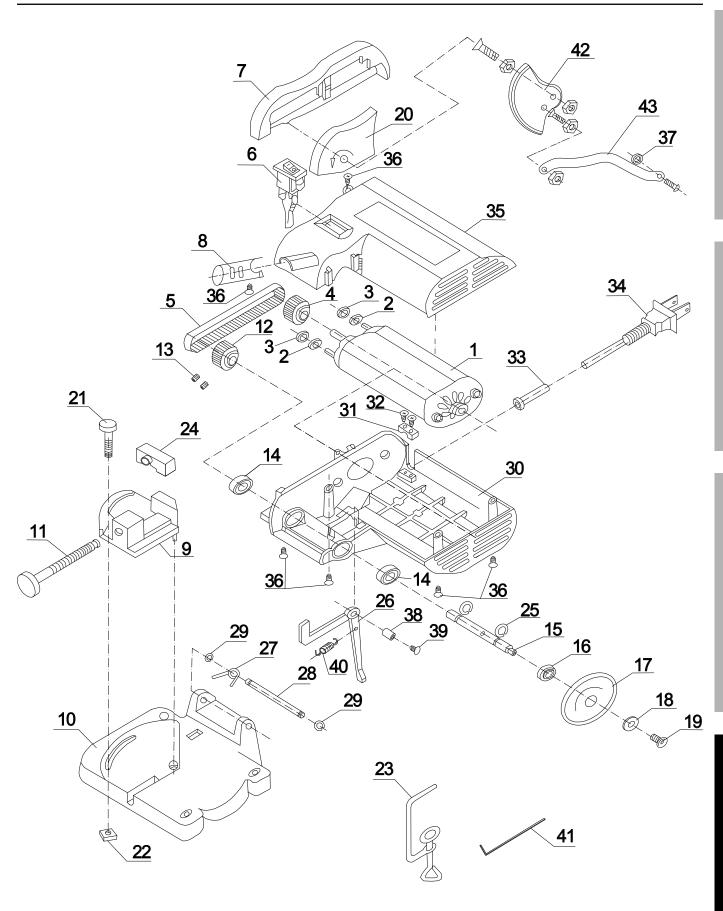

#### **Limited 90 Day Warranty**

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

