

# ***PITTSBURGH***<sup>®</sup>

# **IMPORTANT!**

## **Follow these instructions before operating:**

1. Turn handle counterclockwise to open release valve.
2. Remove four screws holding on pump cover.
3. Remove oil fill plug and top off hydraulic oil.
4. Apply pressure to saddle and quickly pump handle several times.
5. Check oil fill hole again and top off with hydraulic oil if necessary.
6. Replace the oil fill plug and turn handle clockwise to close release valve.
7. Test several times for proper operation before attempting to lift a load.

**For questions, please call or e-mail our technical support**

**1-888-866-5797**

**[productsupport@harborfreight.com](mailto:productsupport@harborfreight.com)**