

Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's Date Code in the back of the manual near the assembly diagram (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

26d



HEAVY DUTY 5-TIER GARAGE SHELVING



72763

Visit our website at: <https://www.harborfreight.com>
For product assistance, visit [harborfreight.com/customer-service/contact-us](https://www.harborfreight.com/customer-service/contact-us)

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please visit [harborfreight.com/customer-service/contact-us](https://www.harborfreight.com/customer-service/contact-us) as soon as possible.

Copyright© 2025 by Harbor Freight Tools®. All rights reserved.
No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

⚠ WARNING

Read this material before using this product.
Failure to do so can result in serious injury.
SAVE THIS MANUAL.

Specifications

Shelf Weight Maximum	1000lb per shelf (evenly distributed)
Overall Weight Maximum	5000lb total capacity for five shelves (evenly distributed)
Dimensions	48-1/4" L x 24" W x 78" H

WARNING! TO PREVENT SERIOUS INJURY FROM PRODUCT FAILURE DUE TO OVERLOADING: Do not place any objects or load on top Shelf.

IMPORTANT SAFETY INFORMATION

Assembly Precautions

1. Assemble only according to these instructions. Improper assembly can create hazards.
2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
3. Keep assembly area clean and well lit.
4. Keep bystanders out of the area during assembly.
5. Do not assemble when tired or when under the influence of alcohol, drugs or medication.
6. Weight capacity and other product capabilities apply to properly and completely assembled product only.

Use Precautions

1. This product is not a toy. Do not allow children to play with or near this item.
2. Use as intended only.
3. Inspect before every use; do not use if parts are loose or damaged.
4. Use only on a flat level surface.
5. Do not climb or stand on.
6. Mount to Wall Stud to reduce risk of tipping and allow maximum capacity.
7. Do not exceed 1000lb weight capacity of each Shelf. **Be aware of dynamic loading!** Suddenly dropping load on Shelf may briefly create excess load causing product failure.
 - a. Distribute weight evenly from bottom up.
 - b. Store heaviest items on lowest Shelves.
8. Maintain product labels and nameplates. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.
9. The warnings, precautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.




SAVE THESE INSTRUCTIONS.

Assembly Instructions




Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this document including all text under subheadings therein before set up or use of this product.

- Shelving may be assembled in a single or double column configuration. Couplers are not needed for a double column configuration.

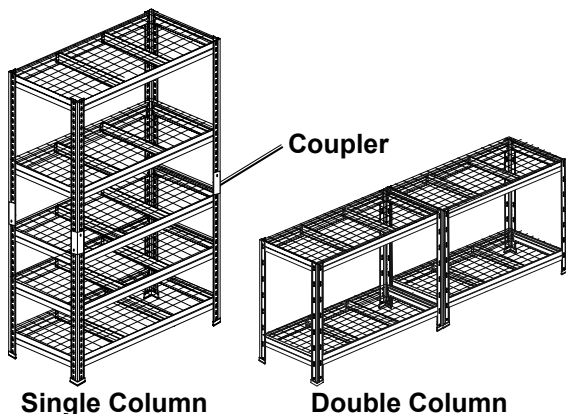


- Orientate Uprights with the narrow ends of their Slots facing down. Using a rubber mallet (sold separately), tap a Coupler onto an upright, then tap another Upright into the Coupler until fully seated. Repeat for the remaining Uprights.

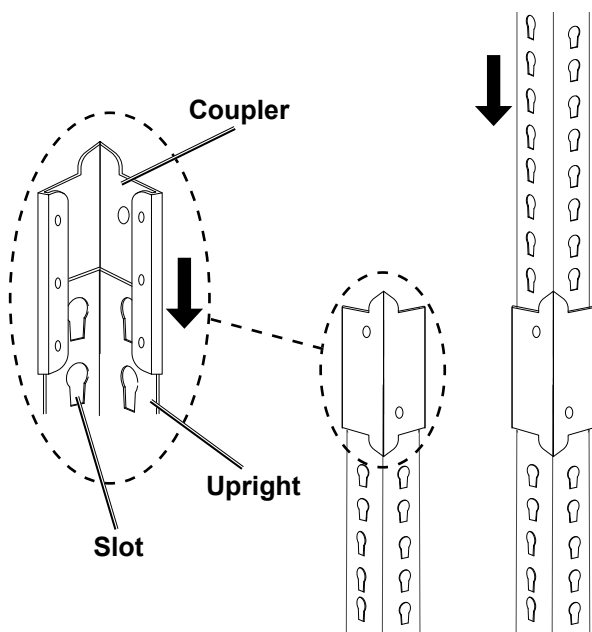


- Assemble Cross Beams to two Uprights in the desired positions by inserting the Rivets into the Slots and tapping them down with the rubber mallet to secure. Repeat for the remaining Uprights.

Note: Make sure the Cross Beams are placed into the same holes on each Upright so they are level.

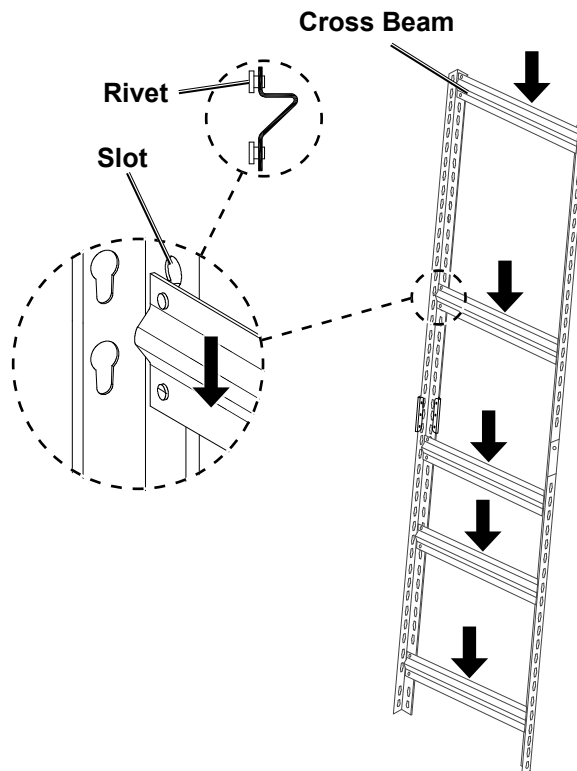


- Place Caps on the ends of the Uprights that will rest on the ground. Tap them on with the mallet to secure.

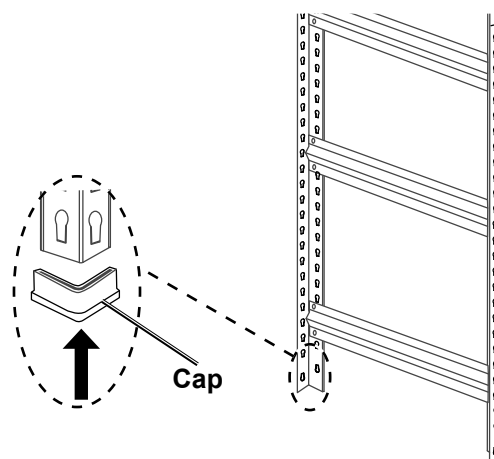


Note: Caps may be placed on the upper ends of Uprights to protect from sharp edges if desired.

5. Assemble Beams to two Upright assemblies next to the Cross Beams by inserting the Rivets into the Slots, tapping them down with a mallet to secure.


Note: Place Beam with Warning label in front, visible at eye level to the user.

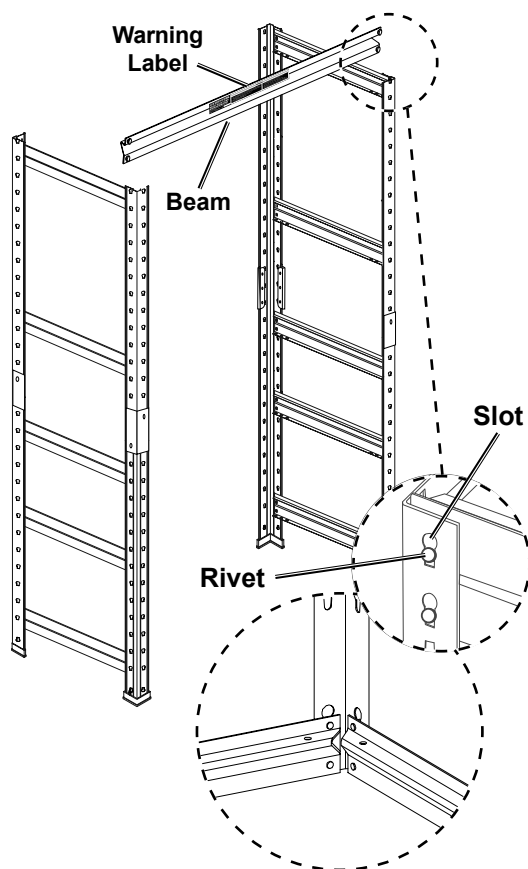


6. Assemble Braces to the Beams by sliding their Slots under the Rivets on the interior of the Beams, tapping them with a mallet to secure.

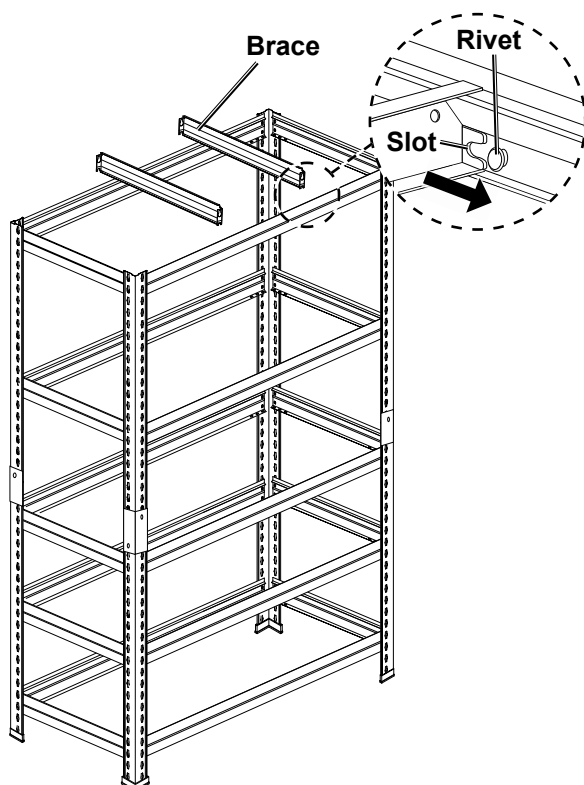

7. Assemble Shelving to each tier with long round wire sections up and short round wire sections down. Make sure they are seated securely.

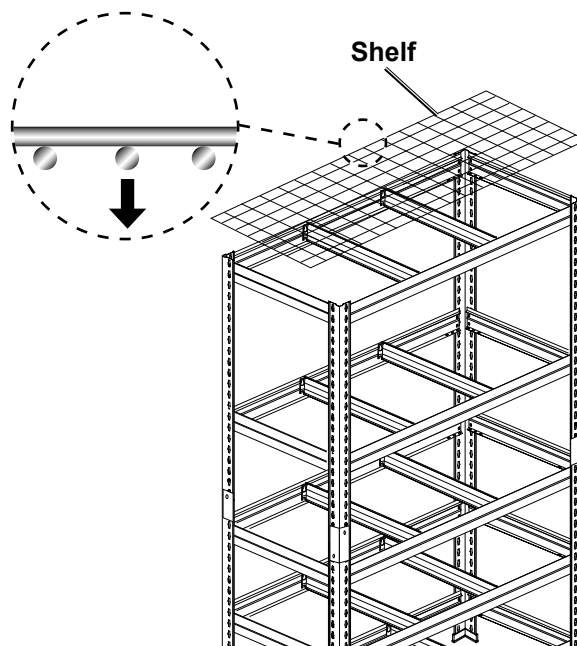

8. **Double Column Configuration Only:**
For additional stability, slide lock pin grooves into the slots of adjacent Uprights to lock them together.

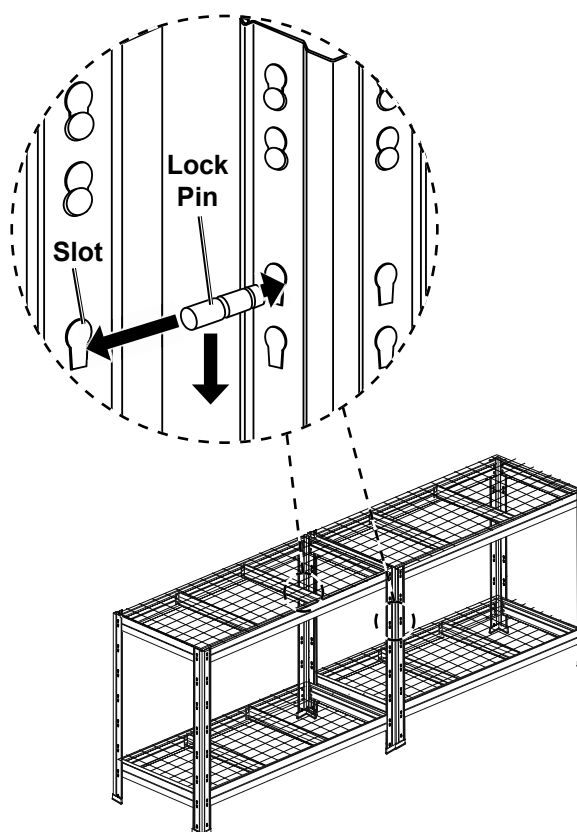


WARNING! TO PREVENT SERIOUS INJURY: Mount to wall to reduce risk of tipping and allow maximum capacity.

WARNING! TO PREVENT SERIOUS INJURY FROM ELECTRIC SHOCK: Verify the installation surface has no hidden utility lines before drilling or driving screws.


9. Place Shelving on a hard, level, flat, surface capable of supporting the weight of the product and its contents.
10. Secure Shelving to wall studs with Screws or use Drywall Anchors and Screws to secure to wall without studs. If different Anchors are to be used, purchase them separately.

Note: Ensure screw head is seated in narrow portion of slot. Screw head diameter must be larger than narrow portion of Slot.

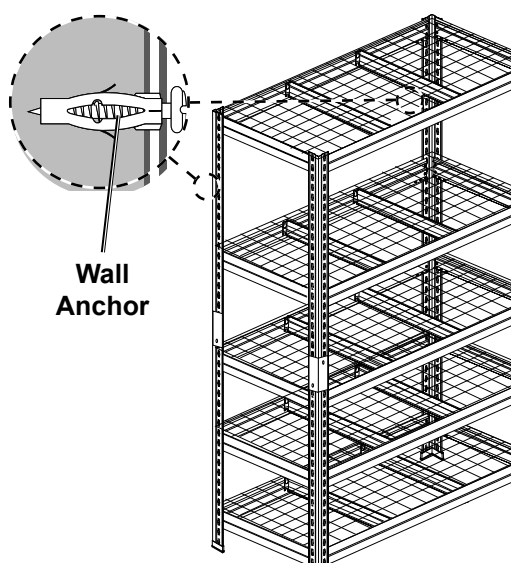


11. Check that the Shelving is secure and flush against the wall, with all four Uprights flat on the floor.

Note: Verify the Warning label is on the front of the rack and visible at eye level to the user.

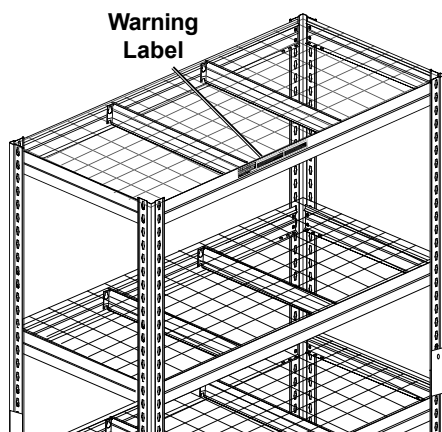

WARNING! TO PREVENT SERIOUS INJURY FROM PRODUCT FAILURE DUE TO OVERLOADING: Do not place any objects or load on top Shelf.

12. Do not exceed 1000lb weight capacity of each Shelf. **Be aware of dynamic loading!** Suddenly dropping load on Shelf may briefly create excess load causing product failure.
 - a. Distribute weight evenly from bottom up.
 - b. Store heaviest items on lowest Shelves.

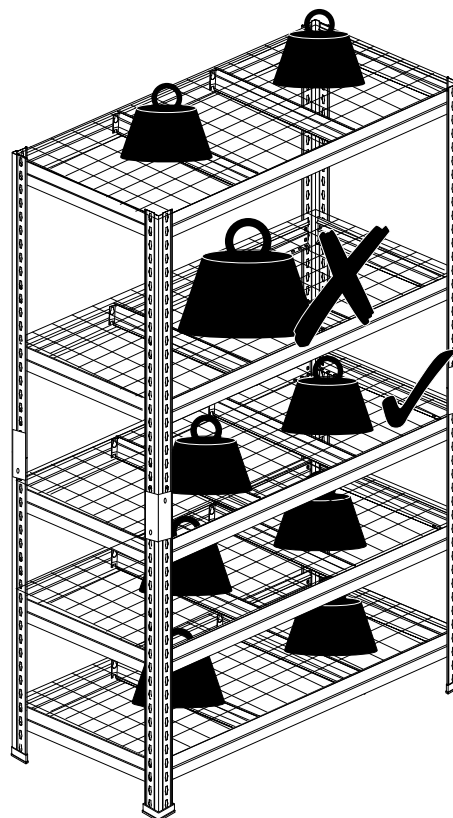

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE COMPONENT LIST AND ASSEMBLY DIAGRAM IN THIS DOCUMENT AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

Component List

Part	Description	Qty
1	Cross Beam	10
2	Beam	10
3	Brace	10
4	Coupler	4
5	Cap	8

Part	Description	Qty
6	Shelf	5
7	Upright	8
8	Wall Anchor	2
9	Lock Pin	2


The component list and assembly diagram are shown for reference only.
To view all currently available replacement parts, please visit harborfreight.com/parts

Record Product's Date Code Here: _____

Note: If product has no date code, record month and year of purchase instead.

Note: Some parts are listed and shown for illustration purposes only, and are not available individually as replacement parts. Specify UPC 193175557582 when ordering parts.

Assembly Diagram

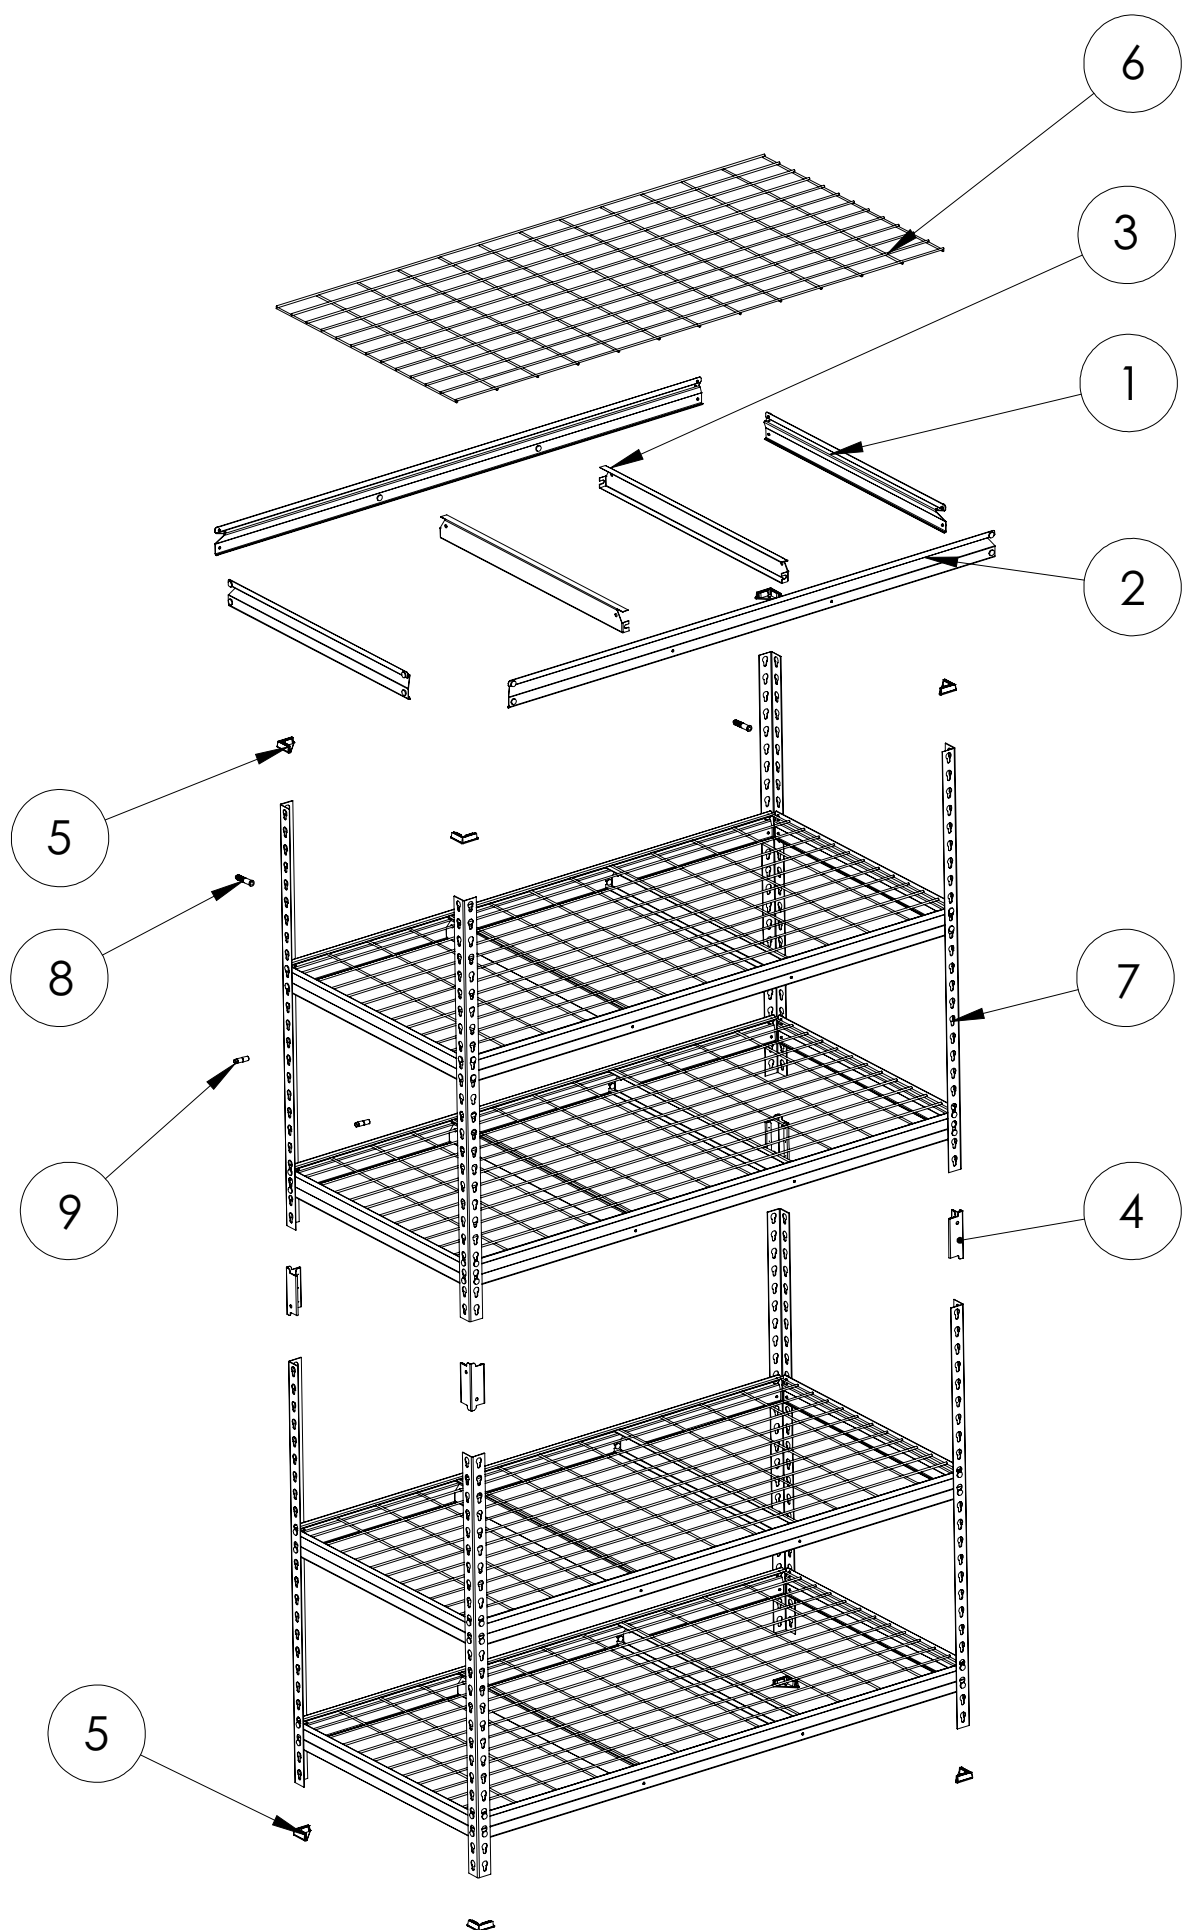

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

U.S. GENERAL[™]

For product assistance, visit harborfreight.com/customer-service/contact-us