



Check total Start-up watts amount before plugging in any equipment.

Check total Start-up watts amount before plugging in any equipment.

To check the wattage amount:

1. Add up the Running Watts for all items you would like to use at any given time.
2. Make sure this total is under the 8,000 rated generator wattage.
3. Find the single highest starting watts for the selected items and add to the total.
4. Make sure total is under the 10,000 maximum rated generator wattage.
5. Plug in and turn on products from largest wattage to smallest.

Typical Product Watts

Check your appliance for actual ratings.

WATTAGE ESTIMATE TABLE

Equipment	Running Watts
Total Running Watts (must be less than 8,000)	
Largest Additional Start-up Watts	
Total Startup Watts needed for all loads (must be less than 10,000)	

PREDATOR.

26677 Agoura Road • Calabasas, CA 91302 • 1-800-444-3353

WATTAGE ESTIMATE CHART

EMERGENCY		
DEVICE	RUNNING WATTS	ADDITIONAL START-UP WATTS
Refrigerator / Freezer	700	1500
Radio	100	0

HOUSEHOLD		
DEVICE	BURNING WATTS	ADDITIONAL START-UP WATTS
Computer w/ Monitor	800	0
Electric Clothes Dryer	5500	500
Electric Range	2100	0
Electric Water Heater	2000	0
Light Bulb - 100 Watts	100	0
Microwave - 1000 Watts	1000	200
Sump Pump - 1/2 HP	1000	1100
Television - 27"	400	0
Washing Machine	1100	1100
Well Pump - 1/2 HP	1000	1000

JOB SITE		
DEVICE	RUNNING WATTS	ADDITIONAL START-UP WATTS
Air Compressor - 1/2 HP	1000	1000
Table Saw - 10"	1700	1300
Belt Sander - 3"	1200	1200
Hand Drill - 1/2"	600	600
Halogen Work Light	1000	0
Reciprocating Saw	900	900

LAWN & GARDEN		
DEVICE	RUNNING WATTS	ADDITIONAL START-UP WATTS
Hedge Trimmer	400	400
Pressure Washer	1200	1200
Lawn Mower	1200	1200
Edger	1000	1000


RECREATION		
DEVICE	RUNNING WATTS	ADDITIONAL START-UP WATTS
AM/FM Radio	100	0
Electric Grill	1700	0
Inflator Pump	50	100
CD/DVD Player	100	0
Box Fan - 20"	200	200
Coffee Maker	600	0

HEATING & COOLING		
DEVICE	RUNNING WATTS	ADDITIONAL START-UP WATTS
Central AC - 10,000 BTU	1500	3000
Furnace Fan - 1/2 HP	900	1400
Space Heater	1800	0
Window AC - 10,000 BTU	1200	600

**Note: Wattage listed are estimates for that type of equipment only.
Check nameplate wattages on all loads before connecting to generator**

IF ANY CIRCUIT BREAKERS TRIP:

1. Make sure that **ALL circuit breakers** are reset before starting the generator again.
2. Adjust the plugs so the loads are shared across outlet circuits.

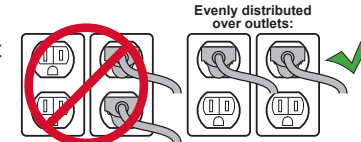

PREDATOR

QUICK START GUIDE


8,000/10,000
RUNNING WATTS MAX STARTING WATTS

72624

Generator Components

-
- A.** Fuel Gauge
B. Fuel Cap
C. Digital Display
D. Low Oil Alert
E. Electric Start/Stop
F. Power Switch
G. Air Filter
H. Choke Lever
I. Fuel Valve
J. Starter Handle
K. Automatic Idle Down
L. Battery Charging Port
M. 20AAC Breakers
N. 30AAC Breaker
O. 120/240V Receptacle
P. 30AAC Breaker
Q. Ground Terminal
R. AC 120V Receptacle
S. GFCI AC 120V Receptacles
T. CO Sensor Alert
U. 12V Starting Battery
V. Oil Fill Plug
W. Oil Drain Plug
- ⚠ WARNING**

To prevent serious injury:
 READ MANUAL BEFORE USE

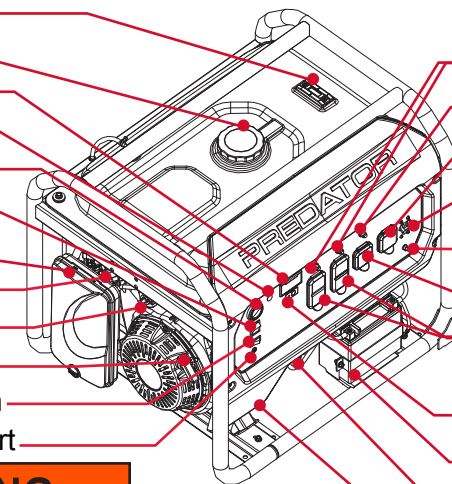

⚠️ WARNING

**To prevent serious injury:
READ MANUAL BEFORE USE.**



BEFORE USING:

 
Position generator outside and unplug all electrical loads

⚠ DANGER

Using a generator indoors **CAN KILL YOU IN MINUTES**. Generator exhaust contains carbon monoxide. This is a poison you cannot see or smell.



NEVER use inside a home or garage, **EVEN IF** doors and windows are open.





Only use **OUTSIDE** and far away from windows, doors, and vents.

⚠ DANGER

Do not use in trailers, truck beds, or tents.




Use at least 20 feet away from people, animals, and structures with exhaust pointed away.

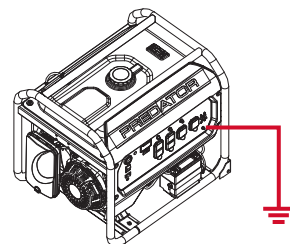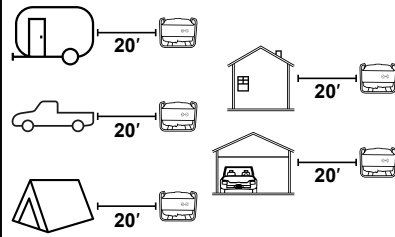


GROUND GENERATOR TO PREVENT ELECTRIC SHOCK

ADD FLUIDS

Check oil
If needed, fill as shown below

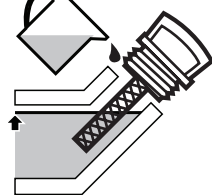

Add oil to engine crankcase **WITHOUT OIL GENERATOR WILL NOT START**

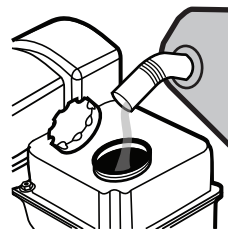

Add fuel to within 1" of the rim of the tank

Note: Use regular Unleaded 87 Octane gasoline. **E85 Ethanol blend will damage engine.**


Manual Starting Procedure

CHOKE LEVER

RUN → START



CHOKE TO START

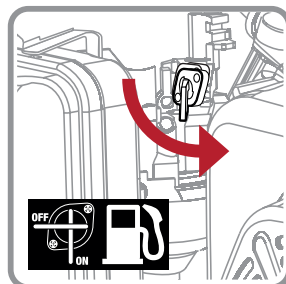


OPEN FUEL VALVE


POWER SWITCH



PUSH SWITCH TO RUN

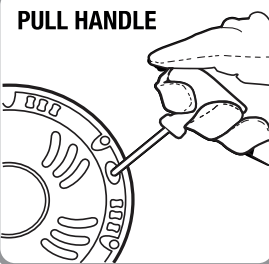


MANUAL START

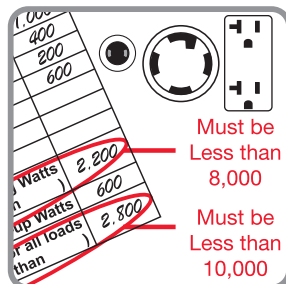


CHECK TOTAL WATTS THEN PLUG IN PRODUCTS

Electric Starting Procedure

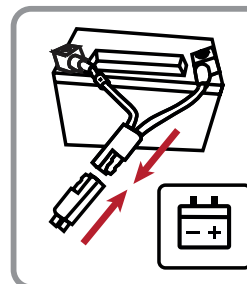


CONNECT 12V BATTERY

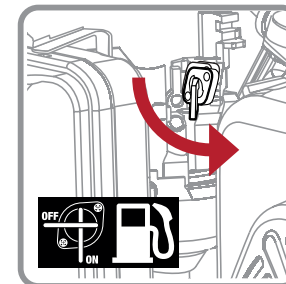


OPEN FUEL VALVE


POWER SWITCH

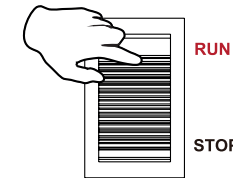


PUSH SWITCH TO RUN

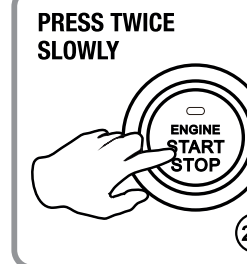

ELECTRIC START

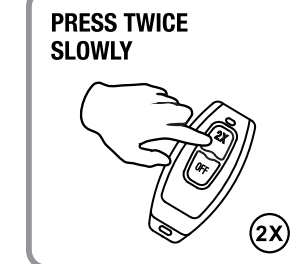

REMOTE START

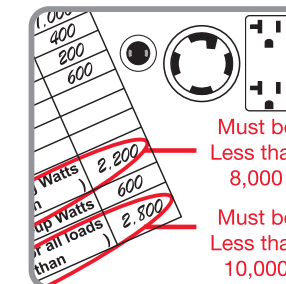


CHECK TOTAL WATTS THEN PLUG IN PRODUCTS

12V Battery Charging Procedure

WHEN GENERATOR IS NOT IN USE OR WILL BE STORED FOR EXTENDED PERIODS, USE THE BATTERY CHARGER/MAINTAINER PROVIDED TO MAINTAIN THE BATTERY.

PLUG THE CHARGER/MAINTAINER POWER CORD INTO THE BATTERY CHARGING PORT ON THE GENERATOR.

PLUG THE CHARGER/MAINTAINER INTO AN ELECTRICAL OUTLET.

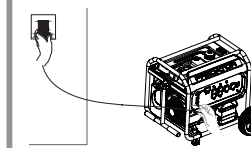

Handle & Wheel Kit sold separately.

DISCONNECT THE CHARGER/MAINTAINER BEFORE USING THE GENERATOR.