

ITEM 91550



Watch Case Opener

with 12 Pins

CAUTION

1. Always wear ANSI approved safety goggles when using this product.
2. **Watch repairs should only be performed by a qualified watch repairman.** Harbor Freight Tools cannot be held responsible for damage to any property that this tool is used upon.
3. Contains small parts that can be choked upon or swallowed; keep out of reach of children.
4. Never exert excessive force on this tool; it may break, damaging property and possibly causing personal injury.

INSTRUCTIONS ON REVERSE.

Operation Instructions

1. Set the watch face-down on a soft, non-scratch surface. Select the proper pin type for the watch to be opened.
2. Count the number of notches on the back of the watch cover.

If the number of notches...

Is divisible by 3 (3,6,9,12):

- a. Insert three of the type of pin you selected above into the pin holders on the opener.
- b. Position the watch case with a notch directly at the bottom.
- c. Align the two side pins with the two notches an equal distance from each other and the notch at the bottom. Push the top of the center wheel forward until the pins fit into the two notches.
- d. Turn the handle clockwise until the case is gripped by all three pins.

Is even (2,4,6,8):

- a. Insert two of the type of pin you selected above into the two pin holders near the end of the opener, one on each side.
- b. Align the two side pins with two notches on opposite sides of the case.
- c. Push the top of the center wheel forward until the case is gripped by both pins.

3. While keeping the watch still, twist the handle counterclockwise. If the watchband obstructs turning, reposition the opener as stated above and turn again.
4. Tightening is the reverse of removal.