




93242

# LASER MARKER

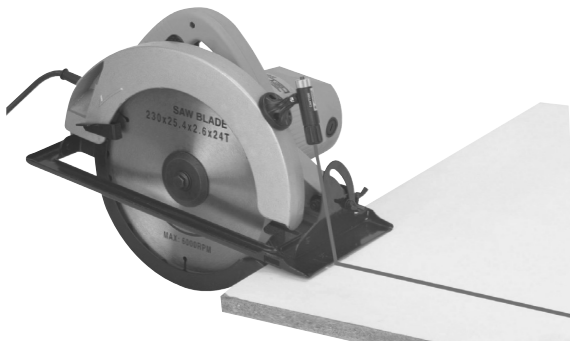

**PLEASE NOTE: CIRCULAR SAW NOT INCLUDED**

## **CAUTION**

1. Always wear ANSI-approved safety goggles when working with tools or equipment.
2. Keep out of reach of children.
3. Always cover the laser aperture whenever changing batteries. The laser may activate unexpectedly.
4. Only use three LR44 button cell batteries to power this device.
5. Do not modify this device or use this device of a purpose for which it was not intended.
6. People with pacemakers should consult their physician(s) before use. Electromagnetic fields in close proximity to a heart pacemaker could cause interference to or failure of the pacemaker.

## **CAUTION**

**LASER LIGHT**  
DO NOT STARE  
INTO BEAM



Max. Output: 0.43 mW,  
Wavelength: 630-660 nm  
CLASS IIa LASER PRODUCT

This product complies with  
21 CFR 1040.10 and 1040.11  
Distributed by Harbor Freight Tools,  
3491 Mission Oaks Blvd,  
Camarillo, CA 93011 93242

Manufacture Date: \_\_\_\_\_

**Maximum Range: 9'**  
**Line Thickness:**  
**4mm @ 9'**  
**USE**

This marker can be attached directly to a power tool or work surface to provide a clear line.

It can be attached by the magnets on the base, the double-sided tape, or the machine or wood screws. If screws are used, ensure that the mounting surface contains no hidden wires or sensitive components, and that it will not interfere with the operation of the tool. Cap rotates to turn line. Align carefully before use.

### **Battery Replacement**

1. Switch laser off and cover laser aperture.
2. Unscrew brass battery cover and remove old batteries.
3. Insert 3 fresh LR44 batteries, negative end first.
4. Make sure aperture is covered while you reattach battery cover securely.

**SAVE THESE INSTRUCTIONS.**