

Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Keep this manual and the receipt in a safe and dry place for future reference.

NOSE HAIR TRIMMER



REV 12k

Visit our website at: <http://www.harborfreight.com>
Email our technical support at: tech@harborfreight.com

ITEM 93838

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-800-444-3353 as soon as possible.

Copyright© 2006 by Harbor Freight Tools®. All rights reserved.
No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

⚠ WARNING

**Read this material before using this product.
Failure to do so can result in serious injury.
SAVE THIS MANUAL.**

Specifications

| | |
|------------------|------------------------------------|
| Electrical Input | One "AA" Battery (sold separately) |
|------------------|------------------------------------|

Important Safety Information

1. The Trimmer is not waterproof and is not intended to be submerged or rinsed.
2. The Trimmer has sharp edges that can cause injury if not used properly.
3. Do not insert the Trimmer further into your nostril or ear than the narrow tip on the outer blade. Do not press the Trimmer forcefully into your nostril or ear. For facial hair only.
4. Do not attempt to use the Trimmer if any part of the blade appears damaged. Injury to the nostril or ear might occur. Do not use the Trimmer if the switch does not turn it on and off.
5. This product is not a toy. Keep it out of reach of children.
6. Keep children and bystanders away while operating the Trimmer. Distractions can cause you to lose control.
7. Stay alert, watch what you are doing and use common sense when operating the Trimmer. Do not use the Trimmer while you are tired or under the influence of drugs, alcohol or medication.
8. Ensure the switch is in the off-position before installing the battery.
9. Keep clean. Properly maintained Trimmers are less likely to bind and are easier to control.
10. Use as intended only.
11. Have your Trimmer serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the Trimmer is maintained.
12. The warnings, precautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.



SAVE THESE INSTRUCTIONS.

Instructions



Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this document including all text under subheadings therein before set up or use of this product.

Functions



Installing Battery

Note: This Trimmer uses one “AA” battery (sold separately).

1. Rotate the Battery Cover counterclockwise, then pull it off the end of the Housing.
2. Insert one “AA” battery (sold separately) into the battery compartment with the polarity placed as indicated.
3. Replace the Battery Cover.

Operating Instructions

1. **CAUTION! TO PREVENT INJURY: Inspect before every use. Do not use the Trimmer if any part of the blade appears damaged.**
 2. Turn the Trimmer on by sliding the Switch toward the Blade Cover.
 3. Using a mirror (sold separately), slowly and carefully insert the tip of the Nose Hair Attachment into your nostril or ear canal.
 4. Slowly move the Trimmer as needed to trim hair.
- CAUTION!** Do not insert the Trimmer further into your nostril or ear than the Blade Tube will allow. Do not press the Trimmer forcefully into your nostril or ear.
5. To prevent accidents, turn off the tool after use. Remove and clean the Blade, then store the tool indoors out of children’s reach.

Cleaning

1. Make sure the Trimmer is off.
 2. Rotate the Blade Cover counterclockwise until the line matches with the line on the body, then pull it off the top of the Housing.
 3. Remove the Blade Tube to expose the Blade Holder.
 4. Clean the Blade with the included Brush, or a clean cloth.
 5. Replace the Blade Tube and Blade Cover.
- NOTICE:** The Trimmer is not waterproof and is not intended to be submerged or rinsed.

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.