



Megaphone With Safety Siren

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-800-444-3353 as soon as possible.

95271 Megaphone

INSTRUCTIONS AND PRECAUTIONS

Visit our website at:
<http://www.harborfreight.com>

⚠ WARNING

Read this material before using this product. Failure to do so can result in serious injury. **SAVE THIS MANUAL.**

Copyright© 2011 by Harbor Freight Tools®. All rights reserved. No portion of this document or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this document may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

For technical questions or replacement parts, please call 1-800-444-3353.



Specifications

Output	50 W / 0.9 A
Batteries	8 "D" Batteries (not included)
Power Duration	6 Hours
Effective Distance	1/3 mile / 656 yards

Important Safety Information

1. Use only according to these instructions. Improper usage can create hazards.
2. Amplification through Megaphone can cause hearing damage at close range. Do not use close to a person's ears.
3. Children should only use while under close adult supervision.
4. Position batteries in proper polarity and do not install batteries of different types, charge levels, or capacities together.
5. Do not place under direct sunlight or high temperature or expose to rain, water or high humidity.
6. Remove batteries if Megaphone will not be in use for a long period of time.
7. Use as intended only.
8. Inspect before every use; do not use if parts are loose or damaged.
9. Maintain product labels and nameplates. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.

Operating Instructions



Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this document including all text under subheadings therein before set up or use of this product.

Installing Batteries

1. Flip up the Latch (5) on top of the Battery Housing (9) and open the Battery Cover (6).
2. Remove four battery tubes from inside Battery Housing. Insert two "D" batteries into each battery tube, making sure to follow indicated polarity.
3. Insert four battery tubes back into Battery Housing.
4. Close Battery Cover and close Latch, locking Battery Cover in place.

Using Megaphone

1. Remove the Microphone (7) from the Microphone Holder (10) that is located on the back of the Battery Housing.
2. Slide the Signal Switch (2) located on the back of the Handle (4) to TALK.
3. Point the Speaker (1) towards the person or group you wish to address.
4. Bring the Microphone close to your lips and speak in a normal voice into the Microphone.
5. Use the Volume Control Knob (8) on the side of the Microphone to adjust the Speaker's volume level.

NOTE: The closer you are to the Microphone, the better the amplification will be.

6. To use the siren function, slide the Signal Switch to SIREN and then press the Trigger (3) located on the Handle. The Speaker will then generate a continuous siren sound.
7. Release the Trigger to deactivate the siren.
8. To change back to talk mode, slide the Signal Switch back to TALK. The siren sound will automatically stop, even if the Trigger is still pressed.
9. Use the Carrying Strap (11) to carry the Megaphone without holding it by the Handle.
10. If you use the Megaphone and the Speaker's volume is weak even with the Volume Control turned up, then the batteries may need to be replaced.

Record Serial Number Here:

Note: If product has no serial number, record month and year of purchase instead.

PLEASE READ THE FOLLOWING CAREFULLY

NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

Maintenance and Servicing

1. **Before each use**, inspect general condition of tool. Check for misalignment or binding of moving parts, cracked or broken parts, and any other condition that may affect its safe operation. **Do not use damaged equipment.**
2. **After use**, clean external surfaces with a mild detergent. Do not use solvents.
3. **When storing**, keep Megaphone in a clean, dry, safe location that is out of reach of children.
4. If Megaphone will not be in use for a long period of time, remove batteries to prevent battery corrosion and possible damage to internal circuits.

Parts List and Diagram

Part	Description	Qty
1	Speaker	1
2	Signal Switch (not shown)	1
3	Trigger	1
4	Handle	1
5	Latch	1
6	Battery Cover	1

Part	Description	Qty
7	Microphone	1
8	Volume Control Knob	1
9	Battery Housing	1
10	Microphone Holder (not shown)	1
11	Carrying Strap	1

