



Model 98800

WHEEL CLEANING STAND

INSTRUCTIONS AND PRECAUTIONS

Distributed exclusively by Harbor Freight Tools®.

3491 Mission Oaks Blvd., Camarillo, CA 93011

Visit our website at: <http://www.harborfreight.com>



SAVE THESE INSTRUCTIONS. READ ALL PRECAUTIONS AND INSTRUCTIONS.

Copyright© 2008 by Harbor Freight Tools®. All rights reserved. No portion of this document or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this document may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

For technical questions or replacement parts, please call 1-800-444-3353.



at the number shown on the cover of this document as soon as possible.

IMPORTANT SAFETY INFORMATION

Assembly Precautions

1. Assemble only according to these instructions. Improper assembly can create hazards.
2. Wear ANSI-approved safety goggles and heavy-duty work gloves during use.
3. Do not use engine to turn wheel.
4. Keep assembly area clean and well lit.
5. Keep bystanders out of the area during assembly.
6. Use the proper motorcycle wheel chock to stabilize the motorcycle. Make certain to use a sidestand and proper support to avoid damage to property and personal injury.
7. Use only on a flat and level area. Do not use on sloping or uneven surfaces.

SPECIFICATIONS

Maximum Weight Capacity	500 Lbs.
Dimensions	12" L x 9-1/16" W x 1-1/2" H
Roller Dimensions	1-1/4" dia. x 7-1/2"

UNPACKING

When unpacking, check to make sure that the item is intact and undamaged. If any parts are missing or broken, please call Harbor Freight Tools

8. Make certain that the motorcycle engine is off and that it is not in gear during use.
 9. Harbor Freight Tools accepts no responsibility for damage to property that may result from the misuse or abuse of the Wheel Cleaning Stand.
 10. Do not use when tired or when under the influence of drugs or medication.
 11. This product is not a toy. Do not allow children to play with or near this item.
 12. Use for intended purpose only.
 13. Inspect before use; do not use if parts are loose or damaged.
 14. Maintain product labels and nameplates. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.
6. Rotate the rear wheel by hand while cleaning, polishing or maintaining the chain.
 7. Make certain to keep the rear wheel in the center of the Wheel Cleaning Stand. If the wheel should slide to the side of the Stand, move it back into the center.
 8. For front wheel cleaning, repeat steps 1 through 7 as above, but placing the Cleaning Stand ahead of the front wheel.

ASSEMBLY INSTRUCTIONS



Read the ENTIRE IMPORTANT SAFETY INFORMATION section at the beginning of this document including all text under subheadings therein before set up or use of this product.

OPERATING INSTRUCTIONS

1. Place the Wheel Cleaning Stand on a flat and level area capable of supporting the Wheel Cleaning Stand and the vehicle being cleaned.
2. Place the Cleaning Stand behind the rear wheel. Wheel must be at a right angle to the direction of the wheel to be cleaned.
3. Manually roll the motorcycle up the Ramp (9) and onto the Wheel Cleaning Stand. Make certain that the rear motorcycle wheel has rolled over the first roller and sits between both Rollers (8). See Parts Diagram on page 3.
4. Allow the rear wheel to fully rest between Rollers (8). Set the motorcycle onto its kickstand. If the motorcycle is leaning too much, it's necessary to place a proper block under the kickstand to reduce the leaning problem.
5. Use a Motorcycle Wheel Chock (available through Harbor Freight Tools) to secure the free wheel.

MAINTENANCE

1. Before each use, inspect the general condition of the Wheel Cleaning Stand. Check for loose screws, misalignment or binding of moving parts, cracked or broken parts, and any other condition that may affect its safe operation.
2. After each use, clean the Wheel Cleaning Stand with a soft, dry towel.
3. Do not use harsh chemicals or solvents to clean the Stand. Do not use abrasives or abrasive materials to clean the Stand as this will damage its protective finish.
4. Periodically lube contact points and Rollers with grease.

Record Serial Number Here: _____

Note: If product has no serial number, record month and year of purchase instead.

Note: Some parts are listed and shown for illustration purposes only, and are not available individually as replacement parts.

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS DOCUMENT AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

LIMITED 90 DAY WARRANTY

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

**3491 Mission Oaks Blvd. • PO Box 6009 •
Camarillo, CA 93011 • (800) 444-3353**

PARTS LIST & ASSEMBLY DIAGRAM

Part	Description	Qty.
1	Side Beam	2
2	Washer	8
3	Bearing	4
4	Connecting Plate	1
5	Screw	4
6	Rubber Pad	6
7	Pin	2
8	Roller	2
9	Ramp Block	1

PARTS AND ASSEMBLY DIAGRAM

