MOTION ACTIVATED LED SECURITY LIGHT

IMPORTANT SAFETY INFORMATION

- 1. Mount only according to these instructions. Improper mounting can create hazards.
- 2. Wear ANSI-approved safety goggles.
- 3. Keep assembly area clean and well lit.
- 4. Keep bystanders out of the area during mounting.
- 5. Do not mount when tired or when under the influence of drugs or medication.
- 6. This product is not a toy. Do not allow children to play with this item.
- 7. Use for intended purpose(s) only.

- Inspect before use; do not use if parts are loose or damaged.
- Verify that installation surface has no hidden utility lines before drilling or driving screws.
- Do not install old and new batteries together. Do not install alkaline, carbon-zinc or rechargeable batteries together. Position batteries in proper polarity. Do not use swollen or leaking batteries.
- Maintain product labels and nameplates. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.

Specifications

Light Dome	6 LED, bright white
Sensor Detector Range/Angle	16 ft. / 100 deg.
Battery	4 x AA (included)

 
Installation Instructions



Read the entire Important Safety Information section at the beginning of this document including all text under subheadings therein before set up or use of this product.

This Motion Detector can be mounted on a drywall or solid stud surface.


WARNING! TO PREVENT SERIOUS INJURY: Verify that installation surface has no hidden utility lines before drilling or driving screws. 1. Using the Mounting Bracket as a template, drill two 1/8" mounting holes.



SAVE THESE INSTRUCTIONS For technical questions, please call 1-888-866-5797.

- 2. If mounting to drywall, insert the two supplied Wall Anchors into the holes.
- Place the Mounting Bracket against the mounting surface aligning the holes. Insert each screw through the holes in the mounting bracket, and screw all the way into the Wall Anchors or solid stud surface.
- 4. Remove Battery Cover from back of Motion Detector. Install four AA batteries (included). Replace Battery Cover.

5. Slide Motion Detector onto Mounting Bracket.

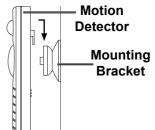

Operating Instructions

- 1. The top of the Motion Detector has a three position switch:
 - a. The left position turns the six LEDs manually on, and stays on.
 - b. The center position turns the LEDs off, and stays off.

- c. The right position enables the "Auto" feature. Any movement within the specified area turns the six LED lights on for one minute.
- 2. To replace batteries or change switch position, slide Motion Detector upward and out from Mounting Bracket.

Record Serial Number Here:

Note: If product has no serial number, record month and year of purchase instead.

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

UPC 792363999380 Page 2

SAVE THESE INSTRUCTIONS For technical questions, please call 1-888-866-5797.

23h Item 99938