

# Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

24a

# PREDATOR®

## 1800 WATT PORTABLE GENERATOR

1400 RUNNING WATTS  
1800 MAX STARTING WATTS



59187

Visit our website at: <http://www.harborfreight.com>  
Email our technical support at: [productsupport@harborfreight.com](mailto:productsupport@harborfreight.com)  
Email our engine support at: [predator@harborfreight.com](mailto:predator@harborfreight.com)


### ⚠ DANGER

Using a generator indoors CAN KILL YOU IN MINUTES.

Generator exhaust contains carbon monoxide. This is a poison you cannot see or smell.




NEVER use inside a home or garage, EVEN IF doors and windows are open.

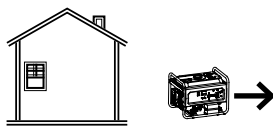


Only use OUTSIDE and far away from windows, doors, and vents.

### ⚠ DANGER

Do not use in trailers, truck beds, or tents.

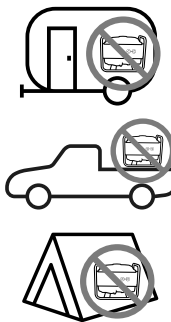

Use at least 20 feet away from people, animals, and structures with exhaust pointed away.

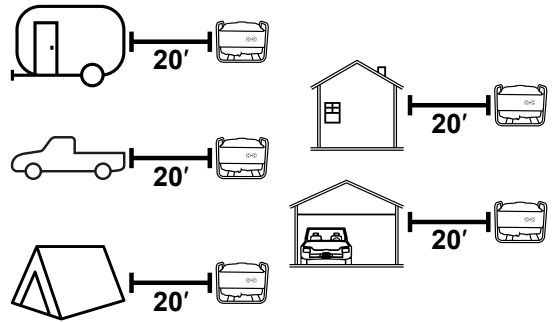

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-888-866-5797 as soon as possible.

### ⚠ WARNING

Read this material before using this product. Failure to do so can result in serious injury. SAVE THIS MANUAL.






Copyright© 2023 by Harbor Freight Tools®. All rights reserved.  
No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

# Table of Contents

|                      |    |                              |    |
|----------------------|----|------------------------------|----|
| Safety .....         | 2  | Maintenance .....            | 17 |
| Setup .....          | 7  | Parts List and Diagram ..... | 22 |
| Specifications ..... | 7  | Warranty .....               | 26 |
| Operation.....       | 11 |                              |    |

# PREDATOR®

## WARNING SYMBOLS AND DEFINITIONS

|   |  |
|---|--|
|  | This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death. |
|  | Indicates a hazardous situation which, if not avoided, will result in death or serious injury.   |
|  | Indicates a hazardous situation which, if not avoided, could result in death or serious injury.  |
|  | Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.   |
|  | Addresses practices not related to personal injury.  |

## IMPORTANT SAFETY INSTRUCTIONS

### SAVE THESE INSTRUCTIONS

This manual contains important instructions that should be followed during installation and maintenance of the Generator and any batteries.


### Set up Precautions


1. This unit is to be installed so that access is restricted to only qualified service personnel who have been instructed of the reasons for the restrictions applied to the location and about any precautions that must be taken. Access shall be through the use of a special tool, or lock and key, or other means of security and shall be controlled by the authority responsible for the location.
2. Gasoline fuel and fumes are flammable, and potentially explosive. Use proper fuel storage and handling procedures. Do not store fuel or other flammable materials nearby.
3. Have multiple ABC class fire extinguishers nearby.
4. Operation of this equipment may create sparks that can start fires around dry vegetation. A spark arrestor may be required. The operator should contact local fire agencies for laws or regulations relating to fire prevention requirements.
5. Set up and use only on a flat, level, well-ventilated surface.
6. All connections and conduits from the Generator to the load must only be installed by trained and licensed electricians, and in compliance with all relevant local, state, and federal electrical codes and standards, and other regulations where applicable.
7. Connections for standby power to a building electrical system must be made by a qualified electrician. The connection must isolate the Generator power from utility power, and must comply with all applicable laws and electrical codes.
8. A transfer switch should be installed by a licensed electrician in compliance with all applicable laws and electrical codes.
9. Wear ANSI-approved safety goggles, heavy-duty work gloves, and dust mask/respirator during set up.
10. Use only lubricants and fuel recommended in this manual.

## Set up Precautions (continued)


11. Improper connections to a building electrical system can allow electrical current from the Generator to backfeed into the utility lines. Such backfeed may electrocute utility company workers or others who contact the lines during a power outage, and the Generator may explode, burn, or cause fires when utility power is restored. Consult the utility company and a qualified electrician if intending to use the Generator for back up power.
12. Do not operate the Generator before grounding. The Generator must be earth-grounded in accordance with all relevant electrical codes and standards before operation.
13. Install carbon monoxide alarm(s) with battery backup in nearby buildings according to manufacturer's instructions.

## Operating Precautions

1.  **CARBON MONOXIDE HAZARD**  
**Using a generator indoors CAN KILL YOU IN MINUTES.**  
Generator exhaust contains carbon monoxide. This is a poison you cannot see or smell.

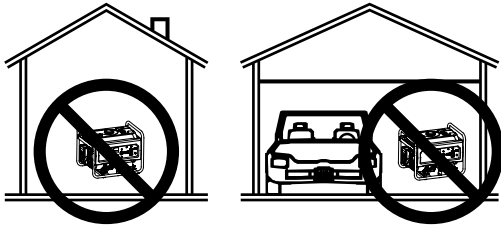

NEVER use inside a home or garage, EVEN IF doors and windows are open.

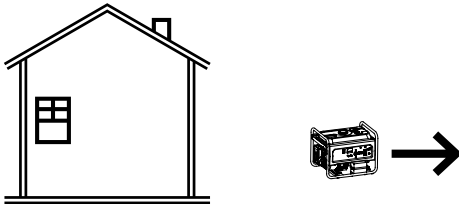

Only use OUTSIDE and far away from windows, doors, and vents.

### 2. CARBON MONOXIDE SHUTOFF

**DANGER! TO PREVENT SERIOUS INJURY AND DEATH FROM CARBON MONOXIDE INHALATION:**  
**The Carbon Monoxide sensor is an additional layer of protection only. Do not use the Generator in any area or situation that will allow carbon monoxide to accumulate.**

- FLASHING RED LIGHT:  
Dangerous levels of carbon monoxide gas have built up and generator will shutoff. Leave immediately until area has aired out. Move Generator to well-ventilated area before operation.

- FLASHING YELLOW LIGHT:  
Carbon monoxide sensor malfunction. Sensor needs service. Do not use the Generator until the sensor is working properly. For technical questions, please call 1-888-866-5797.  
NOTE: Yellow light flashes once after starting to indicate passing self-check and is functioning normally.

**Carbon Monoxide sensor must only be serviced by qualified technician to restore it to original settings. Do not modify or tamper with the Carbon Monoxide sensor. Not following these instructions can result in death or serious injury due to Carbon Monoxide sensor malfunction.**

3. Never use a generator indoors, including in garages, basements, crawlspaces and sheds. Opening doors and windows or using fans will NOT prevent carbon monoxide build up in the home.
4. When using generators, keep them outdoors and far away from open doors, windows, and vents to avoid toxic levels of carbon monoxide from building up indoors.
5. If you start to feel sick, dizzy, or weak while using a generator, get to fresh air right away. The carbon monoxide from generators can quickly lead to full incapacitation and death.
6. Keep children away from the equipment, especially while it is operating.
7. Keep all spectators at least six feet from the Engine during operation.
8. Do not touch engine during use. Let engine cool down after use.
9. Never store fuel or other flammable materials near the engine.
10. Fire Hazard! Do not fill gas tank while engine is running. Do not operate if gasoline has been spilled. Clean spilled gasoline before starting engine. Do not operate near pilot light or open flame.

11. If the plugged-in product operates abnormally or unusually slow, immediately stop using the Generator as a power source. Always read and adhere to the instruction manual of the product to be powered, to make sure that it can be safely and efficiently powered by a portable generator.

12. Before connecting an appliance or power cord to the Generator: Make sure that it is in good working order. Faulty appliances or power cords can create a potential for electrical shock.

13. Do not exceed the maximum power rating of the Generator. Make sure that the total electrical rating of the all of the tools or appliances plugged into the Generator at the same time does not exceed that of the Generator. Check that the startup surge will not be beyond the limit of the Generator. Power levels between rated and maximum may be used for no more than 30 minutes.

14. Avoid substantially overloading which will trip the circuit breaker. Exceeding the time limit for maximum power operation or slightly overloading the Generator may not switch the circuit breaker or circuit protector OFF, but will shorten the service life of the Generator.

15. Do not attempt to connect or disconnect load connections while standing in water, or on wet or soggy ground.

16. Do not touch electrically energized parts of the Generator and interconnecting cables or conductors with any part of the body, or with any non-insulated conductive object.

17. Connect the Generator only to a load or electrical system (120 volt or 240 volt) that is compatible with the electrical characteristics and rated capacities of the Generator.

18. Insulate all connections and disconnected wires.

19. Guard against electric shock. Prevent body contact with grounded surfaces such as pipes, radiators, ranges, and refrigerators.

20. Only use a suitable means of transport and lifting devices with sufficient weight bearing capacity when transporting the Generator.

21. Secure the Generator on transport vehicles to prevent the tool from rolling, slipping, and tilting.

22. Industrial applications must follow OSHA requirements.

23. Do not leave the Generator unattended when it is running. Turn off the Generator (and remove safety keys, if available) before leaving the work area.

24. The Generator engine can produce high noise levels. Prolonged exposure to noise levels above 85 dBA is hazardous to hearing. Always wear ear protection when operating or working around the gas engine while it is operating.

25. Wear ANSI-approved safety glasses, hearing protection, and NIOSH-approved dust mask/respirator during use.

26. People with pacemakers should consult their physician(s) before use. Electromagnetic fields in close proximity to a heart pacemaker could cause pacemaker interference or pacemaker failure. Caution is necessary when near the engine's magneto or recoil starter.

27. Use only accessories that are recommended by Harbor Freight Tools for your model. Accessories that may be suitable for one piece of equipment may become hazardous when used on another piece of equipment.

28. Do not operate in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust. Gasoline-powered engines may ignite the dust or fumes.

29. Keep grounded conductive objects, such as tools, away from exposed, live electrical parts and connections to avoid sparking or arcing. These events could ignite fumes or vapors.

30. Stay alert, watch what you are doing and use common sense when operating this piece of equipment. Do not use this piece of equipment while tired or under the influence of drugs, alcohol or medication.

31. Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothing and gloves away from moving parts. Loose clothes, jewelry or long hair can be caught in moving parts.

32. Parts, especially exhaust system components, get very hot during use. Stay clear of hot parts.

33. Do not cover the Generator or its engine during operation.

34. Keep the Generator, its engine, and surrounding area clean at all times. Keep generator at least 5 feet from combustible objects.

35. Do not smoke, or allow sparks, flames, or other sources of ignition around the equipment, especially when refuelling.

36. Use the Generator, accessories, etc., in accordance with these instructions and in the manner intended for the particular type of equipment, taking into account the working conditions and the work to be performed. Use of the equipment for operations different from those intended could result in a hazardous situation.

37. Do not operate the Generator with known leaks in the engine's fuel system.

38. When spills of fuel or oil occur, they must be cleaned up immediately. Dispose of fluids and cleaning materials as per any local, state, or federal codes and regulations. Store oil rags in a bottom-ventilated, covered, metal container.

39. Keep hands and feet away from moving parts. Do not reach over or across Generator while operating.
40. Before use, check for misalignment or binding of moving parts, breakage of parts, and any other condition that may affect the Generator's operation. **If damaged, have the Generator serviced before using.** Many accidents are caused by poorly maintained equipment.
41. Use the correct generator for the application. Do not modify the generator or its engine, and do not use the generator for a purpose for which it is not intended.

42. Extension Cord - Make sure your extension cord is in good condition. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. An undersized extension cord will cause a drop in line voltage resulting in loss of power and overheating.

The table below shows the correct cord size to use depending on cord length and nameplate ampere rating. If in doubt, use the next heavier gauge. The smaller the gauge number, the heavier the cord.

| RECOMMENDED MINIMUM WIRE GAUGE FOR EXTENSION CORDS |                     |           |            |             |
|--|---------------------|-----------|------------|-------------|
| CURRENT (AMPS)                                     | Load @ 120V (WATTS) | 0 ~ 50 ft | 50 ~ 75 ft | 75 ~ 100 ft |
| 2  | 240                 | 18 AWG    |            |             |
| 4  | 480                 | 18 AWG    |            | 16 AWG      |
| 6  | 720                 | 18 AWG    | 16 AWG     | 14 AWG      |
| 8  | 960                 | 16 AWG    |            | 12 AWG      |
| 10   | 1200                | 16 AWG    | 14 AWG     | 12 AWG      |
| 15   | 1800                | 14 AWG    | 12 AWG     | 10 AWG      |
| 20   | 2400                | 12 AWG    | 10 AWG     |             |
| 25   | 3000                | 12 AWG    | 10 AWG     | 8 AWG       |
| 30   | 3600                | 10 AWG    | 8 AWG      |             |
| 35   | 4200                | 8 AWG     | 6 AWG      |             |
| 40   | 4800                | 6 AWG     |            |             |

# Service Precautions

SAFETY

- Before service, maintenance, or cleaning:**
  - Unplug all devices from the Generator.**
  - Turn the engine switch to its "OFF" position.**
  - Allow the engine to completely cool.**
  - Then, remove the spark plug cap from the spark plug.**
- Keep all safety guards in place and in proper working order. Safety guards include muffler, air cleaner, mechanical guards, and heat shields, among other guards.
- Make sure the Engine Switch is in its "OFF" position before moving the Generator and before performing any service, maintenance, or cleaning procedures on the unit.
- Keep all electrical equipment clean and dry. Replace any wiring where the insulation is cracked, cut, abraded, or otherwise degraded. Replace terminals that are worn, discolored, or corroded. Keep terminals clean and tight.
- Do not alter or adjust any part of the equipment or its engine that is sealed by the manufacturer or distributor. Only a qualified service technician may adjust parts that may increase or decrease governed engine speed.**
- Wear ANSI-approved safety goggles, heavy-duty work gloves, and dust mask/respirator during service.
- Maintain labels and nameplates on the equipment. These carry important information. If unreadable or missing, contact Harbor Freight Tools for a replacement.
- Have the equipment serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the equipment is maintained. Do not attempt any service or maintenance procedures not explained in this manual or any procedures that you are uncertain about your ability to perform safely or correctly.
- Store equipment out of the reach of children.
- Follow scheduled engine and equipment maintenance.

### Refueling:

- Do not refill the fuel tank while the engine is running or hot.
- Do not smoke, or allow sparks, flames, or other sources of ignition around the equipment, especially when refuelling.
- TO PREVENT FUEL LEAKAGE AND FIRE HAZARD, Do not overfill with fuel. Fill with fuel according to the Fuel Level information below the Specification chart for your model.**
- Do not fill fuel tank to the top. Leave a little room for the fuel to expand as needed.
- Refuel in a well-ventilated area only.
- Wipe up any spilled fuel and allow excess to evaporate before starting engine. **To prevent FIRE, do not start the engine while the smell of fuel hangs in the air.**

SETUP

## Button/Coin Battery Safety

OPERATION

### ⚠ WARNING

- INGESTION HAZARD:** This product contains a button cell or coin battery.
- DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause Internal Chemical Burns** in as little as **2 hours**.
- KEEP** new and used batteries **OUT OF REACH OF CHILDREN**
- Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



This symbol means:

**INGESTION HAZARD:** This product contains a button cell or coin battery.

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 140° Fahrenheit or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.



## SAVE THESE INSTRUCTIONS.

MAINTENANCE


## Functional Description

## Specifications

|                     |                       |  |   |  |
|---------------------|-----------------------|--|---|--|
| Generator           | Output                | 120VAC, 60Hz, 11.6 A, 1 Phase<br>1,400 Running Watts (1,800 Max. Starting Watts)<br>12VDC, 8.3 A |   |  |
|                     | Electrical Receptacle | 3-Prong, duplex NEMA #5-20 120V<br>One DC Outlet 12VDC   |   |  |
|                     | Battery Type          | CR2032, 3V Contains non-replaceable battery.   |   |  |
| Engine              | Displacement          | 99cc   |   |  |
|                     | Engine Type           | Horizontal Single Cylinder 4 stroke OHV  |   |  |
|                     | Cooling System        | Forced air cooled  |   |  |
|                     | Fuel                  | Type   | 87+ octane stabilizer treated unleaded gasoline |  |
|                     |                       | Capacity   | 1.98 Gallon / 7.50 Liter                        |  |
|                     | Engine Oil            | Type SAE   | 10W-30 above 32°F<br>5W-30 at 32°F or below     |  |
|                     |                       | Capacity   | 0.35 Liter                                      |  |
|                     | Spark Plug            | Type   | TORCH/LG A5RTC                                  |  |
|                     |                       | Gap  | 0.6 - 0.8mm"/0.024"- 0.031"                     |  |
|                     | Valve Clearance       | Intake   | 0.05-0.1mm/ 0.002"-0.004"                       |  |
|                     |                       | Exhaust  | 0.05-0.1mm/ 0.002"-0.004"                       |  |
| Run Time @ 50% load | 9.5 hr.               |  |   |  |

The emission control system for this Generator's Engine is warranted for standards set by the U.S. Environmental Protection Agency. For warranty information, refer to the last pages of this manual.

## Components and Controls

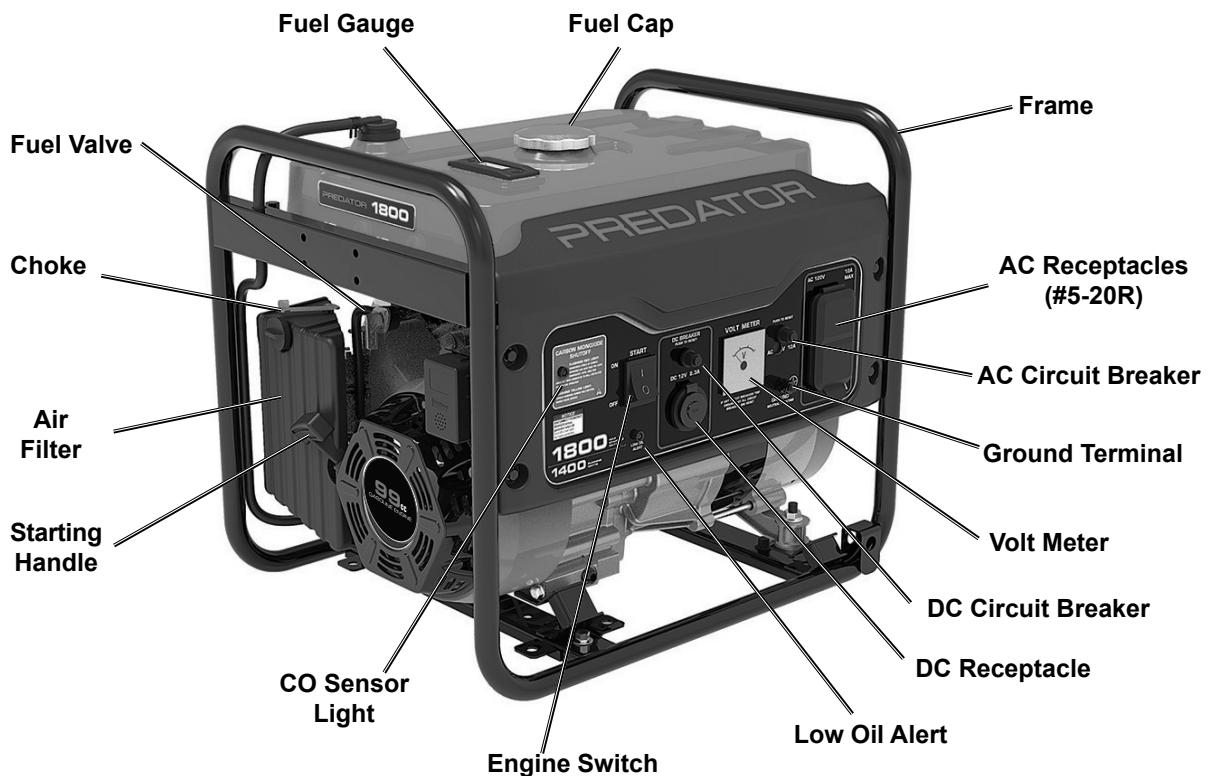

SAFETY

SETUP


OPERATION

MAINTENANCE

# Components and Controls (continued)

SAFETY

The following are descriptions of the controls on the power panel. Your Generator has sockets to power your products with circuit breakers to protect the voltage flow.

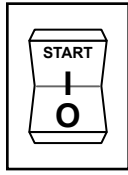

1. **Engine Switch:** Used to start and stop the Engine.
2. **AC Receptacles:** The Generator contains AC Receptacles to power tools and equipment.  
**3-Prong, duplex 120 volt receptacle (NEMA #5-20)**

**⚠ WARNING! TO PREVENT SERIOUS INJURY:**  
Connect tools and equipment only to the Receptacle that is compatible with the electrical characteristics and rated capacities of the tools and equipment being used.


SETUP



3. **Circuit Breakers:** The circuit breaker protects the Generator from overloading. The rating of the breaker and the load it protects are marked near the breaker. Should any of the Circuit Breakers trip, the Generator will stop the electricity output. If this happens, unplug all loads from the Generator. Allow the Generator to cool down. Then, press the tripped Circuit Breaker, restart the Engine, and re-attach loads.



4. **12 VDC Receptacle:** 12 VDC Receptacle provides a power source for 12 volt DC items.



5. **Grounding Terminal:** Prior to each use, set up the ground wire (not included) connection to the Grounding Terminal to properly ground the Generator. Refer to *Grounding* on page 9 for instructions on grounding the Generator.

## Initial Tool Set Up/Assembly



Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

### ⚠ WARNING

**TO PREVENT SERIOUS INJURY:**

**Operate only with proper spark arrestor installed.**

**Operation of this equipment may create sparks that can start fires around dry vegetation. A spark arrestor may be required. The operator should contact local fire agencies for laws or regulations relating to fire prevention requirements.**

At high altitudes, the engine's carburetor, governor, and any other parts that control the fuel-air ratio will need to be adjusted by a qualified mechanic to allow efficient high-altitude use and to prevent damage to the engine and any other devices used with this product.

**Note:** For additional information regarding the parts listed in the following pages, refer to the Assembly Diagram near the end of this manual.

**NOTICE:** This Generator is not intended to power sensitive electronic equipment without the addition of an appropriate line conditioner and surge protector (both not included). **Sensitive electronic equipment includes, but is not limited to, audio/video equipment, some television sets, computers, and printers.** Sensitive electronic equipment should be operated on approved inverter-type generators or pure sine wave generators.

Wheel Kit, #68531 (sold separately) can be used with this Generator.

OPERATION

MAINTENANCE



# Grounding

---

The Generator must be properly grounded in accordance with all relevant electrical codes and standards before operation. In many locations, local code will not require this generator to be grounded when used with cord and plug equipment plugged directly into the receptacles on the generator. However, your local regulations may require the generator to be grounded. Contact a licensed electrician or consult local authorities regarding local grounding requirements. If grounding is required, have the unit grounded by a qualified electrician if you are not qualified to do so.

General grounding instructions are as follows:

Use one of the following as the grounding electrode:

**Pipe or conduit**, minimum  $\frac{3}{4}$  in. diameter, minimum 8 ft. long. If steel, it must have anti-corrosion coating.

**Rod**, stainless steel or copper- or zinc-coated steel, minimum  $\frac{5}{8}$  in. diameter, minimum 8 ft. long.

1. Drive electrode at least 8 ft. vertically into the ground.
  - a. If rock layer prevents vertical entry, drive at an angle not exceeding 45 degrees from vertical.
  - b. If rock layer prevents angle entry, bury electrode in horizontal trench at least 30 in. deep.
2. The upper end of electrode must be protected if above ground level.
3. Connect a #6 AWG grounding wire (not included) from the Grounding Terminal on the Generator Control Panel to the buried electrode.

For additional information on grounding methods, please see the National Electrical Code.

**Note:** The portable generator Neutral conductor is isolated from the frame and from the AC receptacle ground pin. Electrical devices that require a connection between one conductor pin and the grounded receptacle pin may not function properly.

# High Altitude Operation Above 3000 feet

SAFETY

## ⚠️ WARNING! TO PREVENT SERIOUS INJURY FROM FIRE:

Follow instructions in a well-ventilated area away from ignition sources.

If the engine is hot from use, shut the engine off and wait for it to cool before proceeding. Do not smoke.

**NOTICE:** Warranty void if necessary adjustments are not made for high altitude use.

At high altitudes, the engine's carburetor, governor, and any other parts that control the fuel-air ratio will need to be adjusted by a qualified mechanic to allow efficient high-altitude use and to prevent damage to the engine and any other devices used with this product. The fuel system on this engine may be influenced by operation at higher altitudes. Proper operation can be ensured by installing an altitude kit at altitudes higher than 3000 ft. above sea level. At elevations above 8000 ft, the engine may experience decreased performance, even with the proper main jet. Operating this engine without the proper altitude kit installed may increase the engine's emissions and decrease fuel economy and performance. The kit should be installed by a qualified mechanic.

**Note:** Not all Generator models have a Solenoid. Skip those steps if a Solenoid is not present.

1. Turn off the engine.
2. Close the fuel valve.
3. Remove the air cleaner housing to allow access to the carburetor:
4. Place a bowl under the fuel cup to catch any spilled fuel.
5. Unthread the screws holding the solenoid in place.

**CAUTION!** Carburetor bowl may have gas in it which will leak upon removing the solenoid/bolt.

6. Disconnect the solenoid and solenoid seal from the bolt.
7. Unthread the bolt holding the fuel cup.
8. Remove the bolt, Bolt Seal, fuel cup, Fuel Cup Seal and Main Jet from the body of the carburetor assembly. A carburetor screwdriver (not included) is needed to remove and install the Main Jet.

**Note:** The mixing tube is held in place by the Main Jet and might fall out when it is removed. If it falls out, replace it in the same orientation before replacing the Main Jet.

9. Replace the Main Jet with the replacement Main Jet needed for your altitude range (part 1a or 2a).

**Note:** The Fuel Cup Seal and Bolt Seal may be damaged during removal and should be replaced with the new ones from the kit.

10. Replace the Fuel Cup Seal (4a), fuel cup, Bolt Seal (3a), and bolt. Tighten in place.

**NOTICE:** Do not cross thread bolt when tightening. Finger tighten first and then use a wrench to make sure the bolt is properly threaded.

11. Replace the solenoid and Solenoid Seal (5a), and tighten in place with screws.
12. Reassemble the air cleaner and reattach all hoses to it.
13. Wipe up any spilled fuel and allow excess to evaporate before starting engine. To prevent FIRE, do not start the engine while the smell of fuel hangs in the air.


SETUP

OPERATION

MAINTENANCE

## High Altitude Kit Parts List - A

| Part | Description            | Qty |
|------|------------------------|-----|
| 1a   | Main Jet 3000-6000 ft. | 1   |
| 2a   | Main Jet 6000-8000 ft. | 1   |
| 3a   | Bolt Seal              | 1   |
| 4a   | Fuel Cup Seal          | 1   |
| 5a   | Solenoid Seal          | 1   |

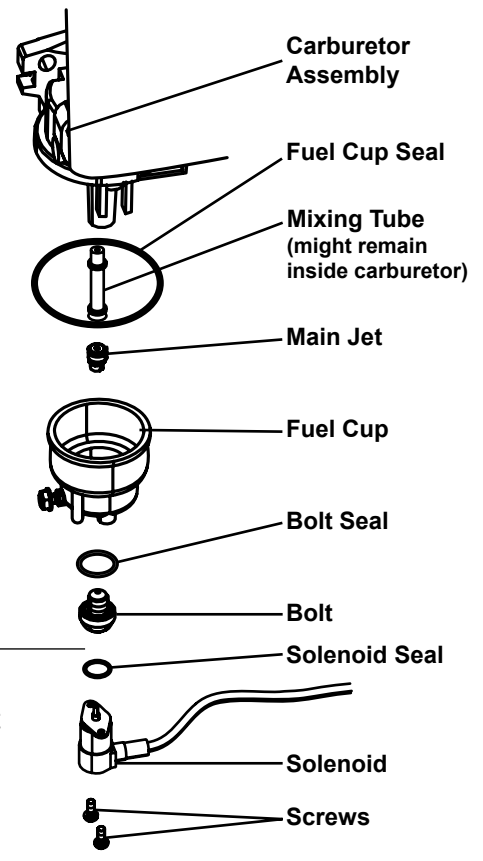

## Operating Instructions



Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

Inspect tool before use, looking for damaged, loose, and missing parts. If any problems are found, do not use tool until repaired.


## Generator Pre-Start Checks

Inspect engine and equipment, looking for damaged, loose, and missing parts before set up and starting. If any problems are found, do not use equipment until fixed properly.

### Checking and Filling Engine Oil

**CAUTION!** Your Warranty is VOID if the engine's crankcase is not properly filled with oil before each use. Before each use, check the oil level. Engine will not start with low or no engine oil.

1. Make sure the engine is stopped and is level.
2. Close the Fuel Valve.
3. Clean the top of the Dipstick and the area around it. Remove the Dipstick by threading it counterclockwise, and wipe it off with a clean lint free rag.

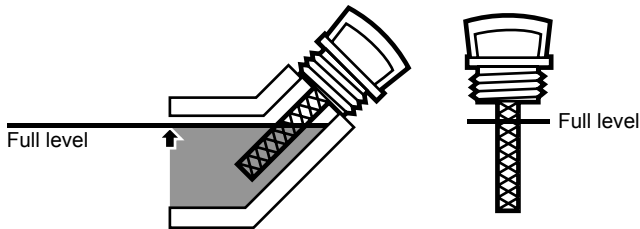

4. Reinsert the Dipstick without threading it in and remove it to check the oil level. The oil level should be up to the full level as shown above.
5. If the oil level is at or below the low mark add the appropriate type of oil until the oil level is at the proper level. SAE 10W-30 oil is recommended for general use. (The SAE Viscosity Grade chart on page 18 in the Service section shows other viscosities to use in different average temperatures.)
6. Thread the dipstick back in clockwise.

**NOTICE:** Do not run the engine with too little oil. Engine will shut off if engine oil level is too low.

### Checking and Filling Fuel



**WARNING!** TO PREVENT SERIOUS INJURY FROM FIRE:

Fill the fuel tank in a well-ventilated area away from ignition sources. If the engine is hot from use, shut the engine off and wait for it to cool before adding fuel. Do not smoke.

1. Clean the Fuel Cap and the area around it.
2. Unscrew and remove the Fuel Cap.
3. If needed, fill the Fuel Tank to about 1 inch under the fill neck with 87 octane or higher unleaded gasoline that has been treated with a fuel stabilizer additive. Follow fuel stabilizer manufacturer's recommendations for use.

**Note:** Do not use gasoline containing more than 10% ethanol (E10). Do not use E85 ethanol.

**Note:** Do not use gasoline that has been stored in a metal fuel container or a dirty fuel container. It can cause particles to enter the carburetor, effecting engine performance and/or causing damage.

4. Then replace the Fuel Cap.
5. Wipe up any spilled fuel and allow excess to evaporate before starting engine. To prevent FIRE, do not start the engine while the smell of fuel hangs in the air.

# Using the Generator

---

## Before Starting the Generator Engine



### Before starting the engine:

- a. Follow the Set Up Instructions to prepare the Generator.
- b. Unplug all loads from the Generator.
- c. Inspect the Generator and engine.
- d. Fill the engine with the proper amount and type of both stabilizer-treated fuel and oil.

## Basic Generator Use Procedure - See following pages for specific instructions

1. Check that the Generator can handle the wattage needed to power your products.

## Break-in Period:

- a. Breaking-in the engine will help to ensure proper equipment and engine operation.
- b. The break-in period will last about 25 hours of use. DO NOT exceed 75% of the Generator's rated capacity during this period.

2. Start the Engine, and allow the Engine and Generator to run and warm up for five minutes after starting with no electrical load.
3. Plug in products.
4. When finished using the Generator, disconnect all electrical loads.

**Note:** Do not allow Generator to run out of fuel with loads attached.

5. Turn off the Engine.
6. Allow the Generator and its Engine to completely cool. Then store the unit in a clean, dry, safe location out of reach of children and other unauthorized people.

**IMPORTANT:** After starting the engine, allow it to run at no load for five minutes with no load after each start-up so that the engine can stabilize.


- Change the engine oil after this period.

Under normal operating conditions subsequent maintenance follows the schedule explained in the MAINTENANCE section.


# Starting the Engine

1. To start a cold engine, move the Choke to the START position.  
To restart a warm engine, leave the Choke in the RUN position.
2. Open the Fuel Valve.

3. Turn the Engine Switch to ON.

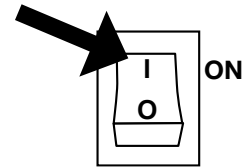

4. Grip the Starter Handle of the Engine loosely and pull it slowly several times to allow the gasoline to flow into the Engine's carburetor. Then pull the Starter Handle gently until resistance is felt. Allow Cable to retract fully and then pull it quickly. Repeat until the engine starts. Note: Do not let the Starter Handle snap back against the engine. Hold it as it recoils so it doesn't hit the engine.

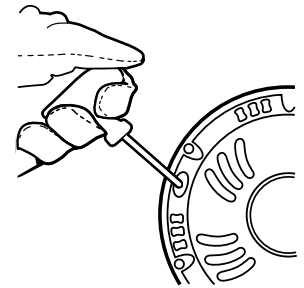

**Note:** If engine does not start, check engine oil level. Engine will not start with low or no engine oil.

5. Allow the Engine to run for several seconds. Then, if the Choke lever is in the START position, move the Choke Lever very slowly to its RUN position.

**Note:** Moving the Choke Lever too fast could stall the engine.

**IMPORTANT:** Allow the engine to run at no load for five minutes with no load after each start-up so that the engine can stabilize.

## CARBON MONOXIDE SHUTOFF

**DANGER! TO PREVENT SERIOUS INJURY AND DEATH FROM CARBON MONOXIDE INHALATION:**  
The Carbon Monoxide sensor is an additional layer of protection only. Do not use the Generator in any area or situation that will allow carbon monoxide to accumulate.

- **FLASHING RED LIGHT:**  
Dangerous levels of carbon monoxide gas have built up and generator will shutoff. Leave immediately until area has aired out. Move Generator to well-ventilated area before operation.
- **FLASHING YELLOW LIGHT:**  
Carbon monoxide sensor malfunction. Sensor needs service. Do not use the Generator until the sensor is working properly. For technical questions, please call 1-888-866-5797. NOTE: Yellow light flashes once after starting to indicate passing self-check and is functioning normally.


**Carbon Monoxide sensor must only be serviced by qualified technician to restore it to original settings. Do not modify or tamper with the Carbon Monoxide sensor. Not following these instructions can result in death or serious injury due to Carbon Monoxide sensor malfunction.**

# Connecting Electrical Loads

Familiarize yourself with the engine controls, power panel and how to start the engine before using the Generator. Calculate the wattage of the products you will use with the Generator and verify that the Generator can handle the total load.

**⚠WARNING!** Connect only properly wired plugs to the Generator. A plug that is spliced onto a different cord may be hazardous. Only a qualified electrician should wire a plug onto a cord.

**CAUTION** Never exceed the rated capacity for this Generator, as serious damage to the Generator and/or appliances, tools, and equipment could result from an overload. Starting and running wattage requirements should always be calculated when matching this Generator's wattage capacity to the appliance, tool, or equipment.

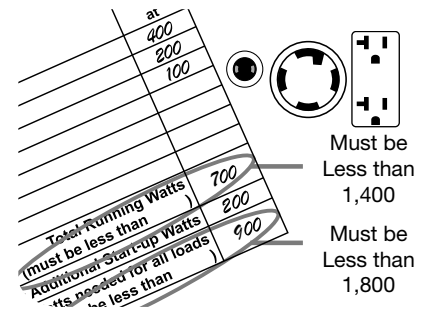

Use the DC12V Receptacle to power 12VDC equipment.

**⚠WARNING! TO PREVENT SERIOUS INJURY:** Do not charge batteries without a proper charge controller. Do not overcharge.

- Connect the items that require the most wattage first.
- Connect "inductive" load appliances, tools, and equipment next. Inductive loads are small hand tools and some small appliances.
- Connect any lights next.
- Voltage sensitive appliances, tools, and equipment should be the last to be connected to the Generator. Plug voltage sensitive items such as TVs, DVD players, microwaves, and cordless telephones into a UL<sup>®</sup> Listed voltage surge protector (not included). Then, connect the surge protector into the Generator.


**IMPORTANT!** Failure to connect and operate appliances, tools, and equipment in this sequence can cause damage to the Generator, appliances, tools, and equipment and will **void** the Warranty of this Generator.

**Note:** If Engine speed or voltage fluctuates with a load below the Generator's running watts, move the Engine Choke Lever to the "HALF-CHOKE" position.


## IF ANY CIRCUIT BREAKERS TRIP CHECK THE FOLLOWING:

- Make sure that **ALL circuit breakers** are reset before starting the Generator again.
- Adjust the plugs so the loads are shared across outlet circuits.

To achieve rated output from the Generator, distribute loads over outlets.

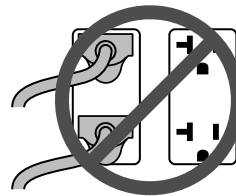

Evenly distributed over outlets:

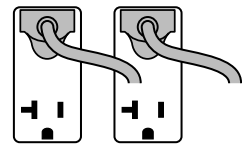

# Calculating Total Wattage of Devices Used with the Generator

Before using the Generator, check that the products you want to plug into the unit are below the rated and maximum wattage ratings of the Generator. Use the Wattage Calculation Table below, and the watts listed on your products, to help calculate multiple wattage totals.

### To use the table:

1. Add up the Running Watts for all items you would like to use at any given time.
2. Make sure that this total is under the 1,400 running wattage of the Generator.
3. Find the single highest starting watts for the selected items and add to the total.
4. Make sure that this total is under the 1,800 max. starting wattage of the Generator.
5. Plug in and turn on products from largest wattage to smallest.

### Wattage Calculation Table

| Equipment   | Running Watts |
|---|---------------|
|   |               |
|   |               |
|   |               |
|   |               |
|   |               |
|   |               |
|   |               |
| <b>Total Running Watts (must be less than 1,400)</b>                      |               |
| <b>Largest Additional Start-up Watts</b>                                  |               |
| <b>Total Startup Watts needed for all loads (must be less than 1,800)</b> |               |

### Example

| Equipment   | Running Watts |
|---|---------------|
| <i>Television (400 + 0)</i>   | <i>400</i>    |
| <i>Box Fan (200 + 200)</i>  | <i>200</i>    |
| <i>Light Bulb (100 + 0)</i>   | <i>100</i>    |
|   |               |
|   |               |
| <b>Total Running Watts (must be less than 1,400)</b>                      | <i>700</i>    |
| <b>Largest Additional Start-up Watts</b>                                  | <i>200</i>    |
| <b>Total Startup Watts needed for all loads (must be less than 1,800)</b> | <i>900</i>    |

A generator that is rated more than the minimum required max. starting watts will last much longer than a generator that only supplies the exact watts needed.

### To Calculate Wattage

Volts and amps can be multiplied together to get watts (volts x amps = watts).

### To Calculate Additional Start-Up Watts (If They Are Not Listed)

For equipment with a motor: Use the rated watts amount as an estimate of additional Start-up Watts.

For most lights or heaters: there are no additional start-up watts.

### Wattage Estimate Charts

**Note:** Wattages listed below are estimates for that type of equipment only. Check nameplate wattages on all loads before connecting to Generator.

| EMERGENCY            |               |                           |
|----------------------|---------------|---------------------------|
| Device               | Running Watts | Additional Start-up Watts |
| Refrigerator/Freezer | 700           | 1500                      |
| Radio                | 100           | 0                         |

| JOB SITE                |               |                           |
|-------------------------|---------------|---------------------------|
| Device                  | Running Watts | Additional Start-up Watts |
| Air Compressor - 1/2 HP | 1000          | 1000                      |
| Table Saw - 10"         | 1700          | 1300                      |
| Belt Sander - 3"        | 1200          | 1200                      |
| Hand Drill - 1/2"       | 600           | 600                       |
| Halogen Work Light      | 1000          | 0                         |
| Reciprocating Saw       | 900           | 900                       |

| RECREATION     |               |                           |
|----------------|---------------|---------------------------|
| Device         | Running Watts | Additional Start-up Watts |
| AM/FM Radio    | 100           | 0                         |
| Electric Grill | 1700          | 0                         |
| Inflator Pump  | 50            | 100                       |
| CD/DVD Player  | 100           | 0                         |
| Box Fan - 20"  | 200           | 200                       |
| Coffee Maker   | 600           | 0                         |

| HOUSEHOLD              |               |                           |
|------------------------|---------------|---------------------------|
| Device                 | Running Watts | Additional Start-up Watts |
| Computer w/ Monitor    | 800           | 0                         |
| Electric Clothes Dryer | 5500          | 500                       |
| Electric Range         | 2100          | 0                         |
| Electric Water Heater  | 2000          | 0                         |
| Light Bulb - 100 watts | 100           | 0                         |
| Microwave - 1000 watts | 1000          | 200                       |
| Sump Pump - 1/2 HP     | 1000          | 1100                      |
| Television             | 400           | 0                         |
| Washing Machine        | 1100          | 1100                      |
| Well Pump - 1/2 HP     | 1000          | 1000                      |

| LAWN & GARDEN   |               |                           |
|-----------------|---------------|---------------------------|
| Device          | Running Watts | Additional Start-up Watts |
| Hedge Trimmer   | 400           | 400                       |
| Pressure Washer | 1200          | 1200                      |
| Lawn Mower      | 1200          | 1200                      |
| Edger           | 1000          | 1000                      |


| HEATING & COOLING       |               |                           |
|-------------------------|---------------|---------------------------|
| Device                  | Running Watts | Additional Start-up Watts |
| Central AC - 10,000 BTU | 1500          | 1500                      |
| Furnace Fan - 1/2 HP    | 900           | 1400                      |
| Space Heater            | 1800          | 0                         |
| Window AC - 10,000 BTU  | 1200          | 600                       |

# Stopping the Engine in an Emergency

SAFETY

1. To stop the engine in an emergency, turn the Engine Switch off.


**NOTICE:** Generator shut-off under load may damage the Generator and attached equipment.

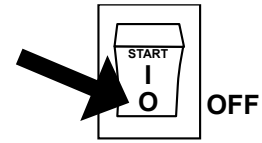

# Stopping the Engine Under Normal Conditions


SETUP

1. Before turning off the Engine, turn off all electrical loads, then unplug them.

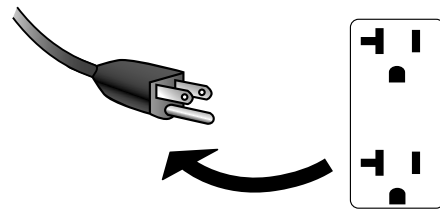

OPERATION

2. Turn the Engine Switch off.

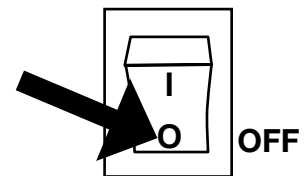

MAINTENANCE

3. Close the Fuel Valve.



## User-Maintenance Instructions



Procedures not specifically explained in this manual must be performed only by a qualified technician.

### ⚠️ WARNING

#### TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION:

Turn the Power Switch of the Generator to its “OFF” position, wait for the engine to cool, and disconnect the spark plug cap before performing any inspection, maintenance, or cleaning procedures.

#### TO PREVENT SERIOUS INJURY FROM EQUIPMENT FAILURE:

Do not use damaged equipment. If abnormal noise, vibration, or excess smoking occurs, have the problem corrected before further use.

Follow all service instructions in this manual. The engine may fail critically if not serviced properly.



Many maintenance procedures, including any not detailed in this manual, will need to be performed by a qualified technician for safety. If you have any doubts about your ability to safely service the equipment or engine, have a qualified technician service the equipment instead.

## Cleaning, Maintenance, and Lubrication

**Note:** This maintenance schedule is intended solely as a general guide. If performance decreases or if equipment operates unusually, check systems immediately. The maintenance needs of each piece of equipment will differ depending on factors such as duty cycle, temperature, air quality, fuel quality, and other factors.

**Note:** The following procedures are in addition to the regular checks and maintenance explained as part of the regular operation of the engine and equipment.

| Procedure  | Before Each Use | Monthly or every 20 hr. of use | Every 3 mo. or 50 hr. of use | Every 6 mo. or 100 hr. of use | Yearly or every 300 hr. of use | Every 2 Years |
|--|-----------------|--------------------------------|------------------------------|-------------------------------|--------------------------------|---------------|
| Brush off outside of engine  | ✓               | ✓                              | ✓                            | ✓                             | ✓                              | ✓             |
| Check engine oil level   | ✓               | ✓                              | ✓                            | ✓                             | ✓                              | ✓             |
| Check air cleaner  | ✓               |                                | ✓                            | ✓                             | ✓                              | ✓             |
| Check deposit cup  | ✓               |                                |                              | ✓                             | ✓                              | ✓             |
| Change engine oil  |                 | ✓                              |                              | ✓                             | ✓                              | ✓             |
| Clean/replace air cleaner  |                 |                                | ✓*                           | ✓                             | ✓                              | ✓             |
| Check and clean spark plug   |                 |                                |                              | ✓                             | ✓                              | ✓             |
| 1. Check/adjust idle speed<br>2. Check/adjust valve clearance<br>3. Clean fuel tank, strainer and carburetor<br>4. Clean carbon build-up from combustion chamber |                 |                                |                              |                               | ✓**                            | ✓**           |
| Replace fuel line if necessary   |                 |                                |                              |                               |                                | ✓**           |

\*Service more frequently when used in dusty areas.

\*\*These items should be serviced by a qualified technician.

## Checking and Filling Fuel



### **⚠️ WARNING! TO PREVENT SERIOUS INJURY FROM FIRE:**

Fill the fuel tank in a well-ventilated area away from ignition sources. If the engine is hot from use, shut the engine off and wait for it to cool before adding fuel. Do not smoke.

1. Clean the Fuel Cap and the area around it.
2. Unscrew and remove the Fuel Cap.

**Note:** Do not use gasoline containing more than 10% ethanol (E10). Do not use E85 ethanol.

**Note:** Do not use gasoline that has been stored in a metal fuel container or a dirty fuel container. It can cause particles to enter the carburetor, affecting engine performance and/or causing damage.

3. If needed, fill the Fuel Tank to about 1 inch under the fill neck with 87 octane or higher unleaded gasoline that has been treated with a fuel stabilizer additive. Follow fuel stabilizer manufacturer's recommendations for use.
4. Replace the Fuel Cap.
5. Wipe up any spilled fuel and allow excess to evaporate before starting engine. To prevent FIRE, do not start the engine while the smell of fuel hangs in the air.



## Engine Oil Change

**⚠️ CAUTION!** Oil is very hot during operation and can cause burns. Wait for engine to cool before changing oil.

1. Make sure the engine is stopped and is level.
2. Close the Fuel Valve.
3. Place a drain pan (not included) underneath the crankcase's drain plug.
4. Remove the drain plug and, if possible, tilt the crankcase slightly to help drain the oil out. Recycle used oil.
5. Replace the drain plug and tighten it.
6. Clean the top of the Dipstick and the area around it. Remove the Dipstick by threading it counterclockwise, and wipe it off with a clean lint free rag.

**Note:** Do not thread the dipstick in when checking the oil level.

The SAE Viscosity Grade chart shows other viscosities to use in different average temperatures.

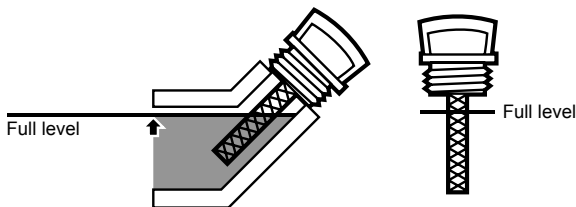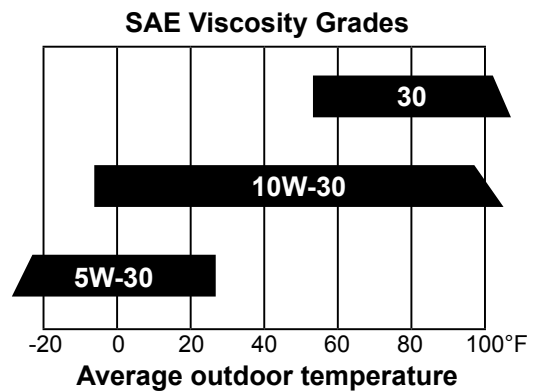

7. Add the appropriate type of oil until the oil level is at the full level. SAE 10W-30 oil is recommended for general use.

8. Thread the dipstick back in clockwise.

**NOTICE:** Do not run the engine with too little oil. Engine will not start with low or no engine oil.

## Air Filter Element Maintenance

1. Remove the air filter cover and the air filter elements and check for dirt. Clean as described below.
2. **Cleaning:**
  - For "paper" filter elements:  
To prevent injury from dust and debris, wear ANSI-approved safety goggles, NIOSH-approved dust mask/respirator, and heavy-duty work gloves. In a well-ventilated area away from bystanders, use pressurized air to blow dust out of the air filter. If this does not get the filter clean, replace it.
  - For foam filter elements:  
Wash the element in warm water and mild detergent several times. Rinse. Squeeze out excess water and allow it to dry completely. Soak the filter in lightweight oil briefly, then squeeze out the excess oil.
3. Install the cleaned filter. Secure the Air Cleaner Cover before use.

# Spark Plug Maintenance

1. Disconnect spark plug cap from end of plug. Clean out debris from around spark plug.
  2. Using a spark plug wrench, remove the spark plug.
  3. Inspect the spark plug: If the electrode is oily, clean it using a clean, dry rag. If the electrode has deposits on it, polish it using emery paper. If the white insulator is cracked or chipped, the spark plug needs to be replaced.
  5. Install the new spark plug or the cleaned spark plug into the engine. Gasket-style: Finger-tighten until the gasket contacts the cylinder head, then about 1/2-2/3 turn more.  
Non-gasket-style: Finger-tighten until the plug contacts the head, then about 1/16 turn more.
- NOTICE:** Tighten the spark plug properly. If loose, the spark plug will cause the engine to overheat. If overtightened, the threads in the engine block will be damaged.
- NOTICE:** Using an incorrect spark plug may damage the engine. See the Specifications chart for your Generator for the type and gap required.
4. When installing a new spark plug, adjust the plug's gap to the specification on the Specifications chart. Do not pry against the electrode, the spark plug can be damaged.
  6. Apply dielectric spark plug boot protector (not included) to the end of the spark plug and reattach the wire securely.

## Long-Term Storage

When the equipment is to remain idle for longer than 20 days, prepare the Engine for storage as follows:

1. **CLEANING:**  
Wait for Engine to cool, then clean Engine with dry cloth. **NOTICE: Do not clean using water.** The water will gradually enter the Engine and cause corrosion damage. Apply a thin coat of corrosion preventive oil to all metal parts.
2. **FUEL:**  
**Gasoline Treatment/Draining the Fuel Tank**  
To protect the fuel tank during storage, fill the tank with fresh gasoline that has been treated with a fuel stabilizer additive. Follow fuel stabilizer manufacturer's recommendations for use. Refer to Checking and Filling Fuel Checking and Filling Fuel on page 11.

Aged gasoline that has not been treated with stabilizer ahead of time must be safely drained away and not run through the engine.



**⚠ WARNING! TO PREVENT SERIOUS INJURY FROM FIRE:**

Fill tank in a well-ventilated area away from ignition sources. If the engine is hot from use, shut the engine off and wait for it to cool before adding fuel. Do not smoke.

**Draining the Carburetor**

After closing the Fuel Valve, place an appropriate container under the Carburetor and carefully remove the Drain Bolt from the bottom of the Carburetor Bowl, allowing the fuel to drain completely. Replace the Drain Bolt after draining.

**WARNING! To prevent serious injury and fire, close the Fuel Valve before draining the Carburetor.**

3. **LUBRICATION:**
  - a. Change engine oil.
  - b. Clean out area around spark plug. Remove spark plug and pour one tablespoon of engine oil into cylinder through spark plug hole.
  - c. Replace spark plug, but leave spark plug cap disconnected.
  - d. Pull Starter Handle to distribute oil in cylinder. Stop after one or two revolutions when you feel the piston start the compression stroke (when you start to feel resistance).
4. **STORAGE AREA:**  
Cover and store in a dry, level, well-ventilated area out of reach of children. Storage area should also be away from ignition sources, such as water heaters, clothes dryers, and furnaces. Avoid direct exposure to rain and sunlight.

**NOTICE:** During extended storage periods the Engine must be started every 3 months and allowed to run for 15–20 minutes or the Warranty is VOID.

5. **AFTER STORAGE:**  
Before starting the Engine during or after storage, keep in mind that untreated gasoline will deteriorate quickly. Drain the fuel tank and change to fresh fuel if untreated gasoline has been sitting for a month, if treated gasoline has been sitting beyond the fuel stabilizer's recommended time period, or if the Engine does not start.

# Troubleshooting

SAFETY

SETUP

OPERATION

MAINTENANCE

| Problem               | Possible Causes  | Probable Solutions   |
|-----------------------|--|--|
| Engine will not start | <b>FUEL RELATED:</b> <ol style="list-style-type: none"> <li>No fuel in tank or fuel valve closed.</li> <li>Choke not in START position, cold engine.</li> <li>Gasoline with more than 10% ethanol used. (E15, E20, E85, etc.)</li> <li>Low quality or deteriorated, old gasoline.</li> <li>Carburetor not primed.</li> <li>Dirty fuel passageways.</li> <li>Carburetor needle stuck. Fuel can be smelled in the air.</li> <li>Too much fuel in chamber. This can be caused by the carburetor needle sticking.</li> <li>Clogged Fuel Filter.</li> </ol> | <b>FUEL RELATED:</b> <ol style="list-style-type: none"> <li>Fill fuel tank with fresh 87+ octane stabilizer treated unleaded gasoline and open fuel valve. <b>Do not use gasoline with more than 10% ethanol (E15, E20, E85, etc.).</b></li> <li>Move Choke to START position.</li> <li>Clean out ethanol rich gasoline from fuel system. Replace components damaged by ethanol. Use fresh 87+ octane stabilizer treated unleaded gasoline only. <b>Do not use gasoline with more than 10% ethanol (E15, E20, E85, etc.).</b></li> <li>Use fresh 87+ octane stabilizer treated unleaded gasoline. <b>Do not use gasoline with more than 10% ethanol (E15, E20, E85, etc.).</b></li> <li>Pull on Starter Handle to prime.</li> <li>Clean out passageways using fuel additive. Heavy deposits may require further cleaning.</li> <li><b>Gently</b> tap side of carburetor float chamber with screwdriver handle.</li> <li>Turn Choke to RUN position. Remove spark plug and pull the start handle several times to air out the chamber. Reinstall spark plug and set Choke to START position.</li> <li>Replace Fuel Filter.</li> </ol> |
|                       | <b>IGNITION (SPARK) RELATED:</b> <ol style="list-style-type: none"> <li>Engine switch in off position.</li> <li>Spark plug cap not connected securely.</li> <li>Spark plug electrode wet or dirty.</li> <li>Incorrect spark plug gap.</li> <li>Spark plug cap broken.</li> <li>Circuit breaker tripped (electric start models only).</li> <li>Incorrect spark timing or faulty ignition system.</li> </ol>   | <b>IGNITION (SPARK) RELATED:</b> <ol style="list-style-type: none"> <li>Turn engine switch to on position.</li> <li>Connect spark plug cap properly.</li> <li>Clean spark plug.</li> <li>Correct spark plug gap.</li> <li>Replace spark plug cap.</li> <li>Reset circuit breaker. Check wiring and starter motor if breaker continues to trip.</li> <li>Have qualified technician diagnose/repair ignition system.</li> </ol>  |
|                       | <b>COMPRESSION RELATED:</b> <ol style="list-style-type: none"> <li>Cylinder not lubricated. Problem after long storage periods.</li> <li>Loose or broken spark plug. (Hissing noise will occur when trying to start.)</li> <li>Loose cylinder head or damaged head gasket. (Hissing noise will occur when trying to start.)</li> <li>Engine valves or tappets mis-adjusted or stuck.</li> </ol>  | <b>COMPRESSION RELATED:</b> <ol style="list-style-type: none"> <li>Pour tablespoon of oil into spark plug hole. Crank engine a few times and try to start again.</li> <li>Tighten spark plug. If that does not work, replace spark plug. If problem persists, may have head gasket problem, see #3.</li> <li>Tighten head. If that does not remedy problem, replace head gasket.</li> <li>Have qualified technician diagnose/repair ignition system.</li> </ol>  |
|                       | <b>OIL RELATED:</b> <ol style="list-style-type: none"> <li>Low engine oil.</li> <li>Engine mounted on slope, triggering low oil shutdown.</li> </ol>   | <b>OIL RELATED:</b> <ol style="list-style-type: none"> <li>Fill engine oil to proper level. Check engine oil before EVERY use.</li> <li>Operate engine on level surface. Check engine oil level.</li> </ol>  |



**Follow all safety precautions whenever diagnosing or servicing the equipment or engine.**

## Troubleshooting (continued)

| Problem                               | Possible Causes   | Probable Solutions  |
|---------------------------------------|---|---|
| Engine stops when under heavy load    | <ol style="list-style-type: none"> <li>1. Dirty air filter.</li> <li>2. Engine running cold.</li> </ol>   | <ol style="list-style-type: none"> <li>1. Clean or replace element.</li> <li>2. Allow engine to warm up prior to operating equipment.</li> </ol>  |
| Engine misfires                       | <ol style="list-style-type: none"> <li>1. Spark plug cap loose.</li> <li>2. Incorrect spark plug gap or damaged spark plug.</li> <li>3. Defective spark plug cap.</li> <li>4. Old or low quality gasoline.</li> <li>5. Incorrect compression.</li> </ol>  | <ol style="list-style-type: none"> <li>1. Check wire connections.</li> <li>2. Re-gap or replace spark plug.</li> <li>3. Replace spark plug cap.</li> <li>4. Use only fresh 87+ octane stabilizer treated unleaded gasoline.<br/><b>Do not use gasoline with more than 10% ethanol (E15, E20, E85, etc.).</b></li> <li>5. Diagnose and repair compression. (Use <b>Engine will not start: COMPRESSION RELATED</b> section.)</li> </ol>   |
| Engine stops suddenly                 | <ol style="list-style-type: none"> <li>1. Carbon Monoxide level high. Red light on Carbon Monoxide Sensor illuminates.</li> <li>2. CO Sensor Alarm flashes yellow continually shortly after starting.</li> <li>3. CO Sensor Alarm flashes yellow continually after longer period of operation.</li> <li>4. Low oil shutdown.</li> <li>5. Fuel tank empty or full of impure or low quality gasoline.</li> <li>6. Defective fuel tank cap creating vacuum, preventing proper fuel flow.</li> <li>7. Faulty magneto.</li> <li>8. Disconnected or improperly connected spark plug cap.</li> </ol> | <ol style="list-style-type: none"> <li>1. Leave area immediately and allow area to ventilate thoroughly. Only operate generator outside.</li> <li>2. Carbon monoxide sensor malfunction. Sensor needs service. Call 1-888-866-5797 as soon as possible. Do not use the Generator until the sensor is working properly.</li> <li>3. Make sure to operate generator within rated ambient temperature; maintain minimum 5 ft. clearance from all sides.</li> <li>4. Fill engine oil to proper level. Check engine oil before EVERY use.</li> <li>5. Fill fuel tank with fresh 87+ octane stabilizer treated unleaded gasoline.<br/><b>Do not use gasoline with more than 10% ethanol (E15, E20, E85, etc.).</b></li> <li>6. Test/replace fuel tank cap.</li> <li>7. Have qualified technician service magneto.</li> <li>8. Secure spark plug cap.</li> </ol> |
| Engine knocks                         | <ol style="list-style-type: none"> <li>1. Old or low quality gasoline.</li> <li>2. Engine overloaded.</li> <li>3. Incorrect spark timing, deposit buildup, worn engine, or other mechanical problems.</li> </ol>  | <ol style="list-style-type: none"> <li>1. Fill fuel tank with fresh 87+ octane stabilizer treated unleaded gasoline. <b>Do not use gasoline with more than 10% ethanol (E15, E20, E85, etc.).</b></li> <li>2. Do not exceed equipment's load rating.</li> <li>3. Have qualified technician diagnose and service engine.</li> </ol>  |
| Engine backfires                      | <ol style="list-style-type: none"> <li>1. Impure or low quality gasoline.</li> <li>2. Engine too cold.</li> <li>3. Intake valve stuck or overheated engine.</li> <li>4. Incorrect timing.</li> </ol>  | <ol style="list-style-type: none"> <li>1. Fill fuel tank with fresh 87+ octane stabilizer treated unleaded gasoline. <b>Do not use gasoline with more than 10% ethanol (E15, E20, E85, etc.).</b></li> <li>2. Use cold weather fuel and oil additives to prevent backfiring.</li> <li>3. Have qualified technician diagnose and service engine.</li> <li>4. Check engine timing.</li> </ol>   |
| Product doesn't have power.           | <ol style="list-style-type: none"> <li>1. Product not plugged in properly.</li> <li>2. Circuit Breaker tripped.</li> <li>3. Product needs service.</li> </ol>   | <ol style="list-style-type: none"> <li>1. Turn off and unplug the product, then plug it back in again and turn on.</li> <li>2. Turn off and unplug product. Reset Circuit Breaker. Plug in product and turn on.</li> <li>3. Have product repaired.</li> </ol>   |
| Product begins to operate abnormally. | <ol style="list-style-type: none"> <li>1. Problem with appliance.</li> <li>2. Rated load capacity exceeded.</li> </ol>  | <ol style="list-style-type: none"> <li>1. Immediately unplug appliance. Have appliance repaired by a qualified technician, or replace appliance.</li> <li>2. Lower the number of items plugged into the Generator to stay within the rated capacity, or use a more powerful generator.</li> </ol>   |

# PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

SAFETY

SETUP

OPERATION

MAINTENANCE

## Parts List and Diagram

### Engine Parts List


| Part | Description                      | Qty | Part | Description                  | Qty | Part | Description                            | Qty |
|------|----------------------------------|-----|------|------------------------------|-----|------|--|-----|
| 1    | Hex Socket Flange, Face Bolt     | 8   | 27   | Clip, Piston Pin             | 2   | 56   | Tube, Second Air Intake                | 1   |
| 2    | Gasket, Cylinder Head Cover      | 1   | 28   | Crankcase Subassembly        | 1   | 57   | Gasket, Second Supply Air Valve Flange | 1   |
| 3    | Valve, Rocker Subassembly        | 2   | 29   | Seal, Oil                    | 2   | 58   | Tube, Fuel                             | 1   |
| 4    | Rocker, Shaft Subassembly        | 2   | 30   | Hex Socket Flange, Face Bolt | 6   | 59   | Pipe Clamp                             | 1   |
| 5    | Clamp, Valve Lock                | 4   | 31   | Cover, Crankcase             | 1   | 60   | Coil, Ignition                         | 1   |
| 6    | Spring, Valve                    | 2   | 32   | Dipstick Subassembly, Oil    | 1   | 61   | Hex Socket Flange, Face Bolt           | 2   |
| 7    | Seal, Guide                      | 1   | 33   | Gasket, Crankcase            | 1   | 62   | Gasket, Inlet                          | 1   |
| 8    | Valves Set                       | 1   | 34   | Position Pin - Type A        | 2   | 63   | Plate, Carburetor Insulator            | 1   |
| 9    | Cylinder Head Bolt               | 4   | 35   | Deep Groove Ball Bearing     | 1   | 64   | Seal Gasket, Carburetor                | 1   |
| 10   | Bolt, Stud                       | 2   | 36   | Crankshaft Assembly          | 1   | 65   | Carburetor Assembly                    | 1   |
| 11   | Spark Plug                       | 1   | 37   | Deep Groove Ball Bearing     | 1   | 66   | Seal Gasket, Air Cleaner               | 1   |
| 12   | Gasket, Cylinder Head            | 1   | 38   | Gear Assembly, Governor      | 1   | 67   | Air Cleaner                            | 1   |
| 13   | Position Pin - Type A            | 2   | 39   | Protector, Oil               | 1   | 68   | Nut with Flange                        | 3   |
| 14   | Piston, Ring Assembly            | 1   | 40   | Nut with Flange              | 1   | 69   | Spring, Governor                       | 1   |
| 15   | Piston                           | 1   | 41   | Sensor, Engine Oil           | 1   | 70   | Spring, Throttle Valve Returning       | 1   |
| 16   | Connecting Rod                   | 1   | 42   | Bolt, Drain Plug             | 1   | 71   | Bolt, Governor Support                 | 1   |
| 17   | Cylinder Head, Cover Subassembly | 1   | 43   | Flat Washer - Grade A        | 1   | 72   | Governor Bracket Subassembly           | 1   |
| 18   | Tube, Breather                   | 1   | 44   | Flywheel Subassembly         | 1   | 73   | Cotter Pin                             | 1   |
| 19   | Hex Socket Flange, Face Bolt     | 5   | 45   | Impeller                     | 1   | 74   | Flat Washer - Grade A                  | 1   |
| 20   | Wire Clip                        | 1   | 46   | Pulley, Starter              | 1   | 75   | Arm, Governor                          | 1   |
| 21   | Seat, Valve Spring               | 2   | 47   | Nut, Flywheel                | 1   | 76   | Rod, Governor                          | 1   |
| 22   | Bolt, Stud                       | 2   | 48   | Shield, Shroud               | 1   | 77   | Shroud, Cylinder Body                  | 1   |
| 23   | Head Subassembly, Cylinder       | 1   | 49   | Hex Socket Flange, Face Bolt | 2   | 78   | Camshaft Assembly                      | 1   |
| 24   | Lifter, Valve                    | 2   | 50   | Control Assembly, Throttle   | 1   | 79   | Tube, Intake                           | 1   |
| 25   | Tappet, Valve                    | 2   | 51   | Shroud                       | 1   | 80   | Nut - Type 1                           | 2   |
| 26   | Pin, Piston                      | 1   | 52   | Starter Assembly, Recoil     | 1   | 81   | Gasket, Exhaust Outlet                 | 1   |
|      |                                  |     | 53   | Hex Socket Flange, Face Bolt | 3   | 82   | Muffler Assembly                       | 1   |
|      |                                  |     | 54   | Deflector, Crankcase Air     | 1   | 83   | Pipe Clamp                             | 2   |
|      |                                  |     | 55   | Hex Socket Flange, Face Bolt | 2   |      |  |     |

Record Product's Serial Number Here: \_\_\_\_\_

**Note:** If product has no serial number, record month and year of purchase instead.

**Note:** Some parts are listed and shown for illustration purposes only, and are not available individually as replacement parts. Specify UPC 193175462381 when ordering parts.

# Engine Diagram

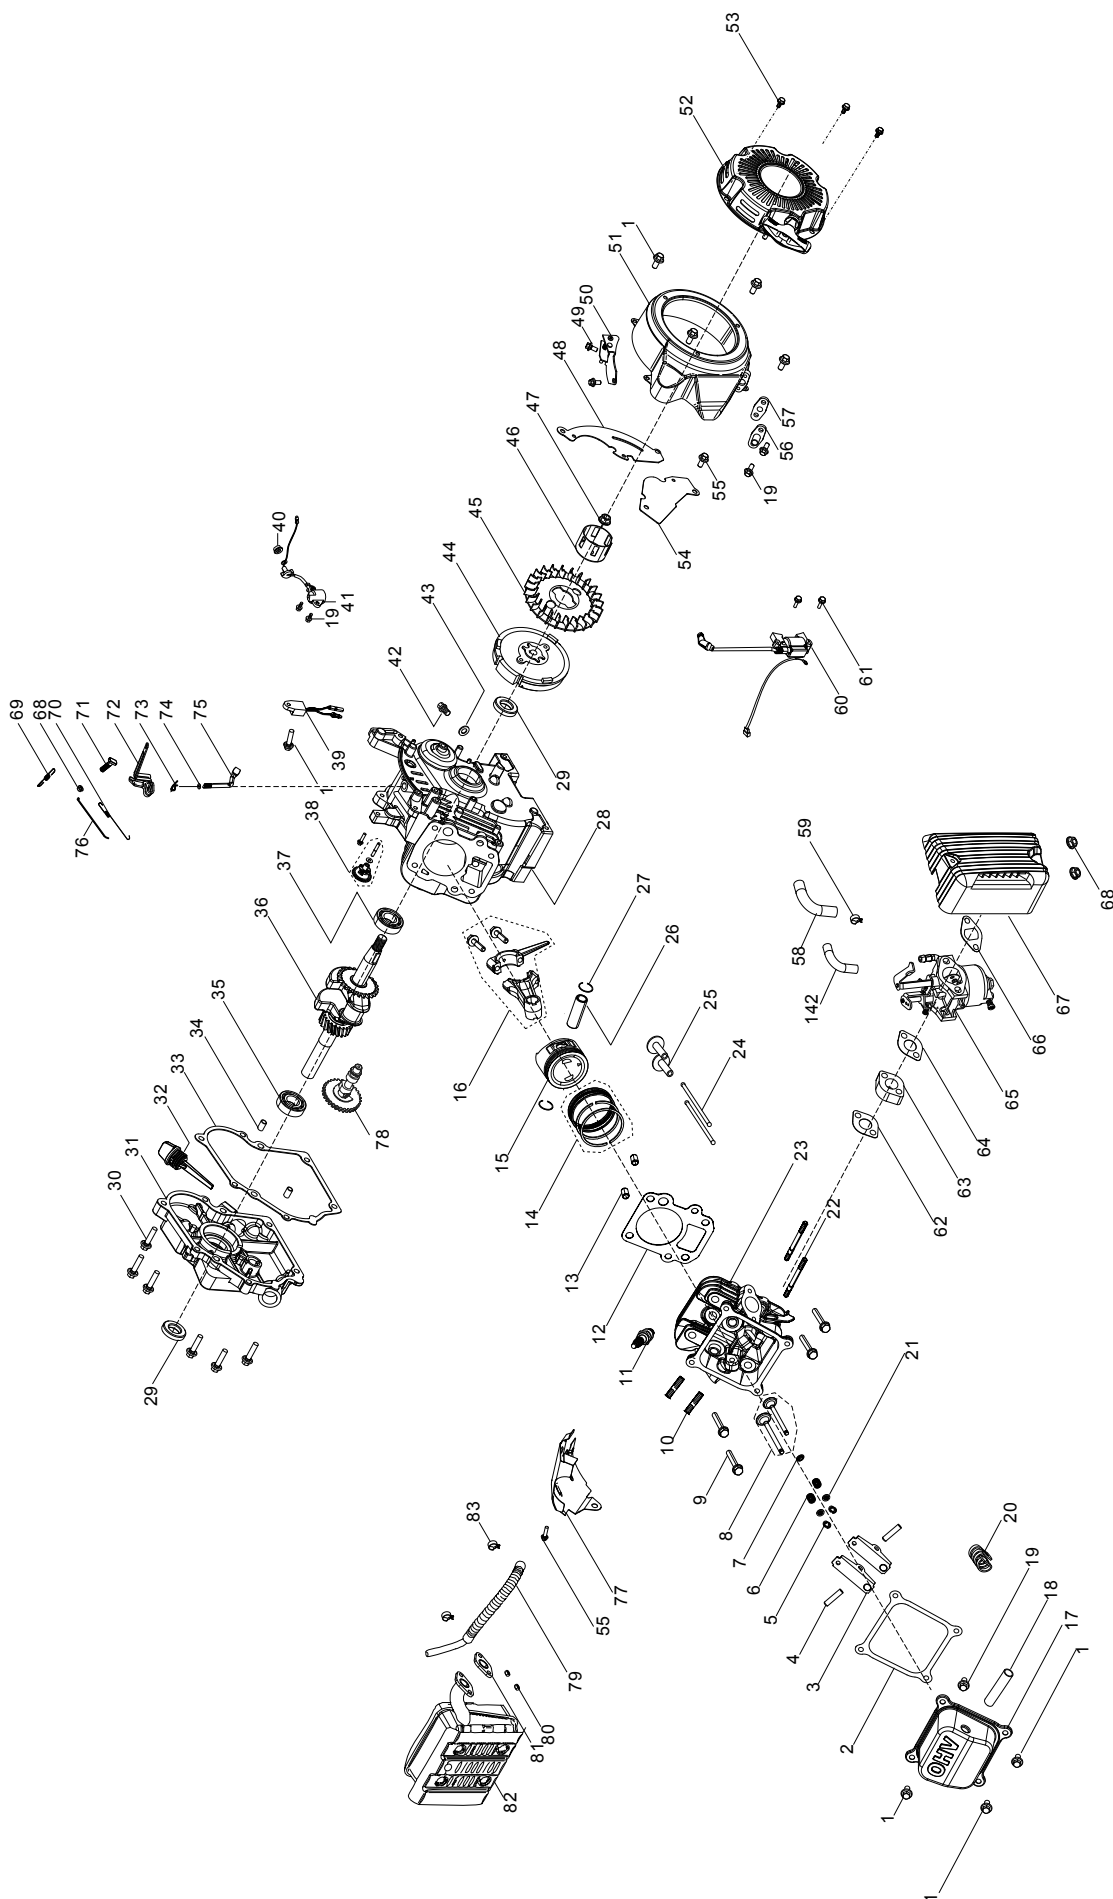

SAFETY

SETUP

OPERATION

MAINTENANCE

# Generator Frame Parts List

SAFETY

| Part | Description                   | Qty |
|------|-------------------------------|-----|
| 84   | Cover, Fuel Tank              | 1   |
| 85   | Strainer, Fuel                | 1   |
| 86   | Valve, One Way                | 1   |
| 87   | Fuel Tank                     | 1   |
| 88   | Hex Socket Flange, Face Bolt  | 4   |
| 89   | Cock Assembly, Fuel           | 1   |
| 90   | Hose, Fuel Steam Rubber       | 1   |
| 91   | Pipe Clamp                    | 1   |
| 92   | Band                          | 1   |
| 93   | Collector, Fuel System        | 1   |
| 94   | Jacket, Rubber                | 1   |
| 95   | Hose, Air Cleaner Rubber      | 1   |
| 96   | Protective Rubber Sleeve      | 2   |
| 97   | nut with Flange               | 8   |
| 98   | Engine Fixed Bottom Plate     | 1   |
| 99   | Hex Socket Flange, Face Bolt  | 2   |
| 100  | Cushion, Engine Frame         | 1   |
| 101  | Cushion, Engine Frame - Right | 1   |
| 102  | Cushion, Engine Frame         | 1   |
| 103  | Cover, Motor Front End        | 1   |
| 104  | Hex Socket Flange, Face Bolt  | 4   |

SETUP

| Part | Description                                    | Qty |
|------|--|-----|
| 105  | Motor Assembly                                 | 1   |
| 106  | Motor Support                                  | 1   |
| 107  | Stator Bolt                                    | 4   |
| 108  | Bolt, Rotor                                    | 1   |
| 109  | Brush Subassembly, Carbon                      | 1   |
| 110  | Hex Socket Flange, Face Bolt                   | 7   |
| 111  | Cover, Motor Tail                              | 1   |
| 112  | Flat Washer - Grade A                          | 1   |
| 113  | Regulator, Voltage                             | 1   |
| 114  | Band   | 1   |
| 115  | Frame Assembly, Engine                         | 1   |
| 116  | Hex Socket Flange, Face Bolt                   | 4   |
| 117  | Seat, Engine Frame Shock Absorption            | 4   |
| 118  | Grounding                                      | 1   |
| 119  | External Teeth Serrated Lock Washer            | 1   |
| 120  | Hexalobular Socket Central Stud Pan Head Screw | 2   |
| 121  | Carbon Monoxide Alarm                          | 1   |
| 122  | Nut with Flange                                | 6   |


| Part | Description                           | Qty |
|------|---------------------------------------|-----|
| 123  | Seat, Panel                           | 1   |
| 124  | Hex Socket Flange, Face Bolt          | 4   |
| 125  | Panel Assembly, Control               | 1   |
| 126  | Indicator                             | 1   |
| 127  | Oil Alarm Indicator                   | 1   |
| 128  | Switch Subassembly                    | 1   |
| 129  | Protector, Over-current               | 1   |
| 130  | Votmeter                              | 1   |
| 131  | Protector, Over-current               | 1   |
| 132  | Socket Subassembly, Power Supply      | 1   |
| 133  | Rain Cover Receptacle                 | 1   |
| 134  | Terminal Subassembly, Grounding       | 1   |
| 135  | Band                                  | 1   |
| 136  | Cushion, Engine Frame Right           | 1   |
| 137  | Flat Washer - Grade A                 | 4   |
| 138  | Leveler Assembly, Oil                 | 1   |
| 139  | Cross Recessed Countersunk Head Screw | 2   |
| 140  | Sleeve, Fuel Tank Rubber              | 4   |
| 141  | Bush                                  | 4   |
| 142  | Jacket, Rubber                        | 1   |
| 143  | Band                                  | 1   |

OPERATION

MAINTENANCE



# Generator Frame Diagram

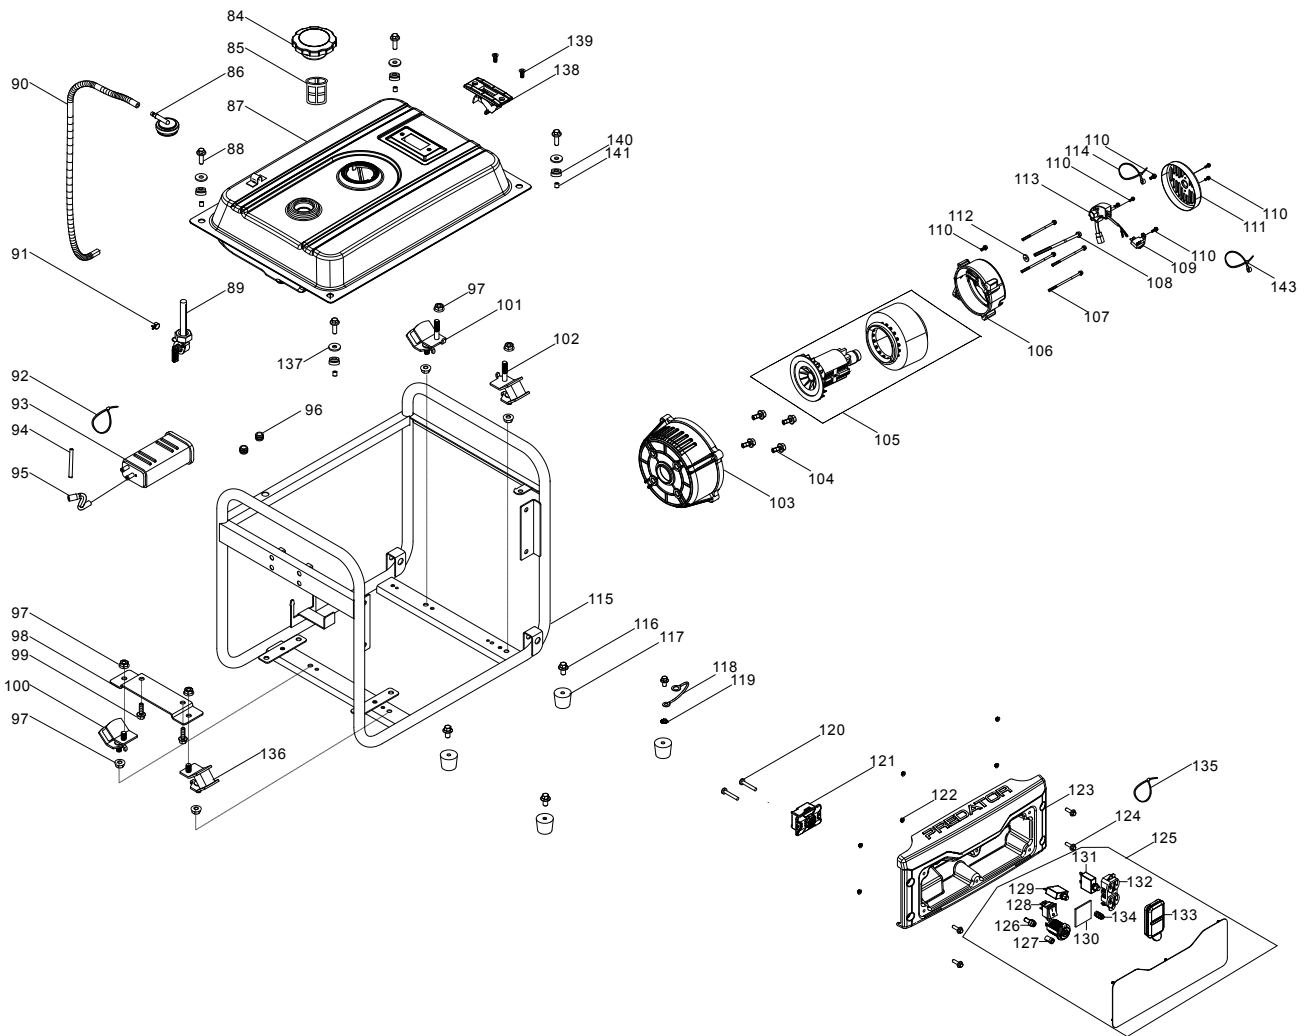

SAFETY

SETUP

OPERATION

MAINTENANCE

## Limited 90 Day Warranty (Retail)

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS, EXCEPT FOR THE EMISSIONS CONTROL SYSTEM WARRANTY BELOW.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

## Emissions Control System Warranty

Harbor Freight Tools (HFT) is pleased to explain the emissions control system warranty on your Small Off-Road Engine produced after January 1, 2024 (engine), in addition to the Retail Warranty above. HFT warrants that the emissions control system on your engine is designed, built, and equipped so that it conforms to the United States Environmental Protection Agency's (EPA) emissions requirements in effect at the time of manufacture. HFT also warrants that the emissions control system on your engine will be free from defects in material and workmanship for two (2) years, provided there has been no improper maintenance, misuse, or abuse of your engine.

Your emissions control system may include parts such as the carburetor or fuel-injection system, and the ignition system. Also included may be hoses, belts, connectors and other emissions-related assemblies.

### WHAT WE WILL DO

Where a warrantable condition exists, HFT will repair or replace, at our option, any emissions-related part on your engine if it becomes defective, malfunctions, or otherwise fails to conform with this warranty under normal use and service during the two (2) year term of this warranty at no cost to you, including diagnosis, parts and labor. This warranty applies to the original purchaser and any subsequent owner within the two year warranty period.

## WHAT IS COVERED?

The following parts are examples of components of the emissions control system and are covered by this two (2) year warranty. For a full list of emissions control components covered by this warranty, please see 40 CFR §1068, Appendix I.

1. Fuel Metering System
  - a. Carburetor and its internal parts.
  - b. Fuel pump (if so equipped).
  - c. Cold start enrichment system.
2. Air Induction System
  - a. Intake pipe/manifold.
  - b. Air cleaner.
3. Ignition System
  - a. Spark plug.
  - b. Magneto ignition system.
4. Catalyst System (if so equipped)
  - a. Exhaust pipe stud.
  - b. Muffler.
  - c. Catalytic converter (if so equipped).
5. Miscellaneous Items Used in Above Systems
  - a. Vacuum, temperature and time sensitive valves and switches.
  - b. Hoses, belts, connectors, and assemblies.

This warranty does not cover normal maintenance services or replacement of maintenance items such as filters, oils, or spark plugs.

## WHAT YOU MUST DO TO OBTAIN WARRANTY SERVICE

As the engine owner, you are responsible for the performance of the required maintenance listed in your Owner's Manual. HFT may deny you warranty coverage if your engine or a part has failed due to abuse (including failure to follow the fuel use instructions contained in this manual), neglect, improper maintenance, or unapproved modifications.

In order to obtain warranty repair or replacement, you may either (a) contact HFT product support at 1-888-866-5797 or [productsupport@harborfreight.com](mailto:productsupport@harborfreight.com); or (b) bring the engine/equipment to your nearest Harbor Freight Tools retail store. When going to the retail store or contacting product support, you must indicate the specific emissions control part or defect that you are claiming and the date this was originally purchased. The nearest Harbor Freight Tools retail store can be found on the internet at <http://www.harborfreight.com>.

**PREDATOR®**

26677 Agoura Road • Calabasas, CA 91302 • 1-888-866-5797