

Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

24a

INDOOR WIRELESS REMOTE SYSTEM



Visit our website at: <http://www.harborfreight.com>
Email our technical support at: productsupport@harborfreight.com

62575

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-888-866-5797 as soon as possible.





Copyright© 2023 by Harbor Freight Tools®. All rights reserved.

No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

⚠WARNING

Read this material before using this product. Failure to do so can result in serious injury. **SAVE THIS MANUAL.**

WARNING SYMBOLS AND DEFINITIONS

	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
 DANGER	Indicates a hazardous situation which, if not avoided, will result in death or serious injury.
 WARNING	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
 CAUTION	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
NOTICE CAUTION	Addresses practices not related to personal injury.

IMPORTANT SAFETY INFORMATION

WARNING

Read all safety warnings and instructions.

Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

- 1. TO REDUCE THE RISK OF ELECTRIC SHOCK – USE ONLY INDOORS.**
- 2. RISK OF ELECTRIC SHOCK. USE ONLY IN DRY LOCATION. Keep remote and receivers dry, and do not use them if they are wet.**
- 3. Do not use to control equipment that may be dangerous to turn on remotely, such as power tools or appliances with moving or heating parts. Do not use to control equipment that is not within your line of sight.**
- When not in use, turn off equipment connected to the Wireless Remote System using the equipment's switch or unplug it from the Receiver to prevent accidental starting.
- Inspect before every use; do not use if parts loose or damaged.
- Do not exceed electrical rating.
- Keep area near receiver clean. Cluttered areas invite accidents.
- Maintain products with care. Keep the Wireless Remote System clean for better and safer performance. Inspect the components periodically. If damaged, have it repaired by a qualified technician.
- The warnings, precautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

Button/Coin Battery Safety

WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



This symbol means:


INGESTION HAZARD: This product contains a button cell or coin battery.

1. Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
2. Even used batteries may cause severe injury or death.
3. Call a local poison control center for treatment information.
4. Non-rechargeable batteries are not to be recharged.
5. Do not force discharge, recharge, disassemble, heat above 140°F or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns. Ensure the batteries are installed correctly according to polarity (+ and -).
6. Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
7. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
8. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

Specifications

Electrical Rating	125V~ / 60Hz / 15A Max. / 1875W Resistive, 200W Tungsten Load
Range	80 Feet
Remote Control Battery	3V CR2032 Lithium
Frequency	315 MHz

Components and Controls

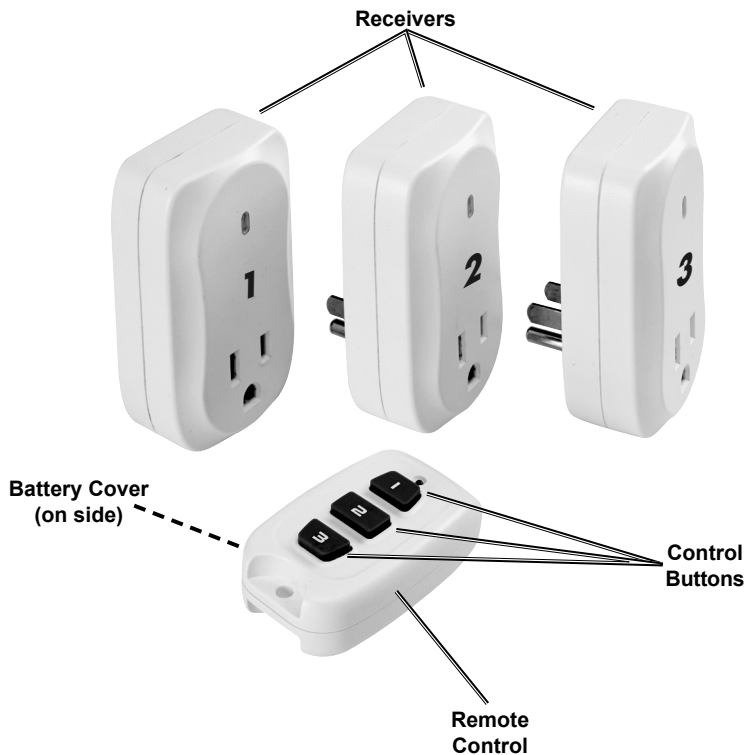

Changes or modifications not expressly approved by Harbor Freight Tools could void the user’s authority to operate the equipment.

Operating Instructions



Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this document including all text under subheadings therein before set up or use of this product.

1. Remove screw(s) and open battery compartment on Remote Control.
2. Carefully remove protective strip from battery compartment. Close compartment and replace screw(s).
3. Plug device to be controlled into the outlet on the Receiver.
4. Plug one Receiver into an indoor 120VAC wall outlet.
5. Turn device's power switch on, then press button on Remote that corresponds with number on Receiver to turn device on.

Note: Allow at least 3 seconds after pressing any button on the Remote Control for signal transmission to finish before pressing it again.

6. When finished, press button on Remote that corresponds with number on Receiver to turn device on, then turn device's power switch off or unplug it from Receiver.

Note: Do not plug more than one Receiver into any outlet. Space Receivers at least 24" apart.

Note: Do not install Receivers behind large metal objects or metal doors. Such obstructions may reduce the receiving range.

Maintenance



Procedures not specifically explained in this manual must be performed only by a qualified technician.

WARNING

TO PREVENT SERIOUS INJURY FROM TOOL FAILURE:

Do not use damaged equipment. If abnormal noise or vibration occurs, have the problem corrected before further use.

Cleaning, Maintenance, and Lubrication

1. **BEFORE EACH USE**, inspect the general condition of the tool. Check for:
 - a. leaking, swollen, or cracked battery,
 - b. loose hardware,
 - c. misalignment or binding of parts,
 - d. cracked or broken parts, and
 - e. any other condition that may affect its safe operation.
2. **AFTER USE**, wipe external surfaces of the tool with clean cloth.
3. Replace the battery in the Remote Control when necessary to maintain proper performance.
4. Replacement parts are not available.

Remote Control Battery Replacement

1. Remove screw(s) and open battery compartment.
2. Remove battery and dispose of properly.
3. Install new battery in correct polarity, close compartment and replace screw(s).

Record Product's Serial Number Here:_____

Note: If product has no serial number, record month and year of purchase instead.

Note: Replacement parts are not available. Reference UPC 193175507655.

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.