



## Operation


1. Thread properly-sized Nosepiece securely onto end of Riveter.

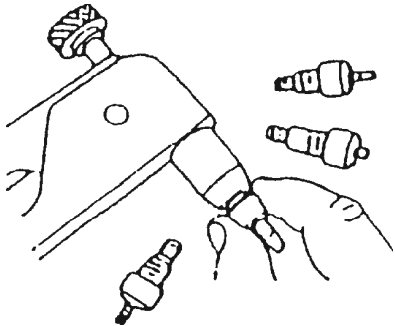

2. Thread Rivet Nut onto Nosepiece and insert it through hole in workpiece.

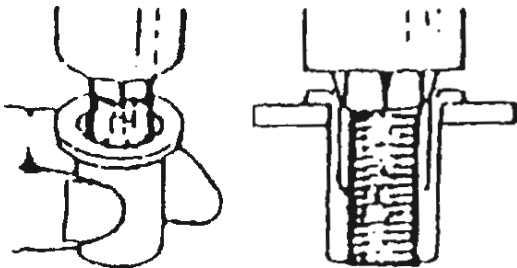

3. Squeeze tool to secure Rivet Nut.

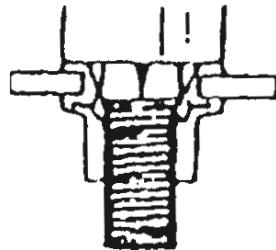

4. Unthread and remove tool from Rivet Nut.

