



**CHICAGO  ELECTRIC<sup>®</sup>**  
**POWER TOOLS**

**Blade Installation Guide**  
**for 61971 Miter Saw**


- 1** UNPLUG SAW AND  
RAISE CUTTING HEAD

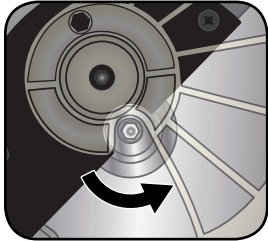

- 2** SWING GUARD OPEN  
UNTIL NOTCH ALIGNS  
WITH ARBOR BOLT

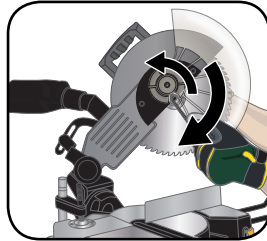

- 3** HOLD IN SPINDLE LOCK  
ON BACK WHILE  
REMOVING ARBOR BOLT,  
(TURN CLOCKWISE –  
REVERSE THREAD)

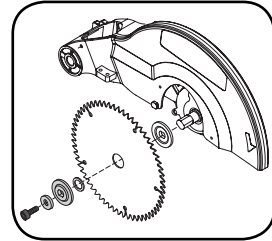

- 4** INSTALL 10" SAW BLADE  
WITH OUTER FLANGE  
POSITIONED AS SHOWN