

Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual near the assembly diagram (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

25a



GREENHOUSE

12'L x 10'W x 10'H



Shelving unit and pots not included.

Visit our website at: <https://www.harborfreight.com>
Email our technical support at: productsupport@harborfreight.com

72729

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-800-444-3353 as soon as possible.

Copyright© 2024 by Harbor Freight Tools®. All rights reserved.
No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

⚠ WARNING

Read this material before using this product.
Failure to do so can result in serious injury.
SAVE THIS MANUAL.

Table of Contents

Safety	3	Maintenance	25
Specifications	4	Parts List	25
Assembly	4	Warranty	28

SAFETY



BASE

FRAME

MAINTENANCE

WARNING SYMBOLS AND DEFINITIONS

	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
	Indicates a hazardous situation which, if not avoided, will result in death or serious injury.
	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
	Addresses practices not related to personal injury.

IMPORTANT SAFETY INFORMATION

The warnings, precautions, and instructions discussed in this manual cannot cover all possible conditions and situations that may occur. The operator must understand that common sense and caution are factors, which cannot be built into this product, but must be supplied by the operator.

Assembly / Installation Precautions

1. Assemble only according to these instructions. Improper assembly can create hazards.
2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
3. This unit contains pieces with sharp edges. The machined edges of the aluminum parts and the ends of the panel clips may be sharp. Handle all parts carefully.
4. Keep assembly area clean and well lit.
5. Keep bystanders out of the area during assembly.
6. Do not assemble when tired or when under the influence of alcohol, drugs or medication.
7. Product capabilities apply to properly and completely assembled product only.
8. Locate the Greenhouse on a flat, level, surface. A concrete foundation is recommended for a high-quality installation.

Use / Service Precautions

1. **This product is not a toy. Do not allow children to play in or climb on this product.** Although this greenhouse does include some caps, there are still some exposed sharp edges. In addition, protective covers may fall off in time. Children must be supervised if allowed near the greenhouse.
2. **SNOW/DEBRIS ACCUMULATION HAZARD.** The heavy weight of accumulated snow or other debris can cause parts of this greenhouse to buckle suddenly. Do not allow debris to accumulate on top of the greenhouse. If snowfall is expected, place additional supports (not provided) underneath the Crown. **NEVER enter a greenhouse with accumulated debris on top.**
3. Use as intended only.
4. Inspect periodically; replace damaged parts immediately and do not enter greenhouse if parts are loose or damaged.
5. For your safety, service and maintenance should be performed regularly by a qualified technician.



SAVE THESE INSTRUCTIONS.

Specifications

Overall Dimensions	122-1/2" W x 144" L x 123" H
Window Dimensions	28-3/4" W x 21- 3/5" L
Door Dimensions	75-1/2" H x 45-1/2" W
Materials	Aluminum Frame Transparent Polycarbonate Sheets
Aluminum Thickness	0.038"
Polycarbonate Sheet Thickness	0.165"

Foundation Installation



Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this document including all text under subheadings therein before set up or use of this product.

IMPORTANT—READ THE FOLLOWING CAREFULLY BEFORE PROCEEDING

- Decide on a greenhouse location. An optimal location should be level, well-lit, and sheltered from wind. The greenhouse door should not open towards prevailing winds, if possible.
- Greenhouse must be properly supported by a foundation prior to assembly to prevent property damage and injury in the event of strong winds or inclement weather. Wind and ground conditions vary from site to site, and affect practicality and effectiveness of anchoring methods substantially. If in doubt regarding the stability of a foundation you choose, consult a professional.
- You are responsible to ensure the greenhouse is properly anchored. Harbor Freight Tools cannot be held responsible for personal injury, greenhouse damage, or other property damage that occurs as a result of improper greenhouse anchoring.
- Check with local authorities to obtain all required building permits and to familiarize yourself with any building codes that may apply.



Base Assembly

Note: If there will be no foundation, proceed with this section. Skip to next page for foundation instructions.

1. Excavate a 10' 2" wide by 12' 2" long by 5" deep area for the greenhouse base. Make the floor of the hole level and square. The diagonal dimensions from corners should be 15' 5".
2. Assemble Base outside the hole as shown below. Face angled edges of the Base Plates (43, 44) towards the corners of the base. Use Base Bolts (68), Base Nuts (69), and Connectors (45, 46) to secure the pieces together.

3. With assistance, lower Base into hole. Diagonal dimensions, from outside corner to corner, must be equal.
4. Fill the hole around outside of base with soil.
5. Fill base with gravel or another appropriate fill material (not provided) up to about 1" below the lip of the base.

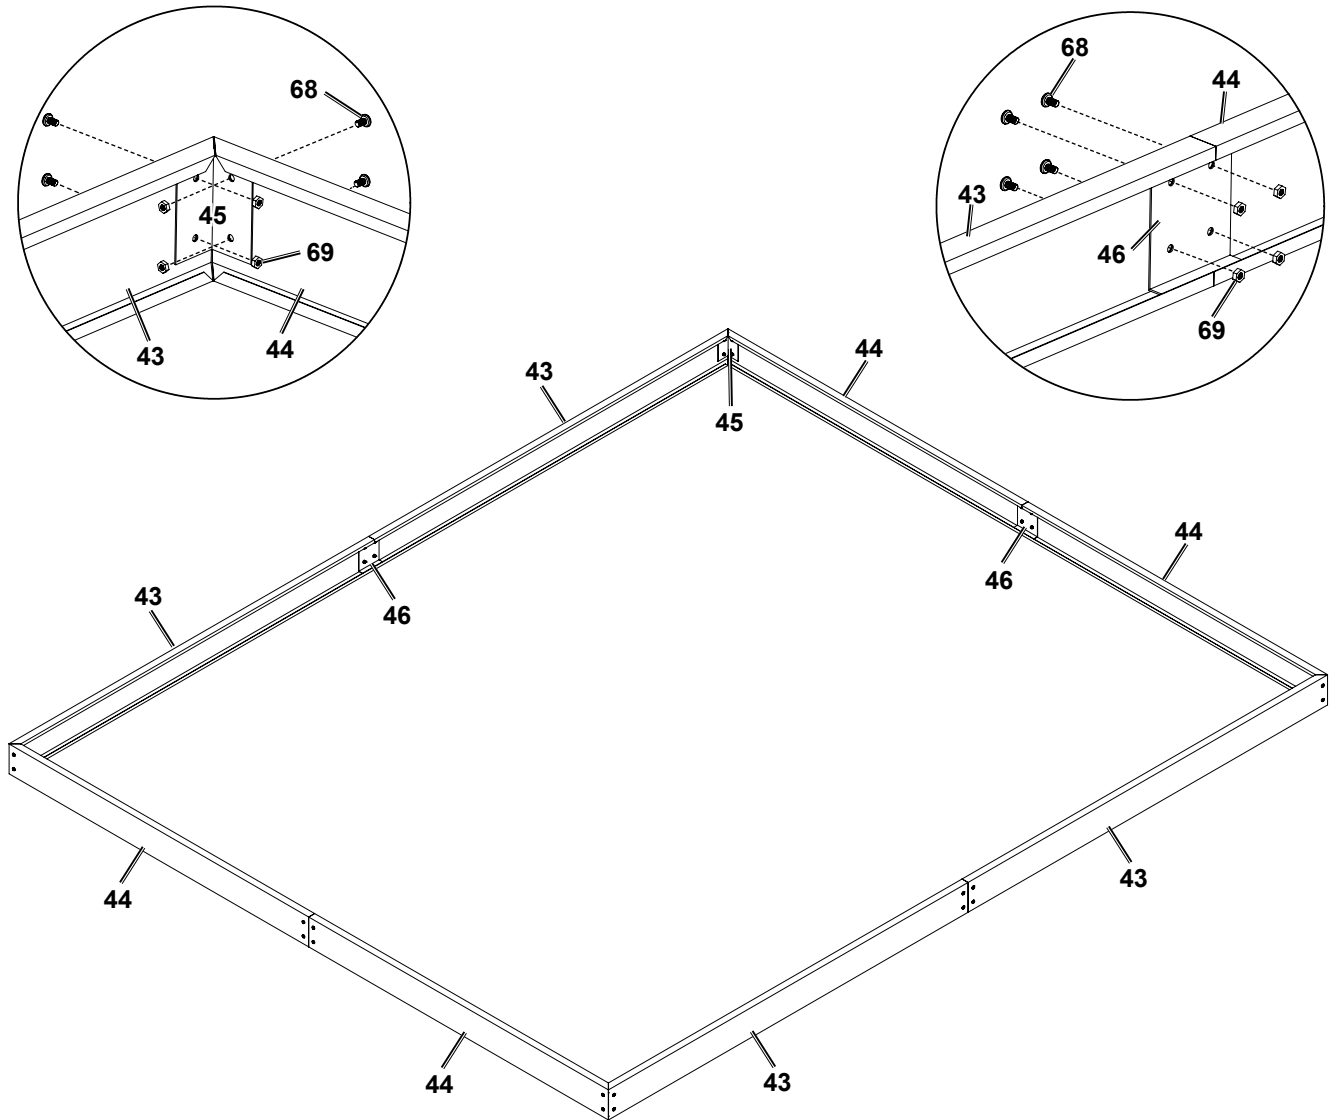


Figure A: Base

Concrete Anchor Block Foundation

1. Frame is assembled out of 4 x 4 treated lumber, hardware, and prefabricated anchor blocks (sold separately).
2. Assemble 4 x 4 pieces to dimensions shown (**See Figure B**). Trim wood to fit. Make the assembly square and level. The diagonal dimensions, from outside corners should be 188-1/8" each.
3. Assemble the frame using hardware.

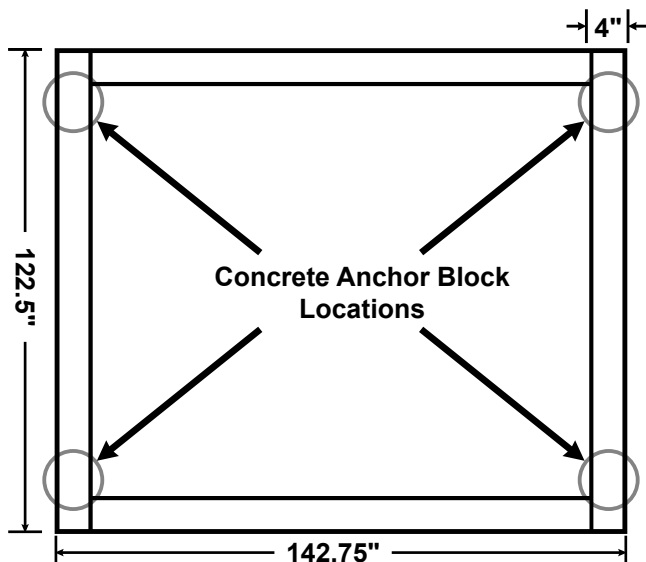


Figure B: Wood Frame Dimensions

4. Dig a hole for each of the anchor blocks in the locations shown (**See Figure A**). Holes should be slightly oversized and deep enough so installed frame almost rests on the ground.
5. Place an anchor block in each hole, and the frame on the anchor blocks. Use a level on the frame to confirm anchor blocks are sunk to proper depth. If an anchor block needs to be raised, partially fill hole under anchor block with sand or gravel.
6. With frame level, secure it to the anchor blocks. Fill holes fully with earth removed previously.
7. Optional: For convenience, frame may be filled with a proper fill material, such as gravel (sold separately).
8. Match Floor Plate (1-6) (**See Figure J on page 11**). lengths to frame base edge lengths. Place Front Floor Plates (1,2) on the side the door will face.

NOTE: Position Floor Plates with their outer edges overhanging frame outer edges. (**See Figure C**). **Do not secure the Floor Plates to the Frame at this time.**

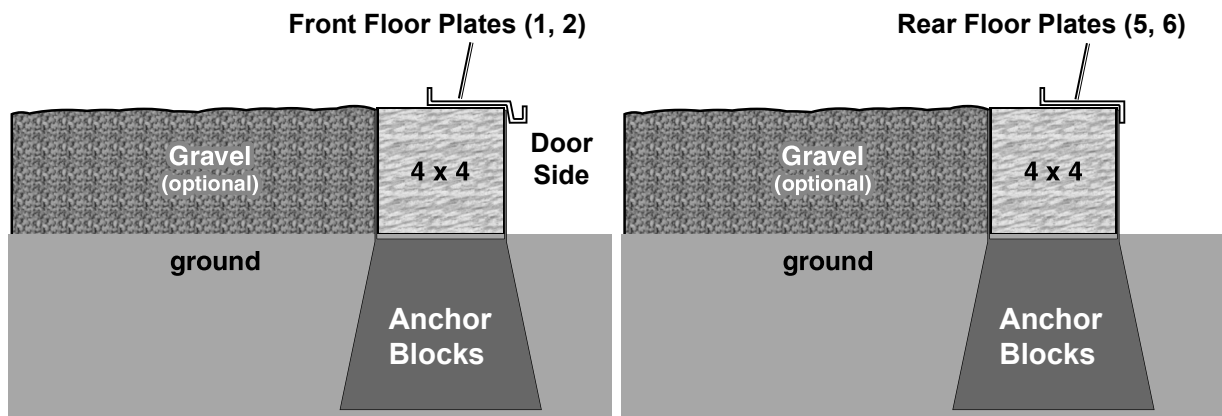


Figure C: Concrete Anchor Block Foundation - Cross Section

Treated Wood Base Foundation

1. Frame is assembled out of 4x6 and 2x12 treated lumber, hardware (including galvanized lag bolts/deck screws), and fill material, such as gravel (not included).
2. Assemble 2 x 12 pieces to dimensions shown (**See Figure D**). Trim wood to fit. Make assembly square and level; if needed, fill under sections of base to level. Diagonal dimensions from outside corners should be 188-1/8".

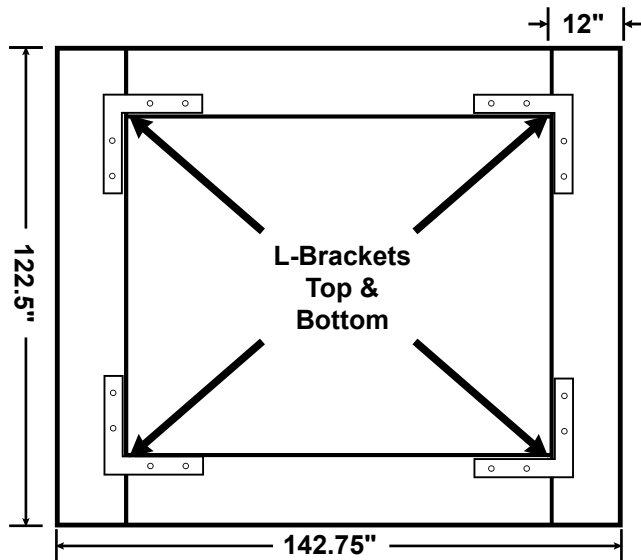


Figure D: Wood Base Dimensions

3. Assemble 4 x 6 pieces on top of 2 x 12 base as shown (**See Figure E**).
4. Fill base with fill material to top of the 4 x 6 pieces.
5. Match Floor Plate (1-6) (**See Figure J on page 11**). lengths to frame base edge lengths. Place Front Floor Plates (1,2) on the side the door will face.

NOTE: Position Floor Plates with their outer edges overhanging frame outer edges. (**See Figure E**). **Do not secure the Floor Plates to the Frame at this time.**

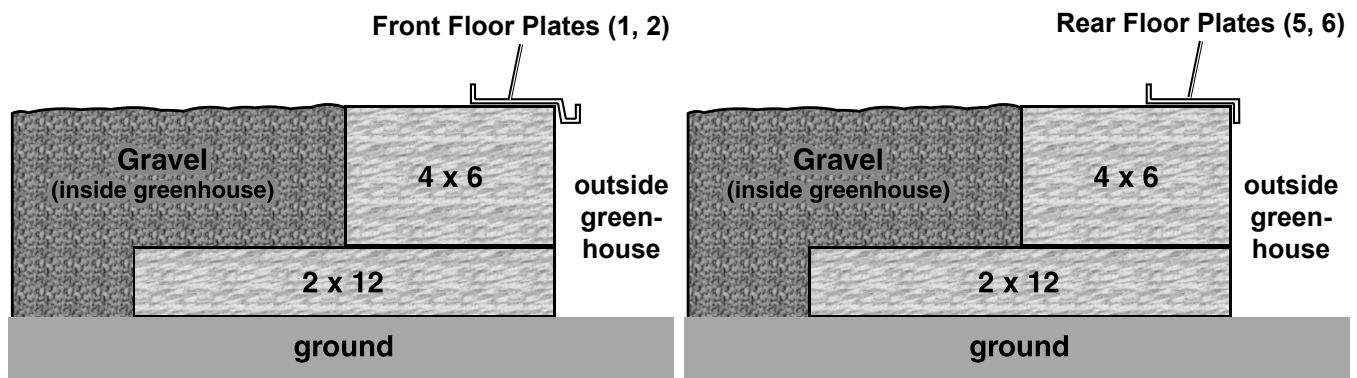


Figure E: Wood Base Cross Section

Concrete Slab Foundation

Constructing a Wooden Sill

Note: Greenhouse must be attached to wood sill, not a concrete slab.

1. Sill is assembled out of 2x4 treated lumber (sold separately).
2. Cut boards to dimensions shown (**See Figure F**). Place them on a level floor surface to form a rectangle.
3. Square the boards, then take measurements. Diagonal dimensions from outside corners should be 188-1/8".
4. Secure boards together at corners using wood screws (sold separately).
5. Drill two 1/4" holes through each board (**See Figure F**).

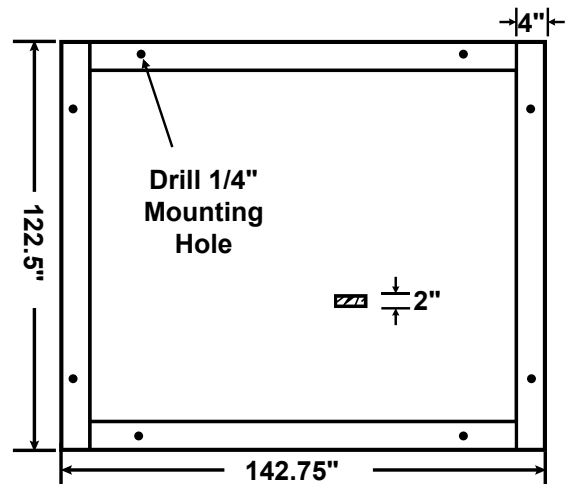


Figure F: Wooden Sill

Attaching Sill to Concrete Slab

Note: Concrete slab can be slightly oversized from sill dimensions.

1. Lay sill on concrete slab, using sill as a template, mark drilling locations.
2. Remove sill.
3. Drill 1/4", minimum 4" deep, holes in marked locations. Blow concrete dust out of drilled holes.
4. Replace sill, aligning holes. If necessary, level sill by inserting stainless steel shims (sold separately) between sill and concrete floor. Do not exceed 1/2" shim thickness.
5. Secure sill using 1/4" diameter anchor bolts of appropriate length, washers, and nuts (sold separately).

Positioning the Floor Plates on the Sill

1. Match Floor Plate (1-6) (**See Figure J on page 11**). lengths to frame base edge lengths. Place Front Floor Plates (1,2) on door side of base.

NOTE: Position Floor Plates with their outer edges overhanging the outer edges. (**See Figure G**). **Do not secure Floor Plates to Sill at this time.**


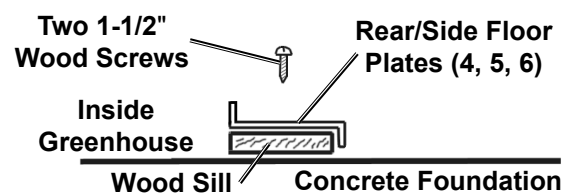


Figure G: Sill Cross Section

Frame Assembly

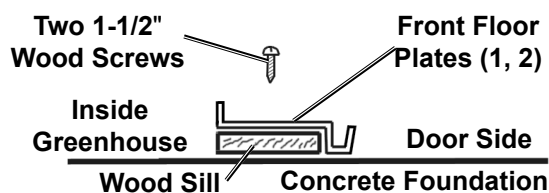

Read the **ENTIRE** IMPORTANT SAFETY INFORMATION section at the beginning of this document including all text under subheadings therein before set up or use of this product.

- Unless noted otherwise, attach frame parts using provided Bolts (65) and Nuts (67). Tighten nuts 1/4 turn past finger tight; do not overtighten.
- Bolt heads will fit into slots on back of studs to hold bolts in place during assembly.
- Lay out all parts by number prior to assembly.
- Use an assistant or an appropriate support (not included) to keep partially assembled parts upright during assembly. Use two assistants to assemble Crown pieces to the frame.
- Assemble on a clear, calm day. Wind will damage the Greenhouse and make assembly difficult.

Assembling the Side Braces and Diagonal Struts

1. Line up bolt holes on Side Brace Connector (95) and Side Brace (30A, 30B) ends. Secure together with Brace Bolts (66) and Nuts. Repeat for remaining Side Braces.
2. Line up holes in Brace Connector (96) with holes in Side Diagonal Strut (80A, 80B) ends. Secure together with Brace Bolts (66) and Nuts. Repeat for remaining Side Braces.

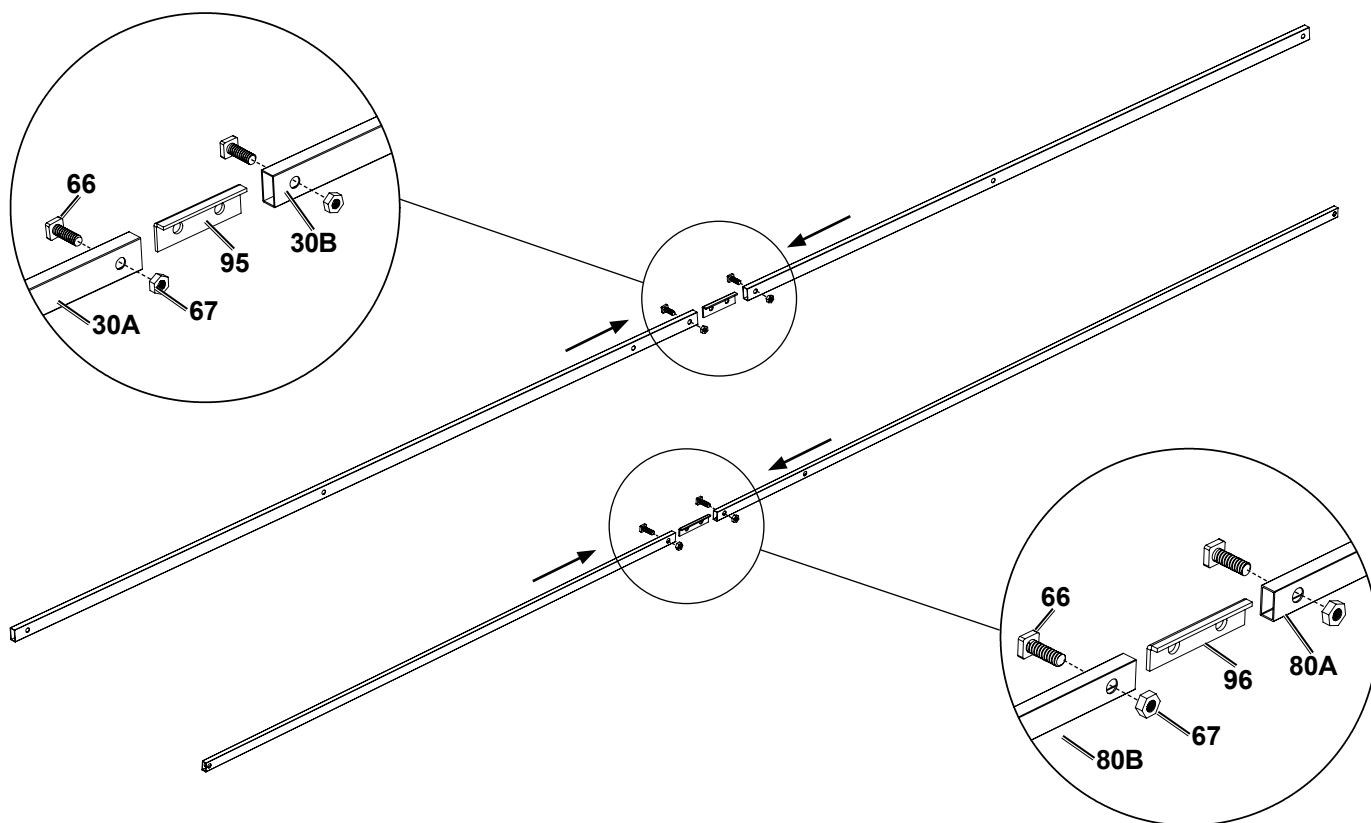


Figure H: Side Braces and Diagonal Struts

Assembling Basic Frame and Rear Brace

Note: Place Corner Post (7) end with 2 holes at bottom.

1. Attach Corner Posts (7) to outside of each corner of Floor Plate (1–6) using Bolts, Hold-down Connectors (47), and Nuts.
2. Drill three pilot holes 1-1/2" through each Floor Plate and into underlying wood sill or base. Do not drill into hardware used earlier. Secure Floor Plates to sill or base using 1-1/2" long wood screws (sold separately).
3. Insert Bolt through Corner Gusset (49) and upper hole in Corner Post (7) at front corners of greenhouse.
4. Attach Side Diagonal Braces (80A, 80B) to Corner Posts, using Brace Bolts (66) and Nuts. Secure remaining end to Side Base Plates (3, 4) using Bolt (52), Hold-down Connectors (47), and Nuts. Side Diagonal Braces and outermost Side Studs (14) will share Bolt (66) and Nut at bottom connection.
5. Attach Diagonal Braces (79) and Rear Braces (31) to lower hole on Rear Corner Gussets using Corner Bracket Bolts (77) and Nuts. Secure Diagonal Brace ends to Floor Plates (1, 2, 3, 4) using Hold-down Connectors (47), Bolts and Nuts.

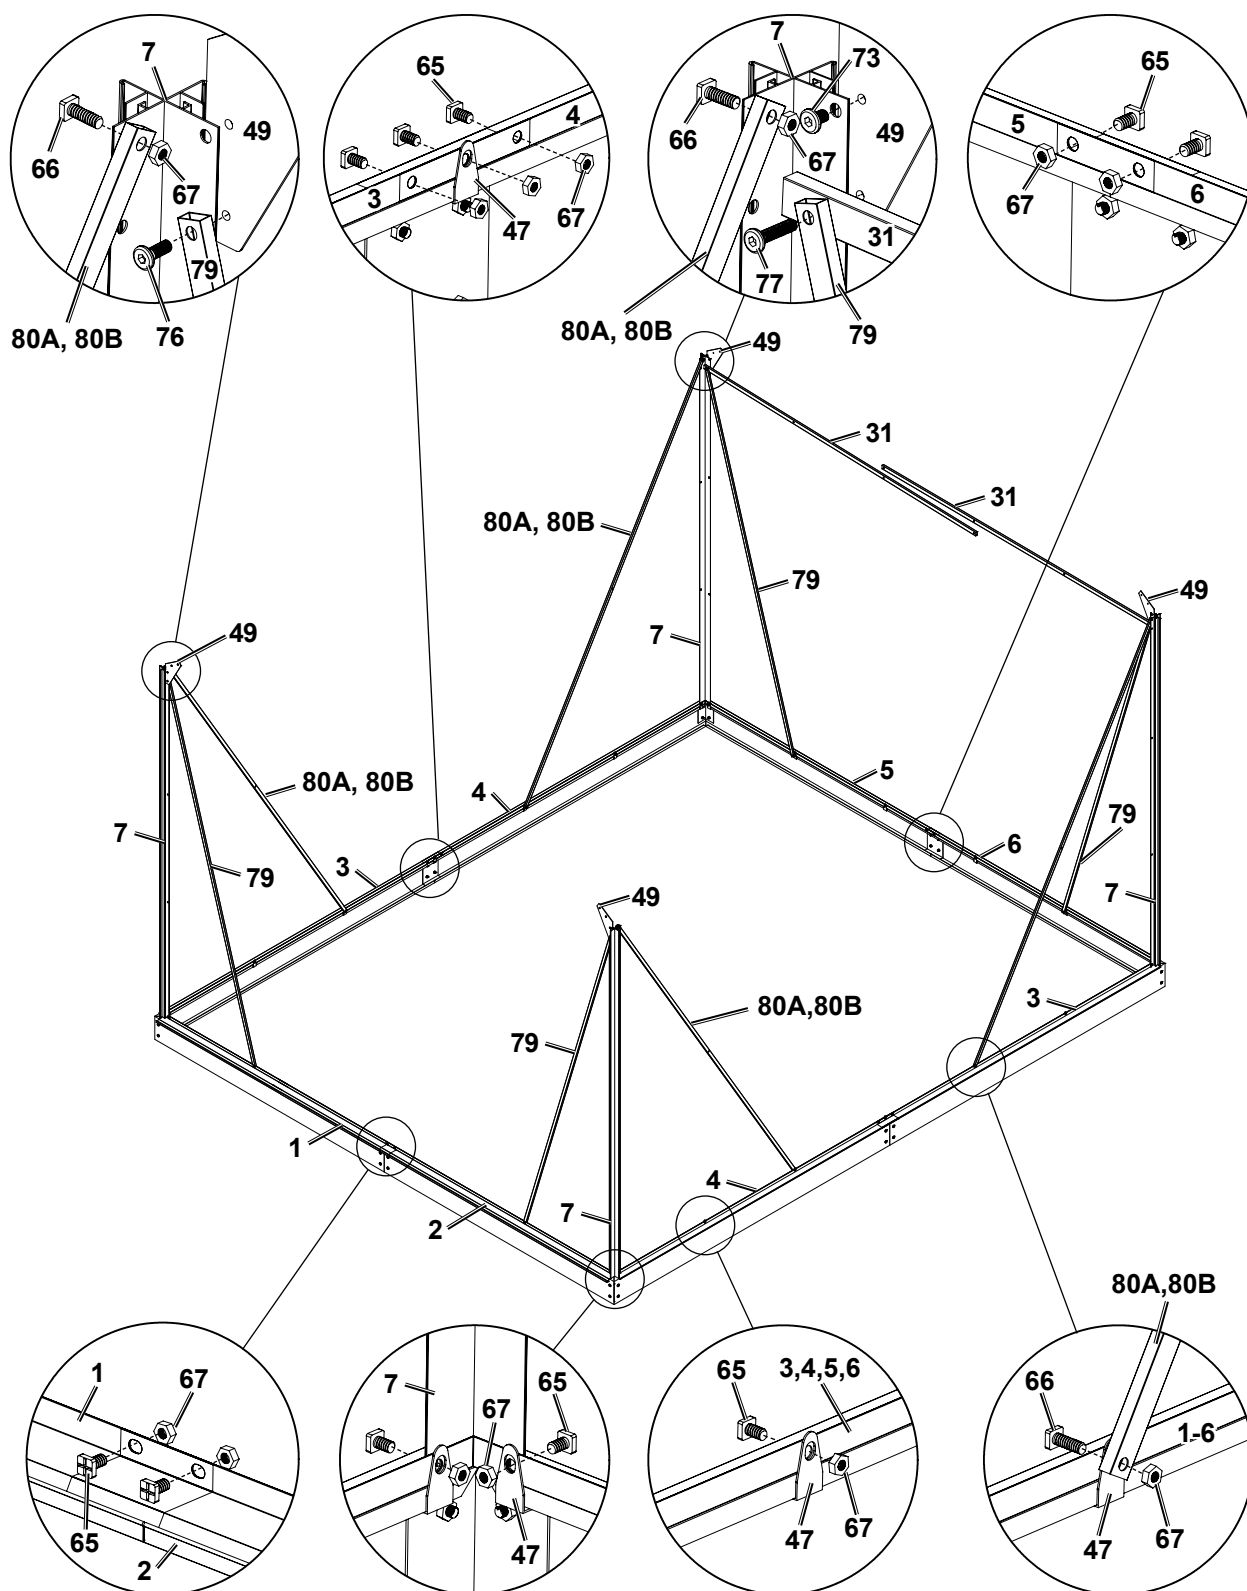


Figure J: Corners and Edges

Assembling Sides and Rear Frame

1. Attach Studs (14) to Side Floor Plates (3, 4) using Bolts and Nuts. **(See Figure K).**
2. Attach Rear Studs (14) to outside of Rear Floor Plates (5, 6) using Bolts and Nuts. **(See Figure K).**
3. Attach Side Braces (30A, 30B) and Rear Braces (31) to inside of Corner Posts (7) and Rear Studs (16-19) using Bolts and Nuts at the base, leave mid section Bolts out.
4. Attach Right and Left Doorway Studs (28, 29) to Front Floor Plates (1, 2) using Bolts and Nuts.
5. Attach Front Braces (32) to inside of Corner Posts (7) and Right and Left Doorway Studs (28, 29) using Bolts and Nuts.
6. Slide 4 Bolts (66) into Stud Connector (48) and slide 2 bolt heads into channel on rear Stud (14), secure in place with Nuts, leaving the top 2 bolts exposed. Repeat for remaining rear Studs.
7. Attach Rear Upper Studs (16-19) to remaining Bolt heads, secure with Nuts.

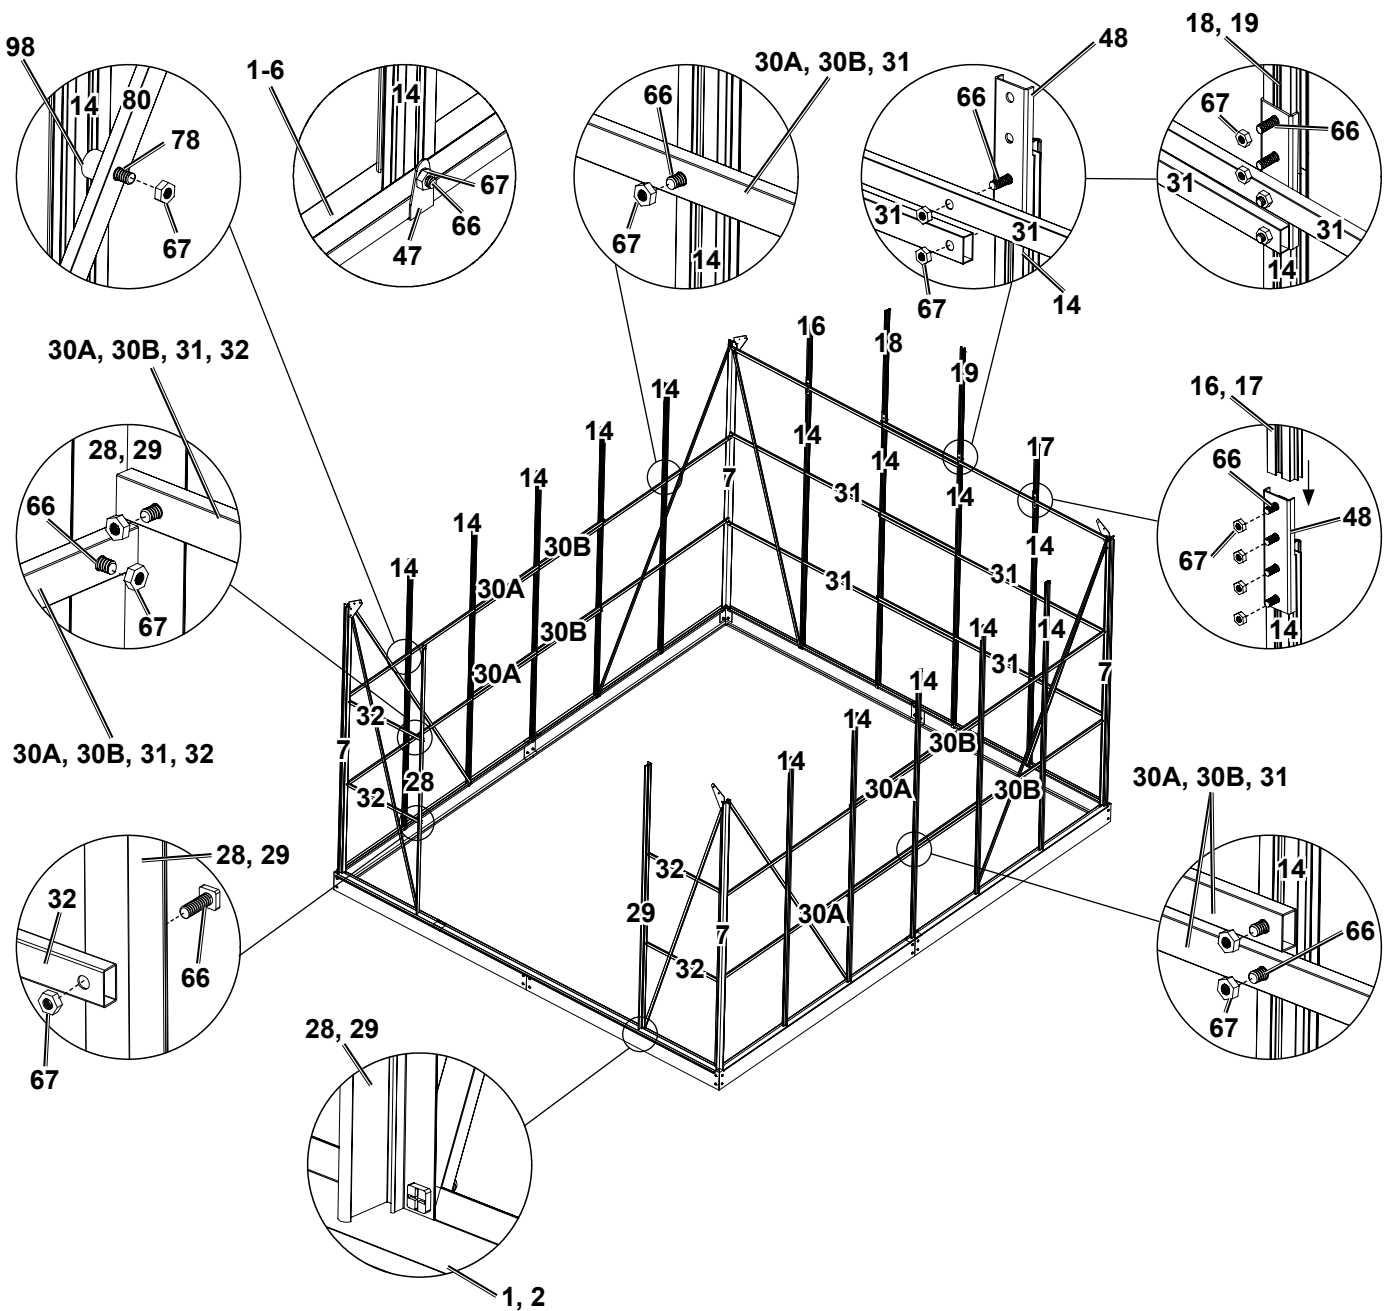


Figure K: Side Frames

Assembling the Sides and Rear

Note: Remove protective film from Panels during install.

1. Slide Front, Side, and Rear Panels (58,60,63) into channels on Studs (14) and Corner Posts (7) leaving a gap at the bottom where they will connect to the Floor Plates (1-6).
2. Attach 2 Clips (72) to each Floor Plate where Front, Side, and Rear Panels will attach (one for each side of Panel).
3. Slide Panels down until Clips are attached to the Bottom of each Panel and Floor Plate.
4. Overlap Side Ceiling Plate (12, 13) ends and align bolt holes on 13 to bracket holes on 12. Secure together with Bolts and Nuts. Repeat for remaining Side Ceiling Plates.
5. Attach Side Ceiling Plates (12, 13) by sliding Bolt heads into Stud (14) channels. Slide notches on Side Ceiling Plates over Bolt threads and secure with Nut.
6. Slide Rear Connectors (94) into channels and attach to top of Rear Panels.
7. Slide Rear Top Panels (55, 56A, 57A) down into channels until fully seated in Rear Connectors.

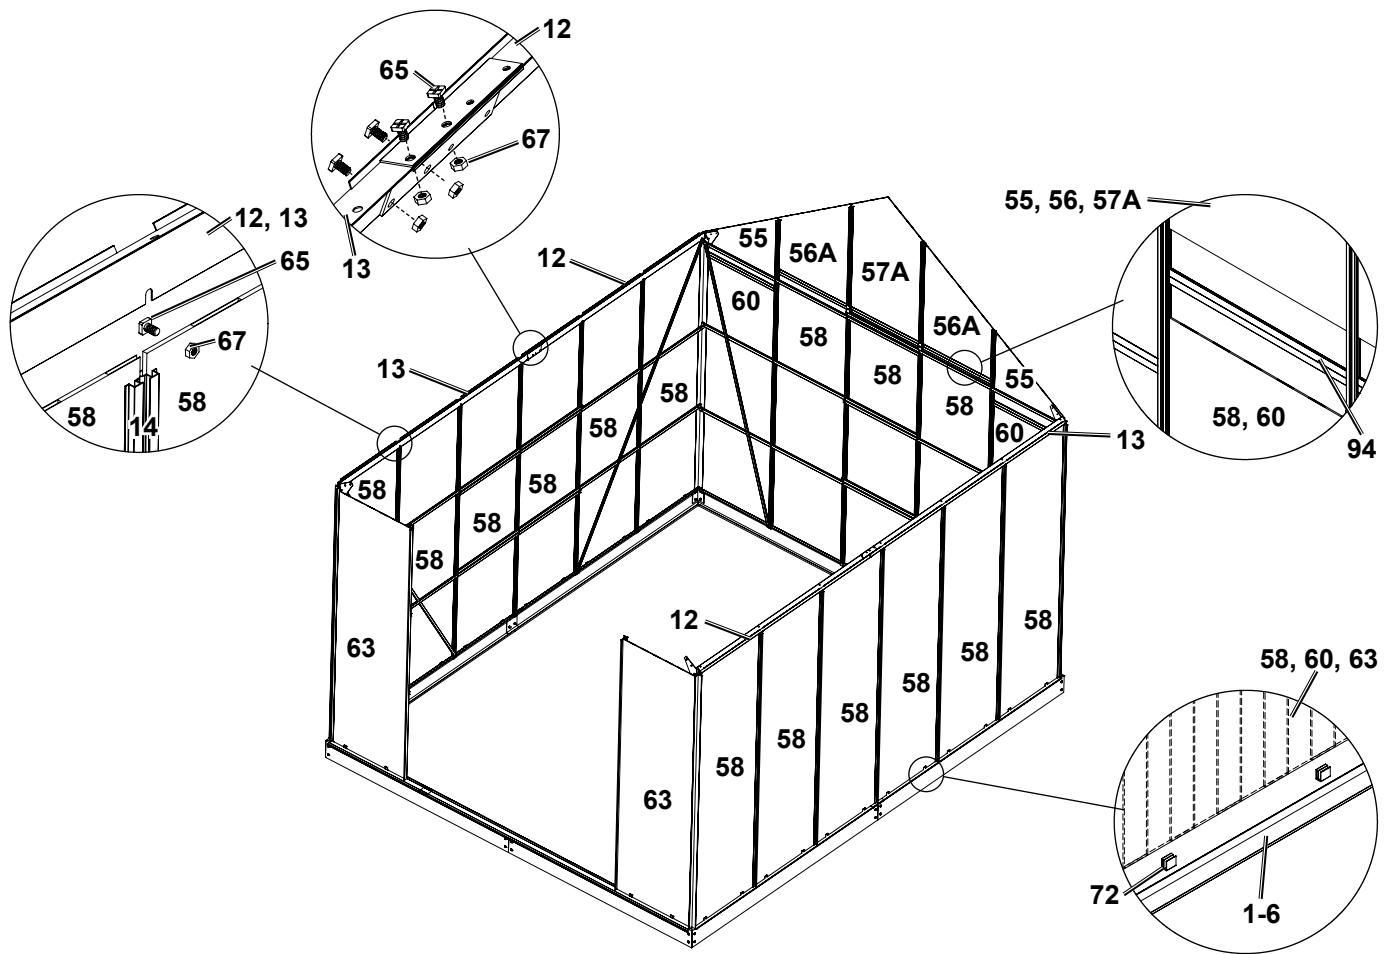


Figure L: Rear Frame

Assembling the Crown Beams and Doorway Beams

1. Overlap Crown (10, 11) ends and align bolt holes. Secure together with Bolts and Nuts.
2. Slide Door Rails (26, 27) onto Doorway Beams (24, 25).

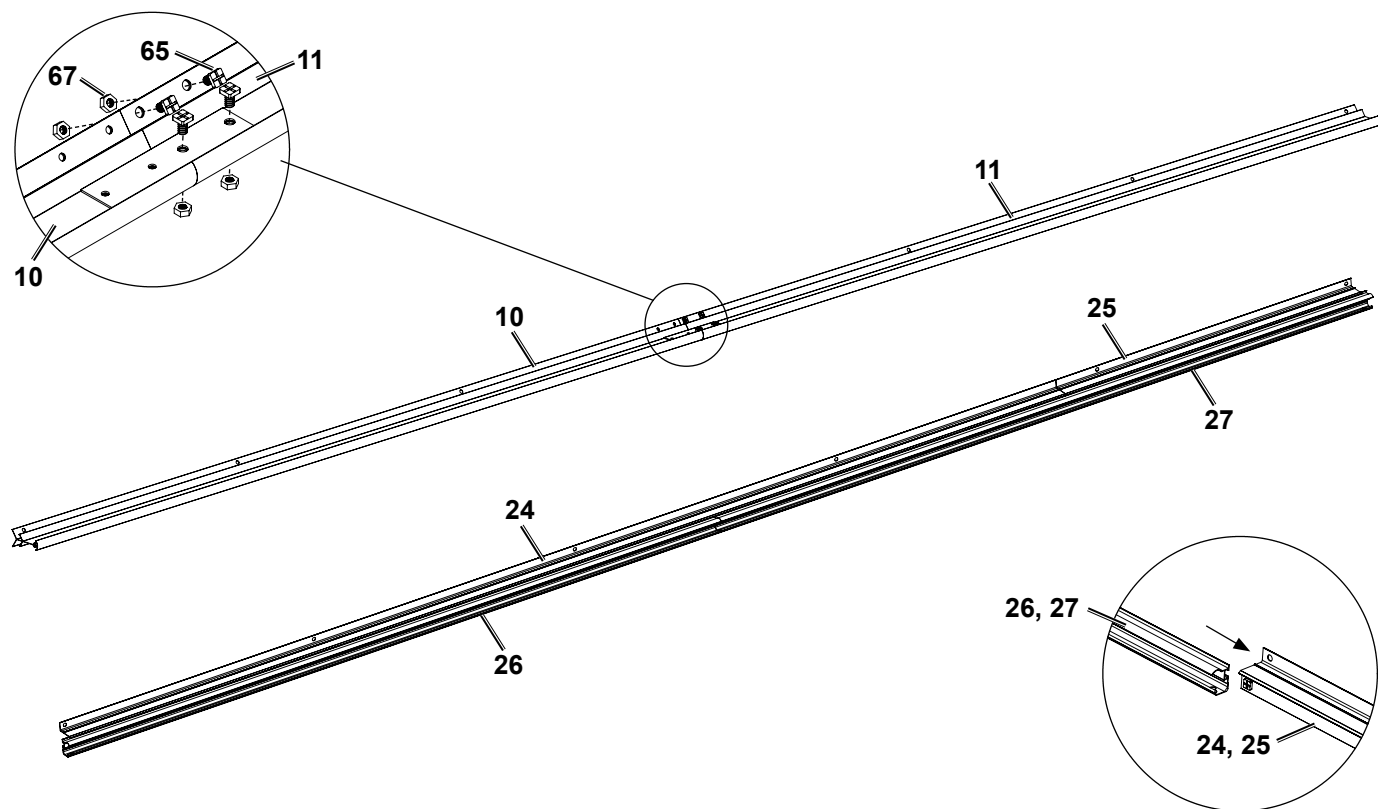


Figure M: Front Frame Assembly

Assembling the Upper Front and Rear Frame

1. Attach PVC Strips (97) to Right and Left Doorway Studs (28, 29).
2. Attach Right and Left Doorway Beams (24, 25) to Corner Gussets (7) using Bolts and Nuts.
3. Attach Upper Studs (20-23) to Right and Left Doorway Beams (24, 25), secure with Bolts and Nuts.
4. Attach Clips (72) to Left and Right Doorway Beams (24, 25) where Front Top Panels (56, 57, 62) will go (one for each side of Panel).
5. Slide Panels (56, 57, 62) into channels of front Corner Posts (7) and Doorway Studs (28, 29) until Clips (72) are attached to Bottom of Panels and Doorway Beams (24, 25).

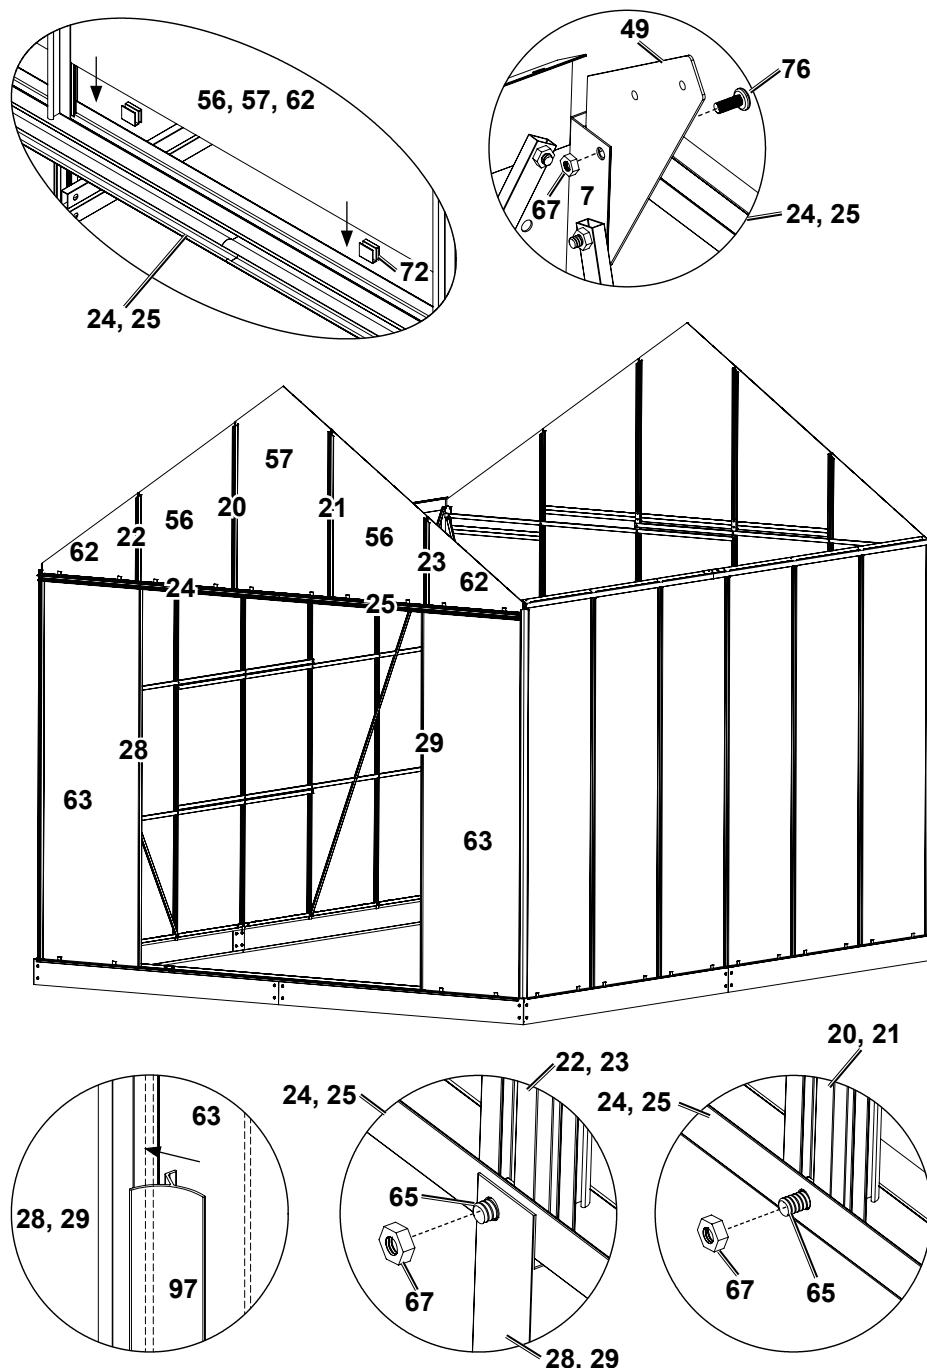


Figure N: Roof Assembly

Installing the Crown Beams

1. Attach Right and Left Crown Beams (8, 9) to Side Ceiling Plates (12, 13) using Bolts and Nuts. Then secure to Corner Gussets (7) (only the top 2 holes) using Corner Bracket Bolts (73).
2. Attach Top Braces (87) to Crown Beams and Upper Rear Studs (16-19) using Bolts and Nuts.

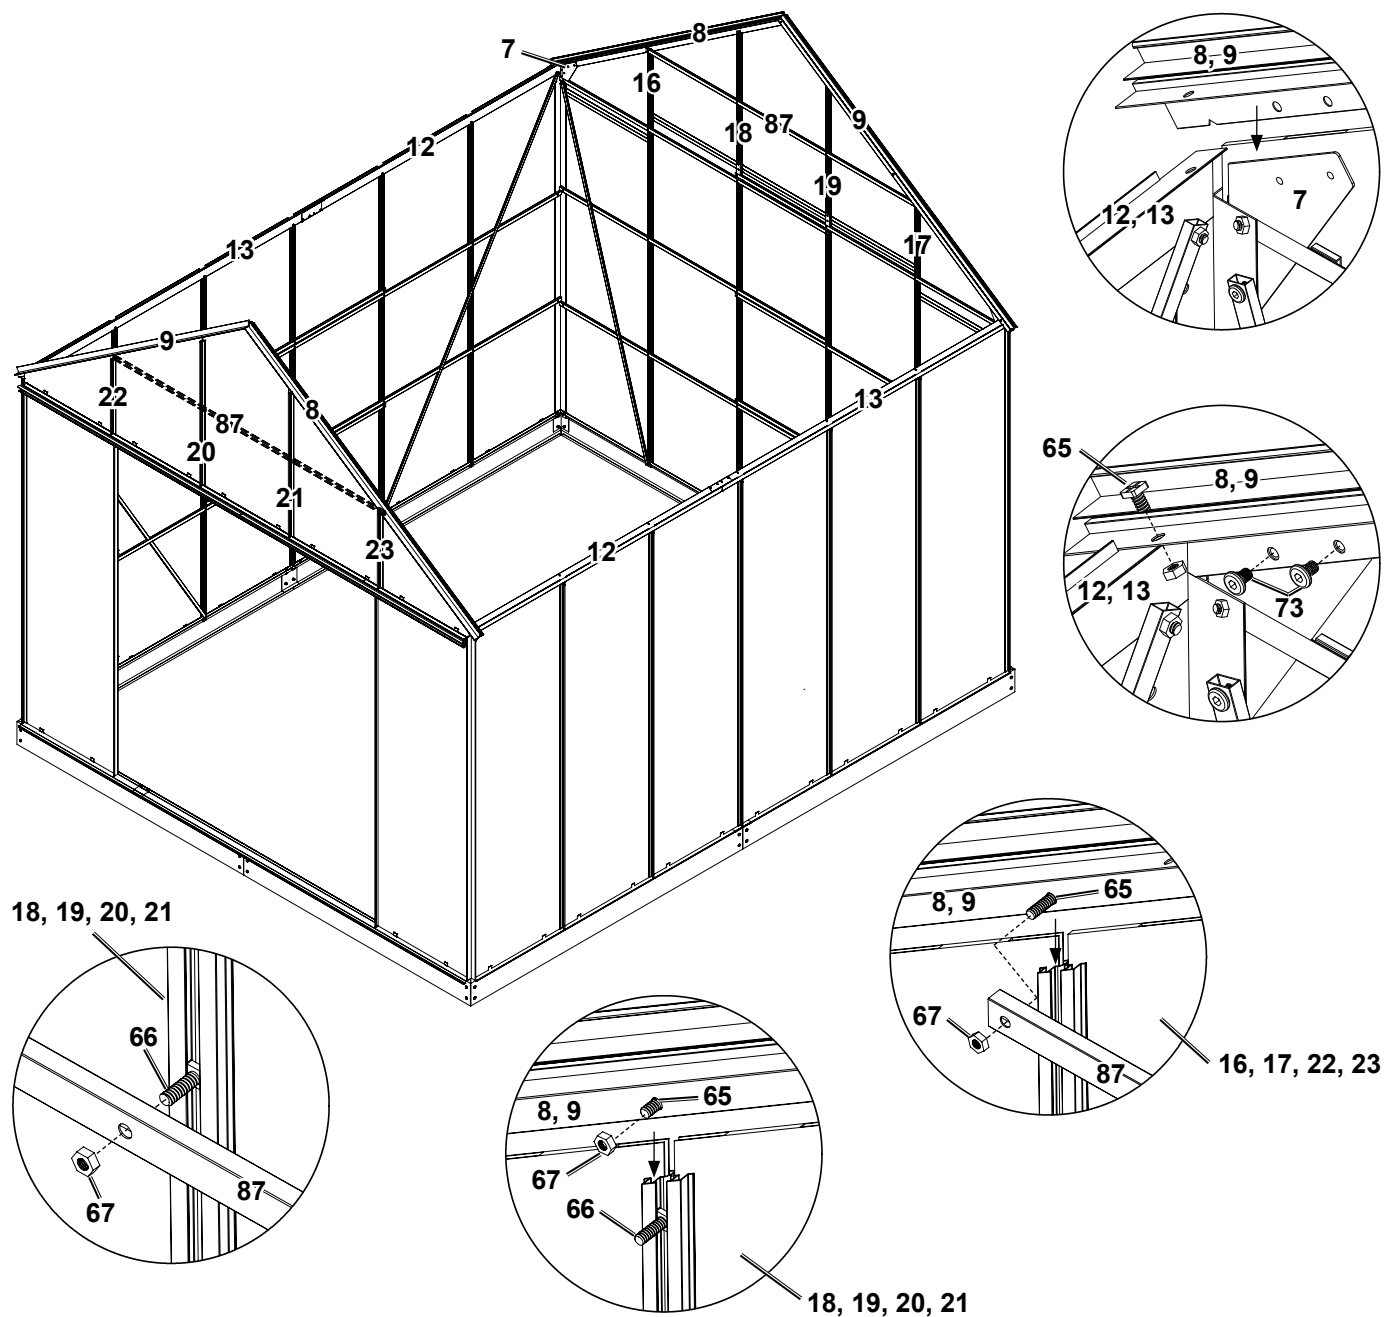


Figure O: Door Assembly

Installing the Crown and Roof Frame

1. Slide Bolts into channel of Roof Studs (15) According to (A, B, C) below, for later use.
2. Attach Roof Studs (15) between the Crown (10, 11) and Side Ceiling Plates (12, 13) using Bolts and Nuts.
3. Attach Crown (10, 11) to Crown Beams (8, 9) using Bolts and Nuts.

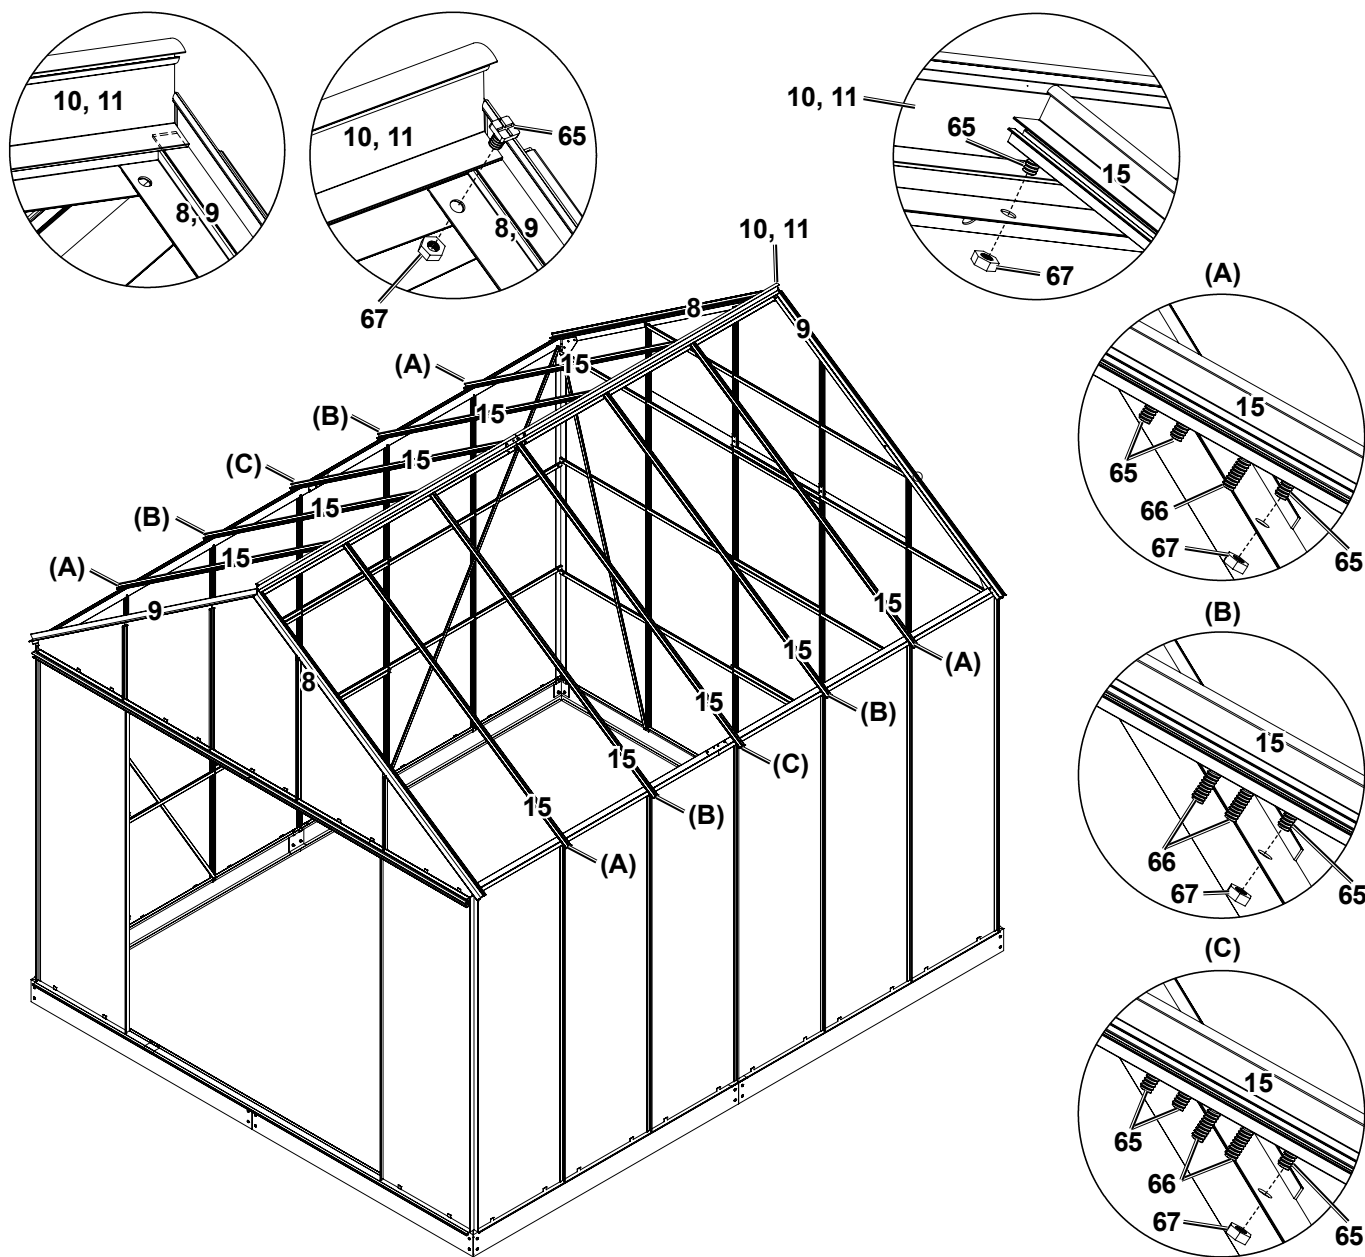


Figure P: Roof Assembly

Assembling the Windows

Follow steps below for each window.

1. Attach Side Window Frames (39) to Top Window Frame (38) with Bolts and Nuts.

2. Insert Bolts into holes at bottom of Side Window Frames, so threads stick out bottom of window.

3. Remove protective film from both sides of Window Panel (61). Slide Window Panel into three sided frame.

Note: Ensure window side covered in white film is facing outwards when installed.

4. Slide bottom Window Frame (40) onto Bolts and Window Panel. Secure in place with Nuts.

5. Attach Window Brace (41) Bottom Window Frame (40) using Window Screws (71).

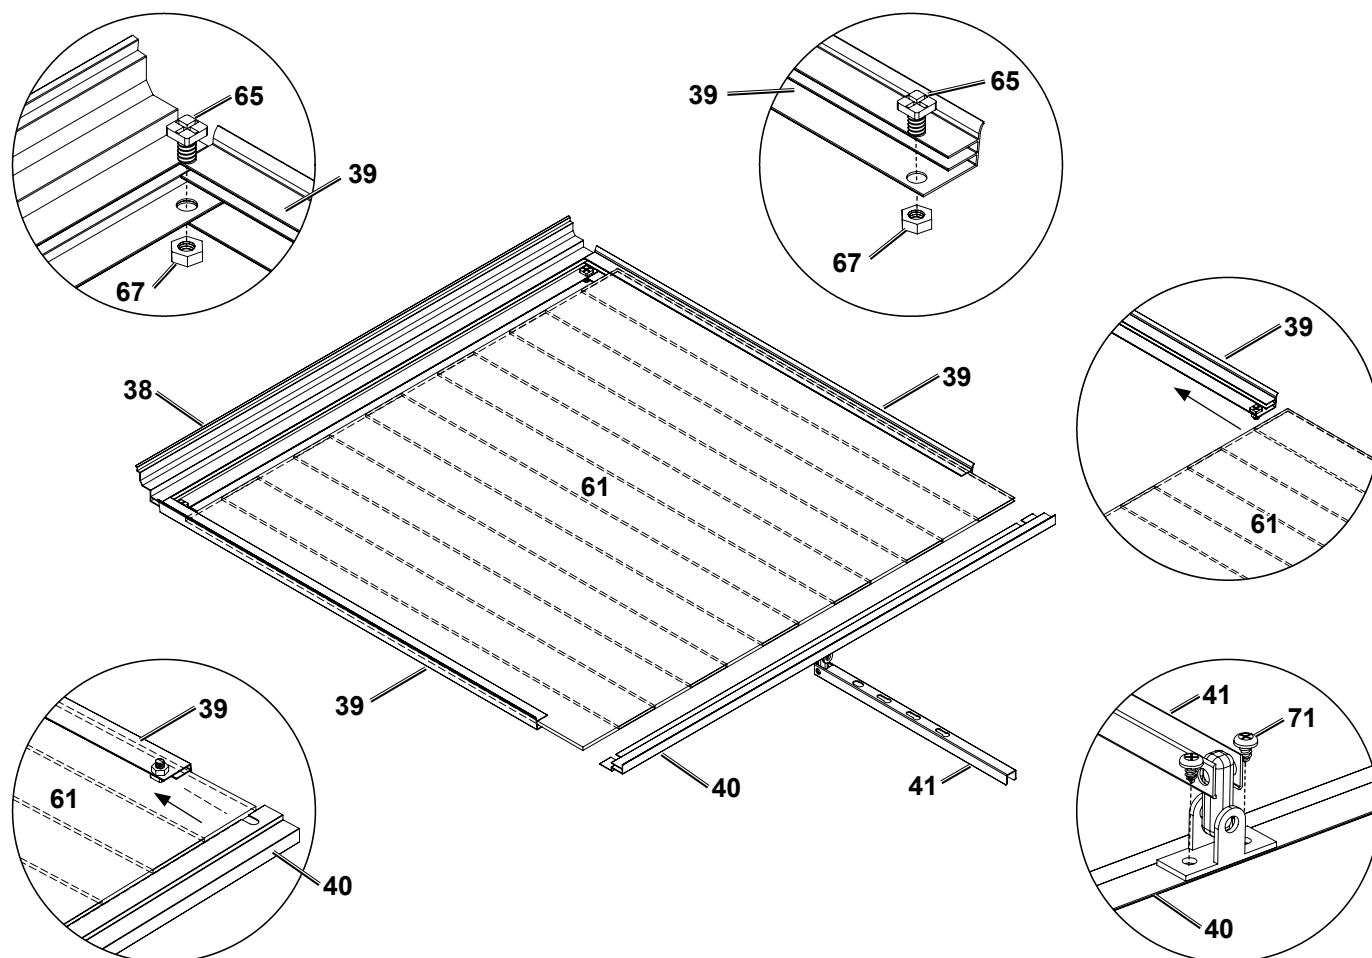


Figure Q: Window Assembly

Assembling the Door

Door is assembled using Door Screws (70).

Screws thread directly into rounded portion of center parts of door.

1. Orientate Side Door Frames (33) so that the two bolt holes nearest to the end are at the top.

Note: Center Door Frames are marked with an arrow that must point towards top of door.

2. Attach Center Door Frames (36) to Side Frames with rounded portion facing front. Attach Door Slider (34) to Top Door Frame (35) using Bolts and Nuts.

3. Attach Bottom Door Frame (37) to Side Door Frame.

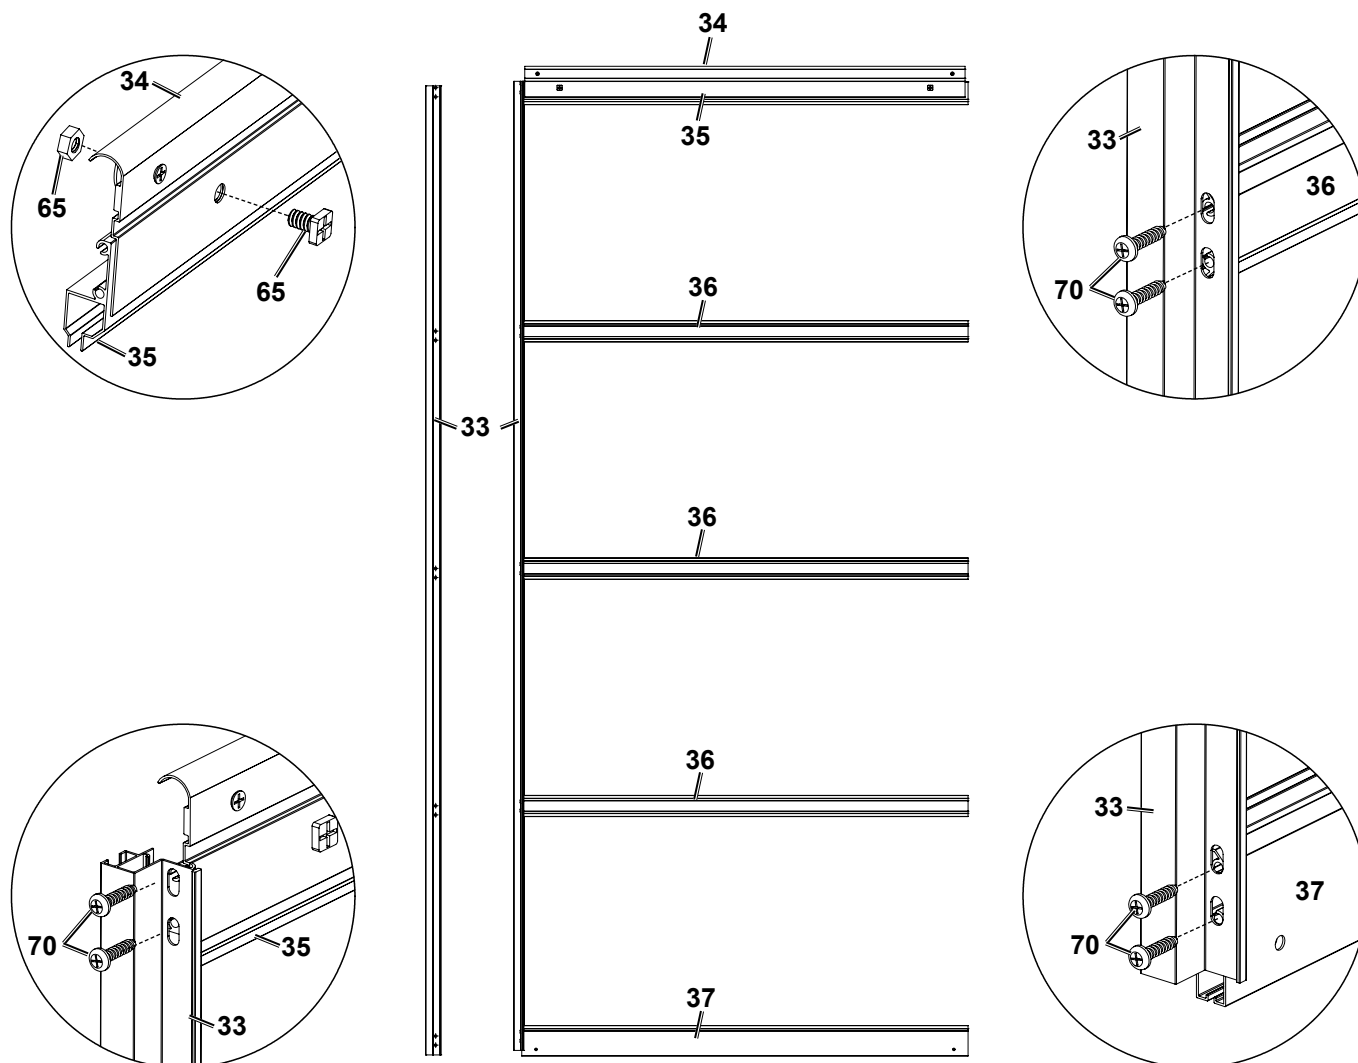


Figure R: Door Frame Assembly

Assembling the Door (continued)

Note: After removing protective film from Door Panels (64), attach warning label to one of the upper panels at eye-level so that it is readable from outside of greenhouse after panel is installed. Install Door Center Panel.

Note: Ensure window side covered in white film is facing outwards when installed.

1. Assemble Door Panels (64) into openings of door. Attach Side Door Frame (33A).
2. Repeat for other door.

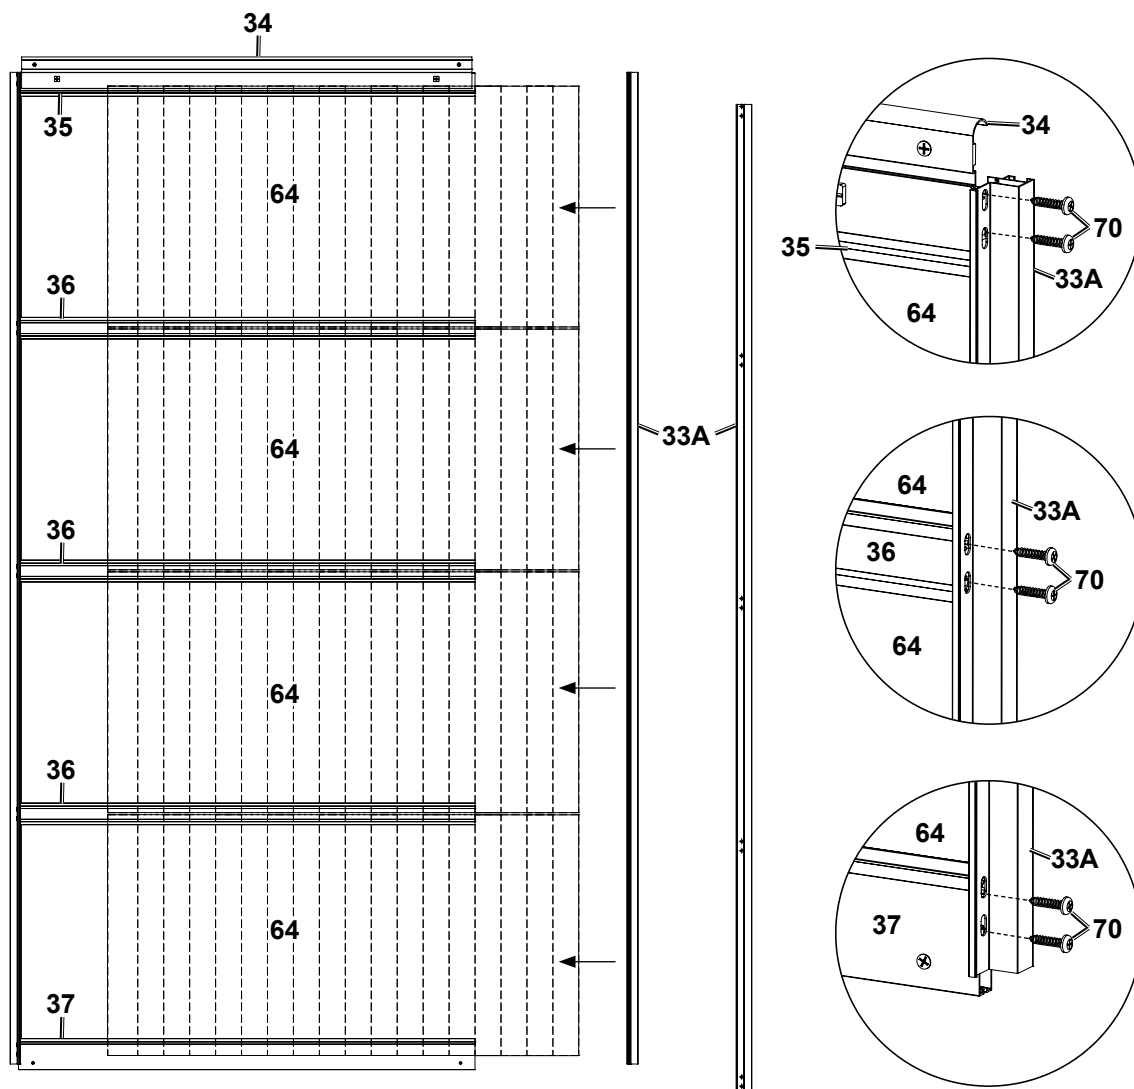


Figure S: Door Panel Install

Installing the Windows

1. Attach Window Support Beam (42) to Roof Studs (15) using Window Brackets (89), secure with Bolts and Nuts.
2. Slide top edge of Top Window Frame (38) of Assembled Window into slot at top of Crown (10, 11). Window Brace (41) should be aligned with bottom of Window Support Beam (42). Slide Window into place over one Window Support Beam and gradually lower into place, repeat for remaining Windows.
3. Loosen Nuts (67) holding Window Support Beams (42) in place and slide Window Support Beams up to touch Windows. Secure in place.

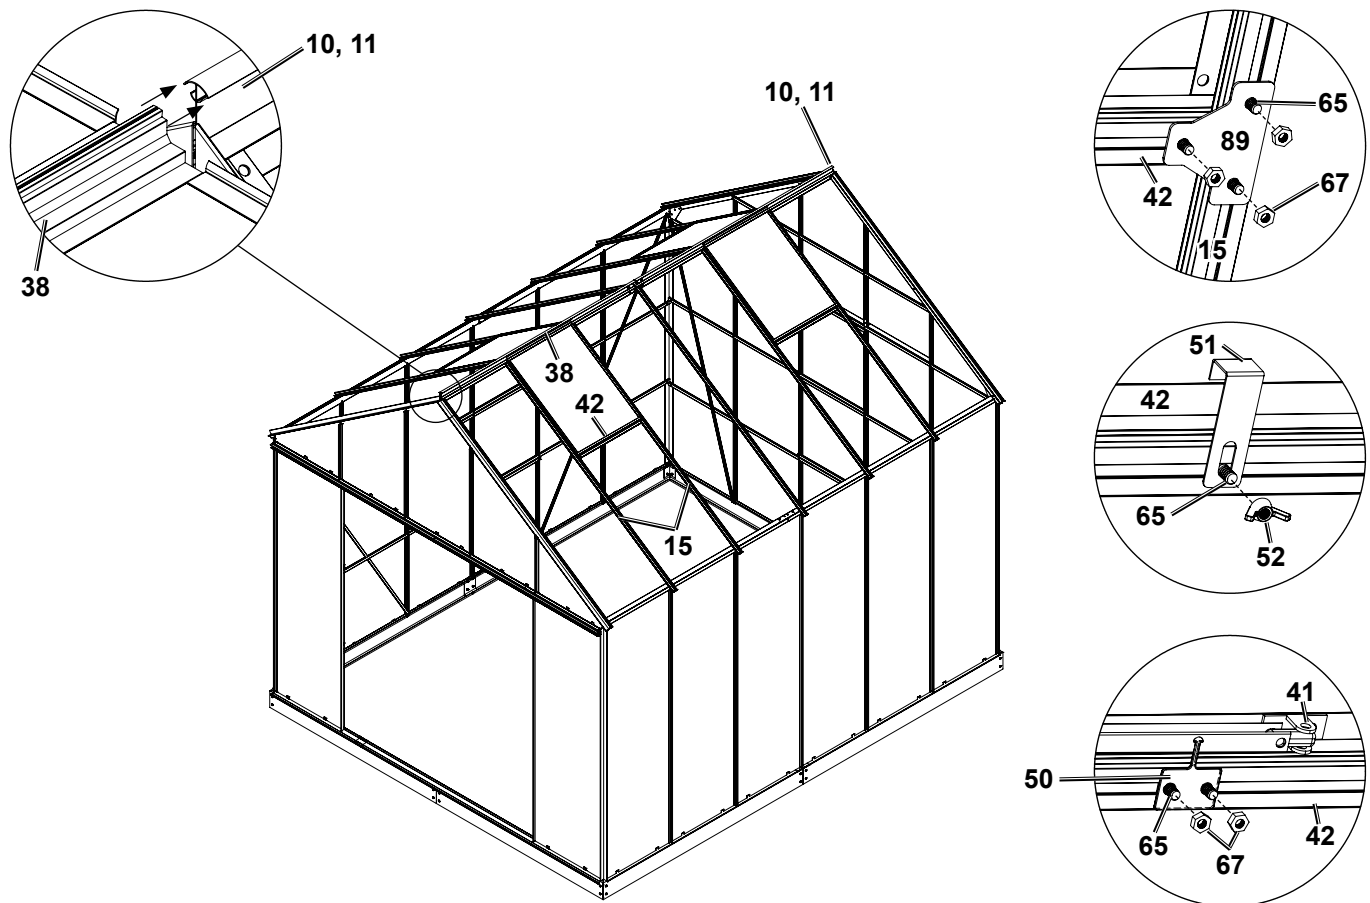


Figure T: Window Install

Installing the Side Braces

Attach Side Braces (30A, 30B) to Roof Studs (15) and Crown Beams (8,9) using Bolts and Nuts.

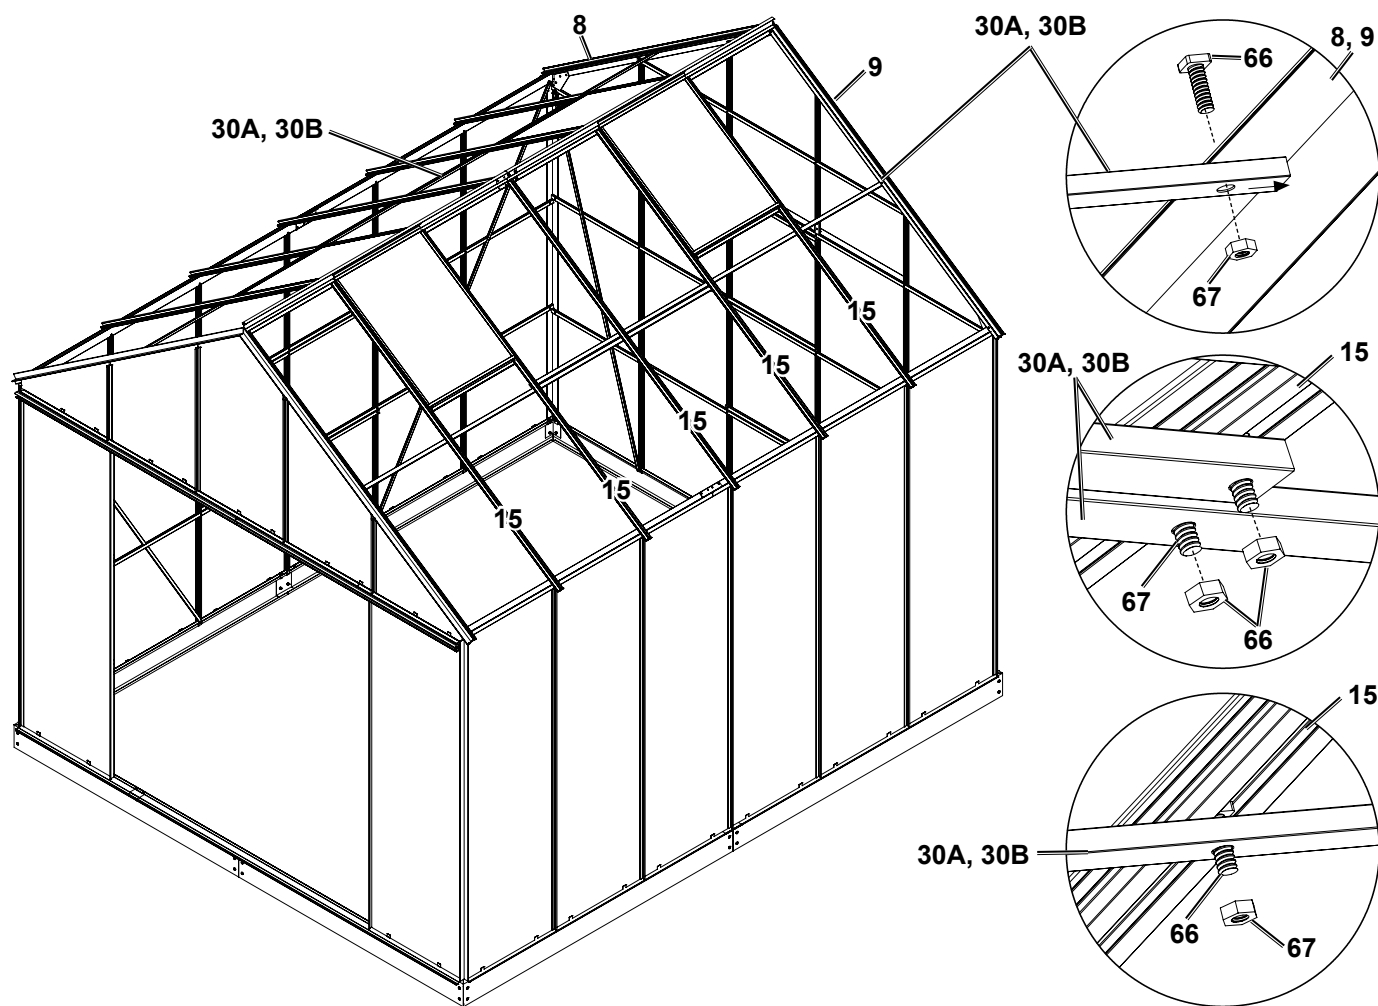


Figure U: Side Brace Install

Installing the Doors and Roof Panels

1. Raise assembled Door Frames up and insert first Roller of Door Slider (34) onto Door Rail (26, 27). Align Bottom Door Frame (37) over edge of Front Floor Plate (1, 2). Slide door over until all rollers are engaged.
2. Once door is installed, install Bolt and Nut into hole on each side of Door Rails (26, 27) to prevent door from sliding off rail.
3. Slide top edge of Roof Panel (59, 60) into channels of Roof Studs (15) and push all the way in. Secure Panels in Place with Trim (83).

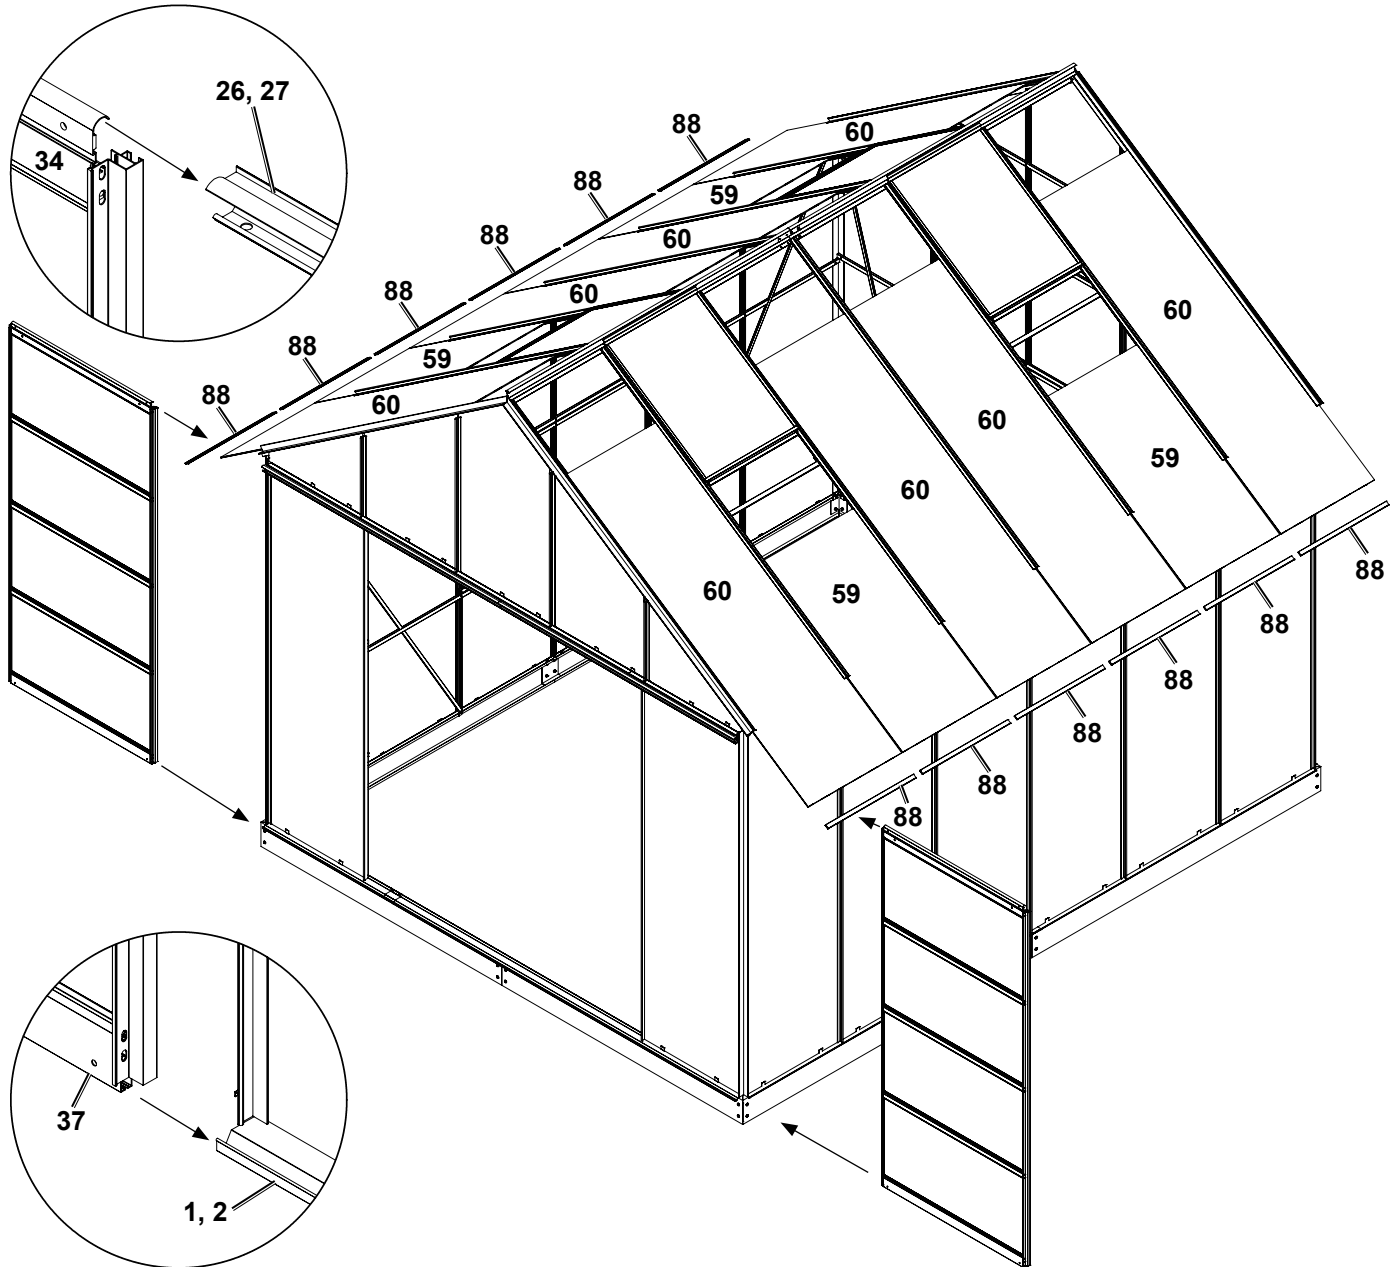


Figure V: Door and Roof Panel Install

Completing the Roof Frame

1. Attach Right and Left Rail End Caps (74, 75) onto Door Rail (26, 27) ends.
2. Insert Peak Cap (54) into Front Peak by sliding it into the gap between the Front Crown Beams (8, 9).
3. Slide Corner Roof Stud Blocks (93) into ends of each Crown Beam. Attach Corner Roof Stud End Caps (90) to Roof Stud Blocks with Block Screws (86).
4. Slide Roof Stud Blocks (92) into ends of each Roof Stud (15). Attach Roof Stud End Caps (91) with Block Screws (86).

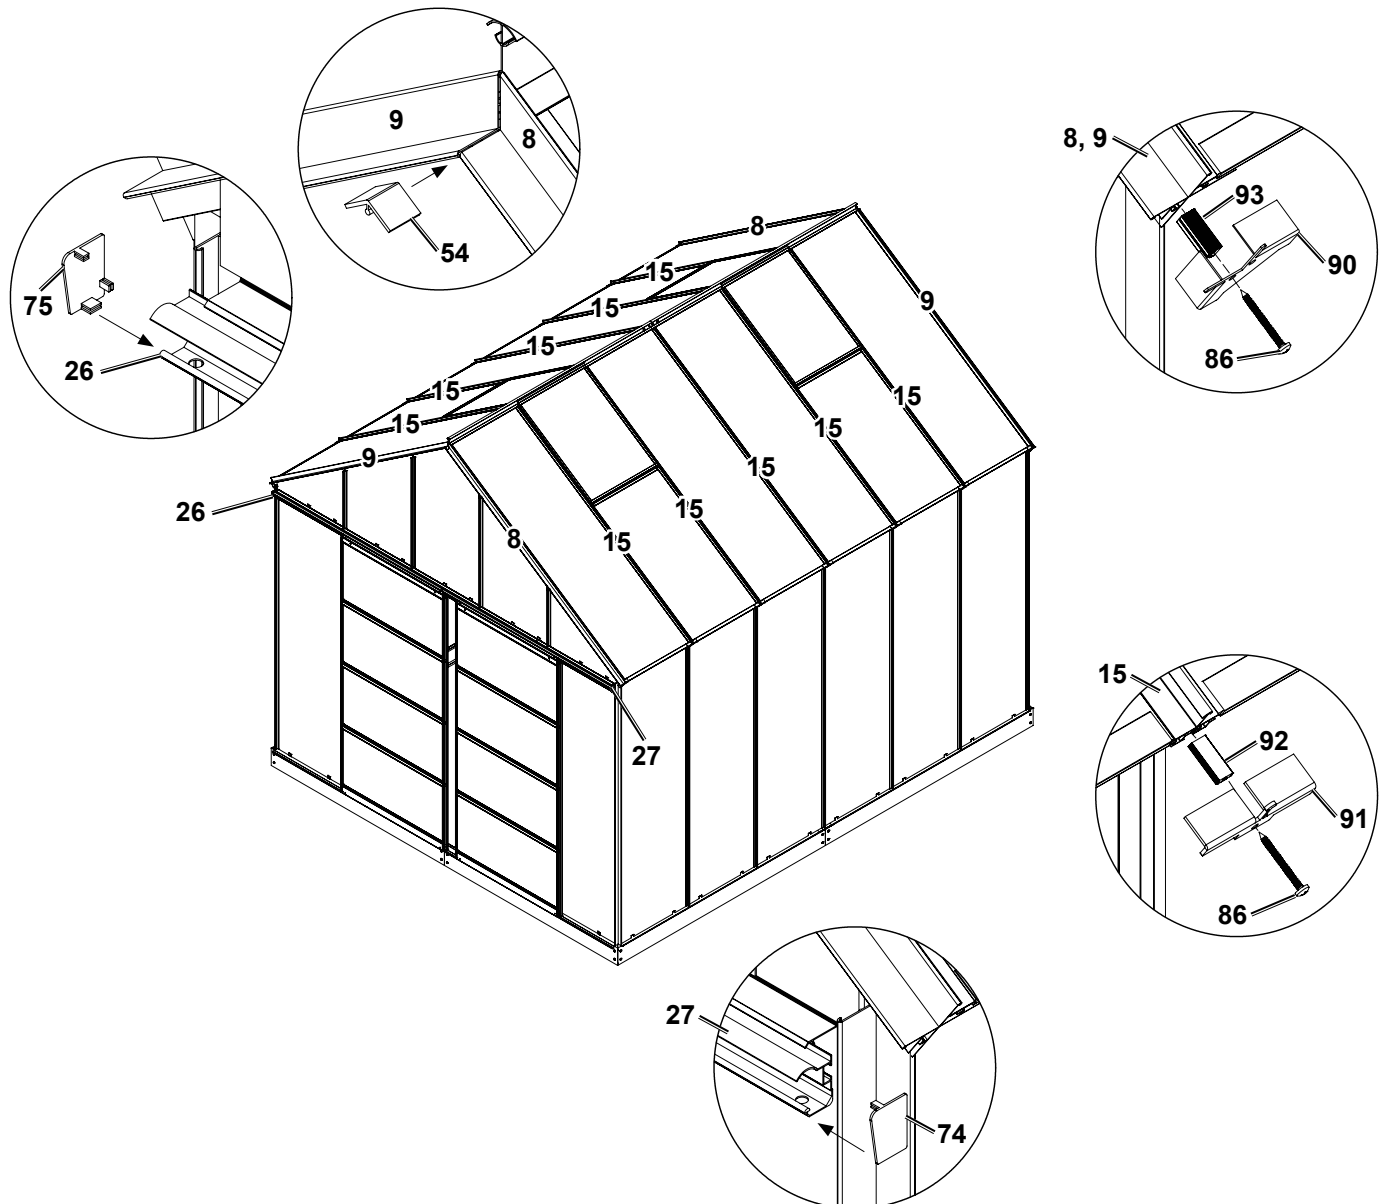


Figure W: Roof Frame Completion

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LISTS IN THIS DOCUMENT AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

Parts List

PART	DESCRIPTION		Q'TY
1	Front-Left Floor Plate		1
2	Front-Right Floor Plate		1
3	Upper Side Floor Plate		2
4	Side Floor Plate		2
5	Rear-Left Floor Plate		1
6	Rear-Right Floor Plate		1
7	Corner Post		4
8	Right-handed Crown Beam		2
9	Left-handed Crown Beam		2
10	Rear Crown with Brackets		1
11	Front Crown		1

PART	DESCRIPTION		Q'TY
12	Side Ceiling Plate with Brackets		2
13	Side Ceiling Plate		2
14	Stud		14
15	Roof Stud		10
16	Rear-left upper Stud		1
17	Rear-right upper Stud		1
18	Rear Center-left upper Stud		1
19	Rear Center-right upper Stud		1
20	Front Center-Left upper Stud		1
21	Front Center-Right upper Stud		1
22	Front-Left upper Stud		1
23	Front-Right upper Stud		1
24	Left Doorway Beam		1
25	Right Doorway Beam		1




SAFETY




BASE




FRAME

MAINTENANCE

PART	DESCRIPTION		Q'TY
26	Left Door Rail		1
27	Right Door Rail		1
28	Left Doorway Stud		1
29	Right Doorway Stud		1
30A	Side Brace		12
30B	Side Brace		12
31	Rear Brace		6
32	Front Brace		4
33	Side Door Frame		2
33A	Side Door Frame		2
34	Door Slider		2
35	Top Door Frame		2
36	Center Door Frame		6
37	Bottom Door Frame		2
38	Top Window Frame		4
39	Side Window Frame		8
40	Bottom Window Frame		4
41	Window Brace		4
42	Window Support Beam		4
43	Side Base Plate		4
44	Front/Rear Base Plate		4

PART	DESCRIPTION		Q'TY
45	Base Plate Corner Connector		4
46	Base Plate End Connector		4
47	Hold-down Connector		24
48	Stud Connector		4
49	Corner Bracket		4
50	Window Stop		4
51	Window Hook		4
52	Window Hook Bolt		4
54	Peak Cap		2
55	Rear Side Panel		2
56	Front Top Panel		2
56A	Rear Top Panel		2
57	Front Center Panel		1
57A	Rear Center Panel		1
58	Wall Panel		15
59	Roof Window Panel		4
60	Roof Panel		10
61	Window Panel		4
62	Front Corner Panel		2
63	Front Side Panel		2
64	Door Panel		8
65	Bolt M6x10mm		151

PART	DESCRIPTION		Q'TY
66	Brace Bolt M6x18mm		154
67	Nut		307
68	Base Bolt		32
69	Base Nut		32
70	Door Screw		40
71	Window Screw		8
72	Clip		48
73	Corner Bracket Bolt M6x10mm		10
74	Right Rail End Cap		1
75	Left Rail End Cap		1
76	Corner Bracket Bolt M6x15mm		4
77	Corner Bracket Bolt M6x25mm		2
78	Double Brace Bolt M6x28mm		4
79	Front/Rear Diagonal Strut		4
80A	Side Diagonal Strut		4

PART	DESCRIPTION		Q'TY
80B	Side Diagonal Strut		4
86	Stick Screw		14
87	Top Brace		2
88	Polycarbonate Trim		12
89	Window Bracket		8
90	Corner Roof Stud End Cap		4
91	Roof Stud End Cap		10
92	Roof Stud Stick		10
93	Corner Roof Stud Stick		4
94	Rear Panel Junction		5
95	Side Brace Connector		12
96	Side Diagonal Strut Connector		4
97	PVC Strip		2
98	Bushing		4

SAFETY

BASE

FRAME

MAINTENANCE

Record Product's Serial Number Here: _____

Note: If product has no serial number, record month and year of purchase instead.

Note: Replacement parts may be available for this item.

Visit harborfreight.com/parts for a list of in stock parts. Reference UPC193175557056.

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.



26677 Agoura Road • Calabasas, CA 91302 • 1-800-444-3353