

Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual near the assembly diagram (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

21a

BRAUN™

LED NECK LIGHT



Visit our website at: <http://www.harborfreight.com>
Email our technical support at: productsupport@harborfreight.com

58043

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-888-866-5797 as soon as possible.

Copyright© 2021 by Harbor Freight Tools®. All rights reserved.

No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

⚠WARNING

Read this material before using this product. Failure to do so can result in serious injury. **SAVE THIS MANUAL.**

Specifications

Battery Type	Rechargeable Li-ion
Battery Rating	3.7V / 1200mAh
Charge Time	3 hours

IMPORTANT SAFETY INFORMATION

⚠ WARNING

To prevent serious injury, FIRE, and EXPLOSION:

1. Keep dry. Do not open, drop, short-circuit, incinerate, expose to temperatures higher than 140° F, or charge/use if damaged.
2. Do not submerge Light.
3. Do not operate in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
4. Do not charge for longer than 3 hours. Overcharging will cause overheating and shorten battery life.
5. People with pacemakers should consult their physician(s) before use. Electromagnetic fields in close proximity to heart pacemaker could cause pacemaker interference or pacemaker failure.
6. Not a toy. Keep out of reach of children.

Lithium Battery Safety Warnings



**LITHIUM BATTERIES STORE
A LARGE AMOUNT OF ENERGY AND
WILL VENT FIRE OR EXPLODE IF MISTREATED:**




1. Keep Work Light dry.
2. **DO NOT DO ANY OF THE FOLLOWING TO THE BATTERY PACK:**
 - a. **Open,**
 - b. **Drop,**
 - c. **Short-circuit,**
 - d. **Puncture,**
 - e. **Incinerate, or**
 - f. **Expose to temperatures greater than 140°F.**
3. Charge Work Light only according to these instructions.

Charging Instructions



Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this document including all text under subheadings therein before set up or use of this product.

1. Insert the end of the Charging Cable into the Charging Jack, located on the back of the Neck Light, under a cover.

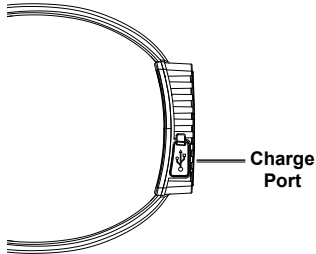


3. The Charging Indicator will light up Red during charging. After approximately 3 hours the Charging Indicator turns Green, indicating the Neck Light is charged and ready for use. Unplug the Charging Cable.

NOTICE: Do not leave the Battery in a discharged state. Charge the Battery once per month if the Neck Light is not in use. This will keep the Battery from wearing down and add to its life. Do not charge the Neck Light for more than 3 hours. Overcharging will cause overheating and shorten battery life. Do not charge the Neck Light at temperatures below -4° F.

2. Plug Charging Cable into a powered USB port.

Battery Removal

1. Remove 4 screws from battery cover, located underneath the Charge Port.

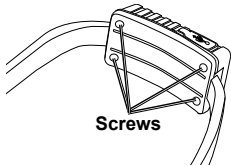

2. Remove battery cover.
3. Clip the wires connecting the battery to compartment housing.
4. Remove the old battery.
5. Li-Ion BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY. Do not short, incinerate or open battery.

Operation Instructions



Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this document including all text under subheadings therein before set up or use of this product.

NOTE: Before using Neck Light for the first time, fully charge the Battery.

1. Press the Power Button once to turn on the light.
2. Press and hold the Button to switch to economy mode.

3. Press the Button again to turn the light off.
4. When finished using the Neck Light, store indoors away from children.

Note: If the light will not turn on, check that the Battery Cap is tight. The Button may need to be pressed forcefully to turn the light on.

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Record Product's Serial Number Here: _____

Note: If product has no serial number, record month and year of purchase instead.

Note: Replacement parts are not available for this item. Reference UPC 193175431127.

BRAUN™

26541 Agoura Road • Calabasas, CA 91302 • 1-888-866-5797