## **Owner's Manual & Safety Instructions**

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

221



improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

Total Combined Weight Capacity (Evenly distributed from bottom up.)	1200 lb
Drawer Slide Capacity (per connected pair of slides)	100 lb



## **IMPORTANT SAFETY INFORMATION**

### **Assembly Precautions**

- 1. Assemble only according to these instructions. Improper assembly can create hazards.
- 2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
- 3. Keep assembly area clean and well lit.
- 4. Keep bystanders out of the area during assembly.

## **Use Precautions**

- 1. DO NOT HAVE MORE THAN ONE DRAWER OPEN AT A TIME.
- 2. DO NOT SIT, STAND OR CLIMB ON THIS ITEM. DO NOT STEP IN OR ON DRAWERS.
- 3. Do not allow children to play with or near this item. This item is NOT children's furniture.
- Do not exceed 1200 lb weight capacity. Do not exceed drawer weight capacity, 100 lb per connected pair of slides Evenly distribute load from bottom up. Uneven loading causes tipping. Be aware of dynamic loading! Sudden load movement may briefly create excess load causing tipping.
- 5. Close and lock drawers before moving. Do not pull, push to move.
- Use only on a flat, level, hard and smooth surface capable of safely supporting a fully loaded unit. Use care when rolling over concrete seams.

- 5. Do not assemble when tired or when under the influence of alcohol, drugs or medication.
- 6. Weight capacity and other product capabilities apply to properly and completely assembled product only.
- 7. Assemble on a flat, level, hard and smooth surface capable of safely supporting a fully loaded Cabinet.
- Do not lift using handle(s). Do not lift while loaded.
- 8. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
- 9. Lock Swivel Casters after moving.
- 10. Do not mount on truck bed or any other moving object.
- 11. Use as intended only.
- Inspect before every use; do not use if parts are loose or damaged.
- Maintain product labels and nameplates. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.
- 14. Read instruction manual before assembly and/or use.


# U.S. GENERAL


#### Assembly Instructions



Read the <u>ENTIRE</u> IMPORTANT SAFETY INFORMATION section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

- 1. Assemble on a flat, level, hard and smooth surface capable of safely supporting a fully loaded Cabinet.
- 3. Attach two Locking Swivel Casters (9) using four Caster Bolt Sets (10).
- 2. Attach Side Handle (8) to either side of Cabinet using Handle Bolts (7).

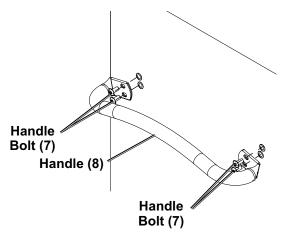

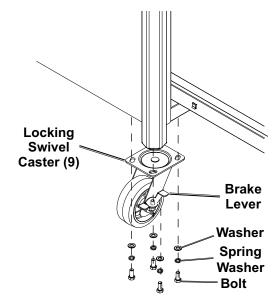

- 4. Lock the Casters by depressing the brake levers.
- 5. If using Top Chest, assemble according to its Owner's Manual.

#### **Operation Instructions**



Read the <u>ENTIRE</u> IMPORTANT SAFETY INFORMATION section at the beginning of this document including all text under subheadings therein before set up or use of this product.

- 1. Empty all Drawers.
- 2. Close all Drawers and lock them.
- 3. Unlock Swivel Casters.
- 4. To prevent tipping, move using supplied handle.
- 5. Roll Cabinet to a flat, level, hard and smooth surface capable of safely supporting a fully loaded Cabinet. Do not roll Cabinet over concrete seams or other rough/uneven surfaces.
- 6. Lock Swivel Casters.
- 7. Unlock Drawers and fill Cabinet evenly, from bottom to top. Do not exceed weight capacities.

#### Maintenance and Servicing



Procedures not specifically explained in this manual must be performed only by a qualified technician.

## **AWARNING**

TO PREVENT SERIOUS INJURY FROM TOOL FAILURE: Do not use damaged equipment. If any part becomes damaged, have the problem corrected before further use.

- 1. **PERIODICALLY,** inspect the general condition of the Cabinet. Check for:
  - · loose hardware,
  - misalignment or binding of parts,
  - · brake operation,
  - · caster swivel function and movement,
  - · cracked or broken parts,
  - any other condition that may affect its safe operation.

- 2. Wipe external surfaces of the Cabinet with clean cloth.
- 3. Lubricate Drawer Slides as needed.

## PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

#### Parts List and Diagram

## Parts List

Part	Description	Qty
1	Rubber Cover	1
2	Rubber Ring	1
3	Steel Cover	2
4	Bolt M6 x 20	1
5	Nut M6	1
6	Buffer	2
7	Handle Bolt	4
8	Side Handle	1
9	Locking Swivel Caster	4
10	Caster Bolt Set	16 + 1
11	Nut M8 for Gas Strut	4

Part	Description	Qty
12	Gas Strut	2
13	Top Tray Liner	1
14	Bumper Screw	4
15	Bumper	4
16	Lock	1
17	Drawer Liner	6
18	Small Drawer with Slide	5
19	Hook for Drawer	6
20	Big Drawer with Two Slides	1
21	Drawer Trim	6
22	Ball Bearing Slide	7


#### Record Serial Number Here:\_

Note: If product has no serial number, record month and year of purchase instead.

<u>Note:</u> Some parts are listed and shown for illustration purposes only, and are not available individually as replacement parts. Parts may not be interchangeable.

Specify UPC number when ordering: Red: 58073 UPC 193175472731 Black: 57517 UPC 193175450760 Green: 58071 UPC 193175450104 Orange: 58744 UPC 193175450128 Yellow: 58743 UPC 193175450135

Blue: 58072 UPC 193175450098

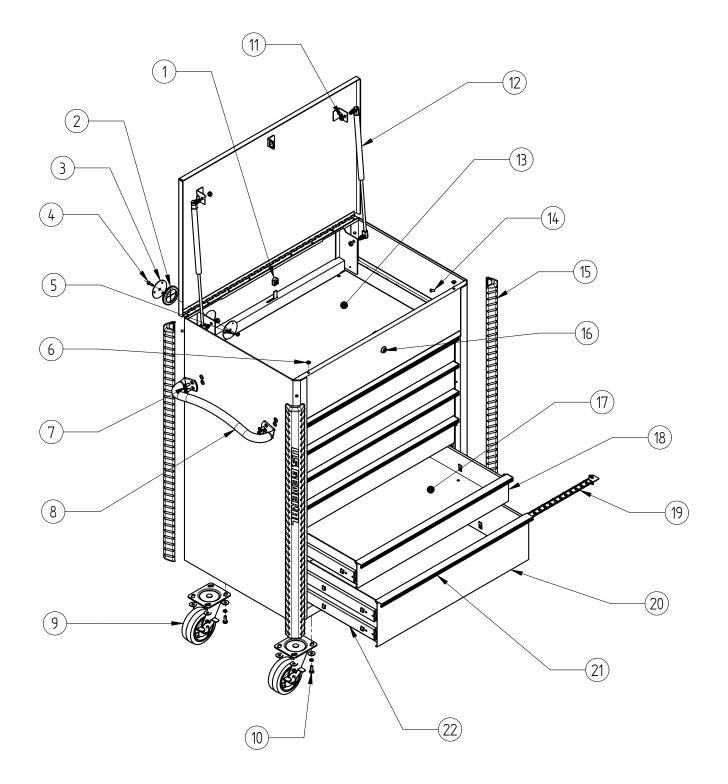

#### Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.



26677 Agoura Road • Calabasas, CA 91302 • 1-888-866-5797