

PITTSBURGH®

Magnetic Laser Level with 3 Vials

20110



INSTRUCTIONS AND PRECAUTIONS

Visit our website at:
<http://www.harborfreight.com>

⚠ WARNING

Read this material before using this product. Failure to do so can result in serious injury. SAVE THIS MANUAL.

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-888-866-5797 as soon as possible.

Copyright© 2011 by Harbor Freight Tools®. All rights reserved. No portion of this document or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this document may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

For technical questions,
please call 1-888-866-5797.

Specifications

Range	up to 20'
Batteries	2 x 'AAA'

PITTSBURGH

AVOID EXPOSURE. Laser light is emitted from this opening.

CAUTION



LASER LIGHT
DO NOT STARE INTO BEAM


Max. Output: 3 - 5 mW,
Wavelength: 635 - 670 nm

CLASS II LASER PRODUCT

This product complies with
21 CFR 1040.10 and 1040.11
Distributed by Harbor Freight Tools
3491 Mission Oaks Blvd.
Camdenillo, CA 93011 87800
Manufacture Date: _____

Important Safety Information

1. Never attach or use any other form of optical device with this product. Use as intended only.
2. Do not modify in any way as this may result in hazardous radiation exposure.
3. This product is not a toy. Do not allow children to play with or near this item.
4. Inspect before every use; do not use if parts are loose or damaged.
5. Maintain product labels and nameplates. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.
6. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Position batteries in proper polarity. Do not use swollen or leaking batteries.
7. People with pacemakers should consult their physician(s) before use. Electromagnetic fields in close proximity to heart pacemaker could cause pacemaker interference or pacemaker failure.

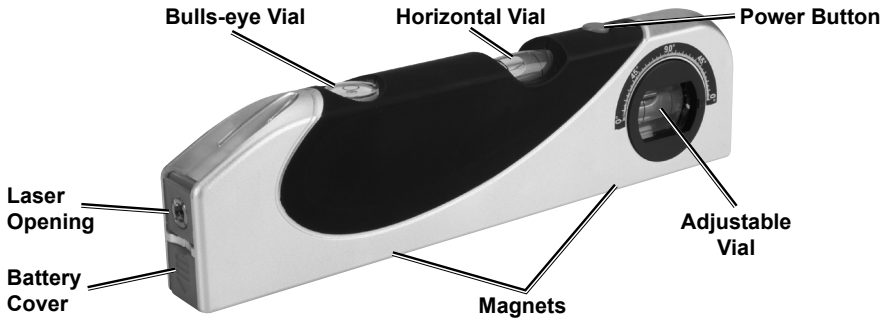

Instructions



Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this document before set up or use of this product.

1. The **Power Button** switches on the laser. Point the Laser Opening away from your eyes before turning on. This laser produces a cross beam. Turn off after use for safety and to extend battery life.
2. The **Vials** are used to determine if the level is leveled. If the bubble is centered within the lines, it is level. The Adjustable Vial can be turned to check a certain angle.
3. The **Magnets** are used to mount the level to a ferrous (iron-containing) metal surface.

Battery Replacement

Before first use or if laser appears dim, replace the batteries:

1. Push the Battery Cover down and allow it to swing open.
2. Remove the old Batteries. Dispose of them properly or recharge if rechargeable.
3. Insert two 'AAA' batteries with the negative (flat) ends first. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Position batteries in proper polarity. Do not use swollen or leaking batteries.
4. Swing the Battery Cover closed and push it up to lock it in place.

Record Serial Number Here:

Note: If product has no serial number, record month and year of purchase instead.

Note: Replacement parts are not available for this item.

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.