Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual near the assembly diagram (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

23a



Total Combined Weight Capacity (Evenly distributed from bottom up.)

1200 lb

IMPORTANT SAFETY INFORMATION

Assembly Precautions

- 1. Assemble only according to these instructions. Improper assembly can create hazards.
- 2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
- 3. Keep assembly area clean and well lit.
- 4. Keep bystanders out of the area during assembly.
- 5. Do not assemble when tired or when under the influence of alcohol, drugs or medication.
- 6. Weight capacity and other product capabilities apply to properly and completely assembled product only.
- 7. Assemble on a flat, level, hard and smooth surface capable of safely supporting loaded Workbench.

TO PREVENT SERIOUS INJURY AND DEATH FROM TIPPING:

- 1. DO NOT OPEN MORE THAN ONE DRAWER AT ONCE. This storage Workbench cannot prevent multiple drawers from opening.
- 2. LOAD FROM BOTTOM UP ONLY.
- 3. DO NOT SIT, STAND OR CLIMB ON THIS ITEM.
- This product is not a toy nor a toy chest. Do not allow children to play with or near this item.
- 5. Do not use as furniture.
- 6. Do not use for food preparation.
- Do not exceed weight capacities, evenly distributed from bottom up.
 Be aware of dynamic loading! Sudden load movement may briefly create excess load causing product failure.
- 8. Empty, close, and lock Drawers before moving.

- Use only on a flat, level, hard and smooth surface capable of safely supporting a fully loaded Workbench.
 Do not roll Workbench over concrete seams or other rough/uneven surfaces.
- Do not lift using handle(s).
 Do not move or lift while loaded.
- 11. Lock Swivel Casters after moving.
- 12. Do not mount on truck bed or any other moving object.
- 13. Use as intended only.
- Inspect before every use; do not use if parts are loose or damaged.
- 15. Maintain product labels and nameplates. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.




Assembly Instructions




Read the <u>ENTIRE</u> IMPORTANT SAFETY INFORMATION section at the beginning of this document including all text under subheadings therein before set up or use of this product.

- 1. Assemble on a flat, level, hard and smooth surface capable of safely supporting a fully loaded Workbench.
- 2. Attach Side Handle (B) to either side of Workbench using four Bolts (BB) using Wrench (CC).

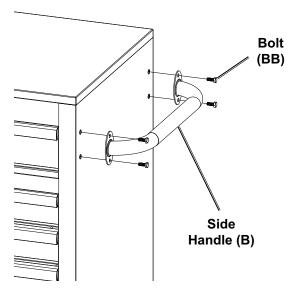

 Attach two Locking Swivel Casters (C) to the same side as Handle using eight Bolts (AA), Lock Washers (DD) and Flat Washers (EE).

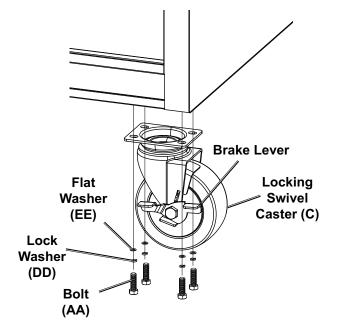

- Attach two Fixed Casters (D) to the other side using eight Bolts (AA), Lock Washers (DD) and Flat Washers (EE).
- 5. Lock the Swivel Casters by depressing the brake levers.



Operation Instructions



Read the <u>ENTIRE</u> IMPORTANT SAFETY INFORMATION section at the beginning of this document including all text under subheadings therein before set up or use of this product.

- 1. Empty all Drawers.
- 2. Close all Drawers and lock them.
- 3. Unlock Swivel Casters.

- 4. Roll Workbench to a flat, level, hard and smooth surface capable of safely supporting a fully loaded Workbench. Do not roll Workbench over concrete seams or other rough/uneven surfaces.
- 5. Lock Swivel Casters.
- 6. Unlock Drawers and fill Workbench evenly, from bottom to top. Do not exceed weight capacities.

Maintenance and Servicing



Procedures not specifically explained in this manual must be performed only by a qualified technician.

TO PREVENT SERIOUS INJURY FROM TOOL FAILURE: Do not use damaged equipment. If any part becomes damaged, have the problem corrected before further use.

- 1. **PERIODICALLY**, inspect the general condition of the Workbench. Check for:
 - loose hardware,
 - misalignment or binding of moving parts,
 - brake operation,
 - caster swivel function and movement,
 - cracked or broken parts,
 - any other condition that may affect its safe operation.

- 2. Wipe external surfaces of the Workbench with clean cloth.
- 3. Lubricate Drawer Slides as needed.

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS DOCUMENT AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

Parts List and Diagram

Parts List

Part	Description	Qty
A	Workbench	1
В	Side Handle	1
С	Locking Swivel Caster	2
D	Fixed Caster	2
E	Wood Top	1


Part	Description	Qty
AA	M8 X 25 Bolt	16
BB	M6 X 16 Bolt	4
CC	Wrench	1
DD	8.5mm Lock Washer	16
EE	16 x 8 x 1.5 Flat Washer	16

Record Serial Number Here:____

<u>Note:</u> If product has no serial number, record month and year of purchase instead.

<u>Note:</u> Some parts are listed and shown for illustration purposes only, and are not available individually as replacement parts. Parts may not be interchangeable. Specify UPC number when ordering:

Black (56613): 792363566131 White (57439): 792363574396 Blue (57440): 792363574402 Red (57805): 193175422521

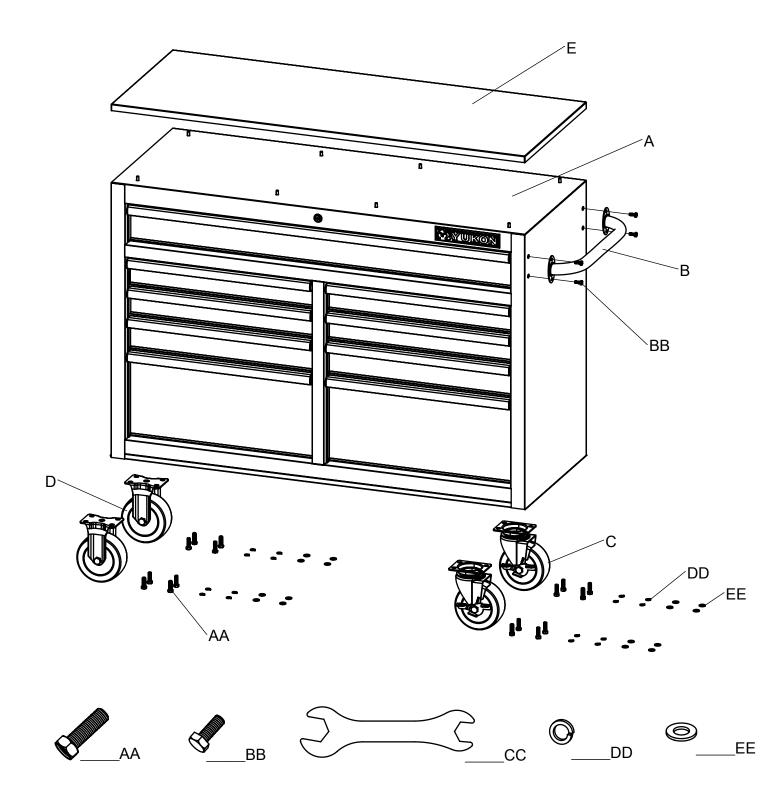

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.



26677 Agoura Road • Calabasas, CA 91302 • 1-888-866-5797