Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual near the assembly diagram (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.



Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

SAVE THIS MANUAL.

23e

Use Precautions

TO PREVENT SERIOUS INJURY AND DEATH FROM TIPPING:

- 1. Do not have more than one drawer open at a time.
- 2. DO NOT SIT, STAND OR CLIMB ON THIS ITEM. DO NOT STEP IN OR ON DRAWERS.
- 3. Do not allow children to play with or near this item. This item is NOT children's furniture.
- Do not exceed drawer weight capacity, 120 lb per connected pair of slides. Evenly distribute load from bottom up. Uneven loading causes tipping. Be aware of dynamic loading! Sudden load movement may briefly create excess load causing tipping.
- 5. Close and lock drawers before moving. Do not pull, push to move.
- 6. Center securely within lip on top of cabinet.

- 7. Place on top of matching cabinet only.
- 8. Have assistant help place on cabinet.
- 9. Do not lift while loaded.
- 10. Close lid when not in use. Lid must be open for drawers to be unlocked.
- 11. Use as intended only.
- Inspect before every use; do not use if parts are loose or damaged.
- Maintain product labels and nameplates. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.



Drawer Capacity (per pair of slides)

120 lb

Operation Instructions



Read the ENTIRE IMPORTANT SAFETY INFORMATION section at the beginning of this document including all text under subheadings therein before set up or use of this product.

- Empty all Drawers. 1.
- Close all Drawers and lock them. 2.
- 3. If stacked on Bottom Cabinet, to prevent tipping, push/pull using supplied handle on Bottom Cabinet only.
- 4. If using separately from Bottom Cabinet, get an assistant to help move the Chest.
- Place only on a flat, level, hard and smooth surface 5. capable of safely supporting a fully loaded Chest.
- 6. Unlock Drawers and fill Chest evenly, from bottom to top. Do not exceed weight capacities.

SAFETY



Maintenance and Servicing



Procedures not specifically explained in this manual must be performed only by a qualified technician.

AWARNING

TO PREVENT SERIOUS INJURY FROM TOOL FAILURE: Do not use damaged equipment. If any part becomes damaged, have the problem corrected before further use.

- 1. **PERIODICALLY,** inspect the general condition of the Chest. Check for:
 - loose hardware,
 - misalignment or binding of moving parts,
 - · cracked or broken parts,
 - any other condition that may affect its safe operation.

- 2. Wipe external surfaces of the Chest with clean cloth.
- 3. Lubricate Drawer Slides as needed.

SAFETY

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS DOCUMENT AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

Record Serial Number Here:_

Note: If product has no serial number, record month and year of purchase instead.

Note: Some parts are listed and shown for illustration purposes only, and are not available individually as replacement parts. Parts may not be interchangeable.

Specify UPC number when ordering:


Red: Item 58712, UPC 193175486356 Black: Item 70386, UPC 193175510358 Blue: Item 70387, UPC 193175510341 Gray: Item 70388, UPC 193175510563

Parts Lists and Diagrams

Parts List

Part	Description	Qty
1	Drawer Trim 1	4
2	Drawer Latch 1	4
3	Trim Screw, M5 x 6	20
4	Drawer Trim 2	4
5	Drawer Latch 2	4
6	Drawer Mat 1	4
7	Drawer Mat 2	4
8	Top Tray Mat	1
9	Drawer Slide	10
10	Gas Strut	2
11	Lock	1

Part	Description	Qty
12	Кеу	4
13	Lock Link	1
14	Lock Lever	1
15	Grommet Cover	2
16	Grommet	1
17	Grommet Bolt, M6 x 20	1
18	Grommet Nut, M6	1
A	Drawer, long	3
В	Drawer, short	3
С	Drawer, long bottom	1
D	Drawer, short bottom	1

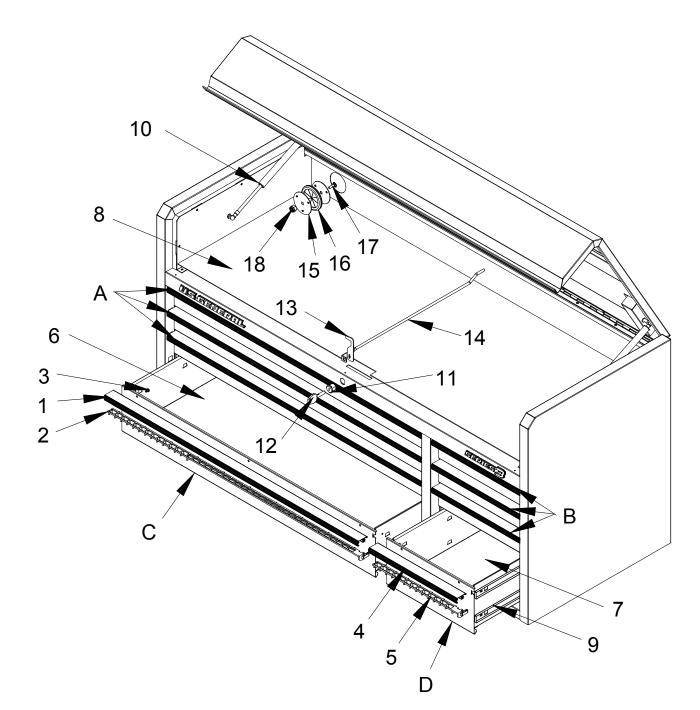

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.



26677 Agoura Road • Calabasas, CA 91302 • 1-888-866-5797