

Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual near the assembly diagram (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

18i

AMESTM

I N S T R U M E N T S

64623

DIGITAL VIDEO INSPECTION CAMERA



Visit our website at: <http://www.harborfreight.com>
Email our technical support at: productsupport@harborfreight.com

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-888-866-5797 as soon as possible.

Copyright© 2018 by Harbor Freight Tools®. All rights reserved.

No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

⚠WARNING

Read this material before using this product. Failure to do so can result in serious injury. **SAVE THIS MANUAL.**

Important Safety Information

Work Area Safety

1. Keep your work area clean and well lit. Cluttered benches and dark areas may cause accidents.
2. Operate the Unit in a well-ventilated work area.
3. Do not operate the Unit in explosive atmospheres, such as in the presence of flammable liquids, gases, or heavy dust.
4. Keep a fire extinguisher suitable for gasoline/chemical/electrical fires nearby.
5. Keep bystanders, children and visitors away while operating the Unit.
6. This product is not a toy. Do not allow children to play with or near this .
7. Use as intended only.
8. Inspect before every use; do not use if parts are loose or damaged.
9. Maintain product labels and nameplates. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.

Electrical Safety

1. **Before inspecting walls, shut off the circuit breakers to the whole house.**
2. **Before inspecting pipes that may contain an electric charge, have them checked by a qualified electrician.**
3. **Before inspecting an engine, turn off the automobile.**
4. Do not use the Unit while standing in water.
5. Avoid body contact with grounded surfaces such as pipes, radiators, ranges and refrigerators.
6. Do not expose the Handheld Display Unit to rain or wet conditions. Water entering the Display Unit increases the risk of electric shock.
7. Do not place the Imager Head and Cable into any place that may contain a live electric charge or moving parts, which increases the risk of electric shock.
8. Make sure your hands are dry before operating the Unit.

Scope Safety

1. **The Handheld Display Unit is not waterproof.** The Imager Head and Cable are rated to IP67. **See “Specifications” on page 4.**
2. Do not use the Unit if condensation forms in the Imager Head. Let condensation evaporate before use.
3. Do not submerge the Imager Head and Cable into corrosive substances, such as drain cleaner.
4. Do not get gasoline or oil on the Imager Head and Cable.
5. Do not use excessive force to insert or withdraw the Imager Head and Cable.
6. Do not use the Unit near moving machinery.
7. Do not place the Unit on any unstable cart or surface.
8. Handle the Unit with care. If the Unit is dropped, check for breakage and any other conditions that may affect its operation.
9. Store the Unit, cables and accessories in a locked area out of the reach of children.

Personal Safety

1. Wear ANSI-approved safety goggles during use.
2. Do not wear loose clothing or jewelry. Keep your hair, clothing, and gloves away from moving parts. Loose clothes, jewelry, or long hair can be caught in moving parts.
3. Do not use the Unit while tired or under the influence of drugs, alcohol, or medications. A moment of interruption can result in serious personal injury.
4. Do not over-reach. Keep proper footing and balance at all times. Proper footing and balance enables better control of the Unit in unexpected situations.
5. Do not use the Unit for personal inspection or medical use in any way. This is not a medical Unit.
6. People with pacemakers should consult their physician(s) before use. Electromagnetic fields in close proximity to heart pacemaker could cause pacemaker interference or pacemaker failure.
7. The warnings, precautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

Service

There are no user serviceable parts. Unit service must be performed only by qualified repair personnel.

Specifications

Battery Type	4 AA (Included)
Display Screen	320 x 240
Handheld Display Unit Operating Temperature	32°F to 113°F
Imager Head	9mm (0.35")
Imager Head Lights	4 x Adjustable LED
Image Sensor	1/6" VGA CMOS
Imager Head	IP67
Imager Head and Cable Operating Temperature	14°F to 176°F





This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.




Setup- Before Use:



Read the ENTIRE IMPORTANT SAFETY INFORMATION section at the beginning of this document including all text under subheadings therein before set up or use.

Components

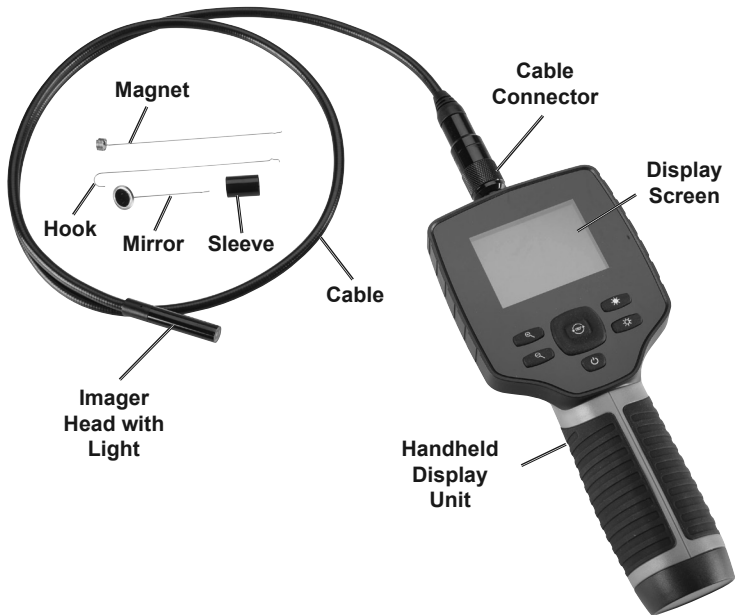

Installing/Replacing Batteries

CAUTION! Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Position batteries in proper polarity. Do not use swollen or leaking batteries.

The battery compartment is located on the bottom of the handle.

1. Remove screw, then remove Battery Cover.
2. Insert batteries.
3. Replace Battery Cover, then replace screw.

Tool Set Up

⚠WARNING

TO PREVENT SERIOUS INJURY FROM ELECTRICAL SHOCK:


Make sure that the Unit is OFF before performing any procedure in this section.

1. Connecting Cable:

- a. Carefully push Cable's key into Cable Connector's slot.
- b. Turn Cable Connector *counterclockwise* until the Cable and Cable Connector are securely attached.


2. Disconnecting Cable:

- a. Turn Cable Connector *clockwise* until the Cable and Cable Connector are detached.
- b. Remove Cable.

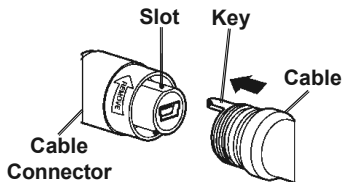

3. Attaching Accessories:

- a. Hold the accessory against the Imager Head, placing the Hook in the hole.
- b. Match the slot on the Sleeve to the accessory, then slide the Sleeve down the Imager Head until it covers the Hook.

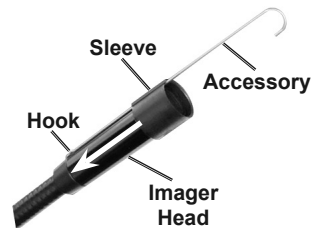

Operating Instructions



Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this document including all text under subheadings therein before set up or use of this product.

WARNING

TO PREVENT SERIOUS INJURY AND DEATH:

Always wear eye protection. Wear ANSI-approved safety goggles during use.

Before inspecting walls, shut off the circuit breakers to the whole house.

Before inspecting pipes that may contain an electric charge, have them checked by a qualified electrician.

Before inspecting an engine, turn off the automobile.

Handheld Display Unit Controls



General Operating Instructions

Live Viewing

View on Display Screen

1. Press the **Power** button to turn the Display on.
2. **Adjusting Light:** Press **Dim Light** button to dim and turn off light. Press **Brighten Light** button to turn on light and increase brightness.
3. **Zooming:** Press **Zoom In** button to zoom in. Press **Zoom Out** button to zoom out.
4. **Flip Image:** Press the **Flip Image** button to flip image horizontally and vertically.
5. When finished, press the **Power** button to turn the Unit off, then clean and store according to “**Inspection and Maintenance**” on page 10.



Inspection and Maintenance



Procedures not specifically explained in this manual must be performed only by a qualified technician.

! WARNING

TO PREVENT SERIOUS INJURY FROM ELECTRICAL SHOCK:

Make sure that the Unit is OFF before performing any procedure in this section.

TO PREVENT SERIOUS INJURY FROM TOOL FAILURE:

Do not use damaged equipment. If abnormal noise or vibration occurs, have the problem corrected before further use.

Inspection

- BEFORE EACH USE**, inspect the general condition of the tool. Check for:
 - condensation in Imager Head,
 - cracked or damaged Cable,
 - cracked or broken parts, and
 - any other condition that may affect its safe operation.

Cleaning and Storage

- AFTER USE**, use a mild detergent on a clean cloth to remove any oil, grease or dirt from the handheld unit, especially on the buttons, being careful to not put excessive pressure on the display screen.
- Store the handheld unit, cable and accessories in a locked area out of the reach of children.

Troubleshooting

Problem	Possible Causes	Likely Solutions
Display is on, but does not show image.	1. Cable connection loose. 2. Imager Head is dirty.	1. Check that Cable is connected. 2. Clean Imager Head.
Light is dim at maximum brightness.	Low Batteries.	Replace Batteries.
Display won't turn on or turns itself off.	Low Batteries.	Replace Batteries



Follow all safety precautions whenever diagnosing or servicing the tool. Disconnect power supply before service.

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST IN THIS DOCUMENT AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

Parts List

Part	Description	Qty
1	Handheld Display Unit	1
2	Cable with Imager Head	1
3	45° Mirror Accessory	1
4	Hook Accessory	1
5	Magnet Accessory	1

Record Serial Number Here:

Note: If product has no serial number, record month and year of purchase instead.

Note: Some parts are listed and shown for illustration purposes only, and are not available individually as replacement parts.

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

